


Case and Associated Parts

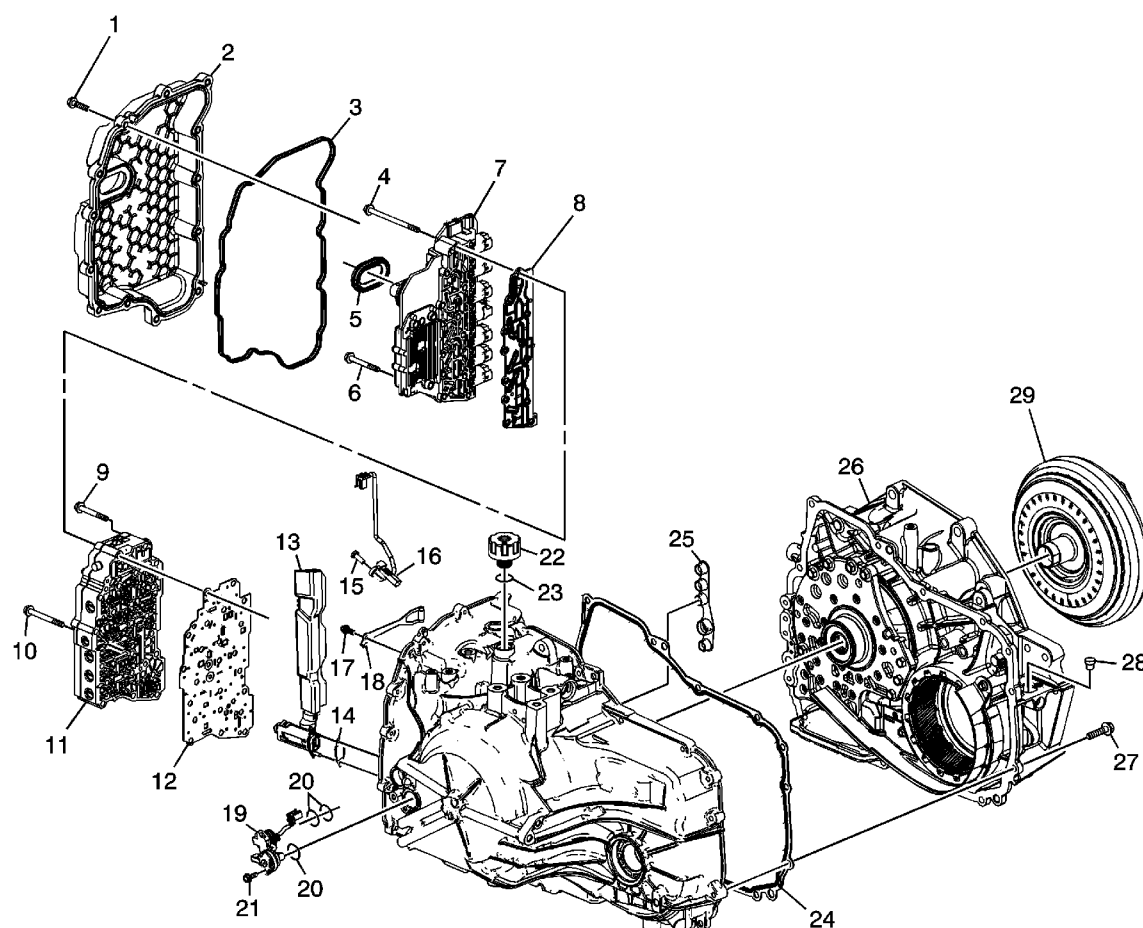


- (1) Control Valve Body Cover Bolt
- (2) Control Valve Body Cover Assembly
- (3) Control Valve Body Cover Gasket
- (4) Control Valve Body Bolt
- (5) Control Valve Body Cover Hole Seal
- (6) Control Solenoid Valve Heat Sink Bolt
- (7) Control Solenoid (w/Body and TCM) Valve Assembly
- (8) Control Valve Body Filter Plate Assembly
- (9) Control Valve Body Bolt
- (10) Control Valve Body Bolt
- (11) Control Valve Body Assembly

© 2010 General Motors Corporation. All rights reserved.


- (12) Control Valve Body Spacer Plate Assembly
- (13) A/Trans Fluid Level Control Valve
- (14) A/Trans Fluid Level Control Valve Gasket
- (15) A/Trans Output Speed Sensor Bolt
- (16) A/Trans Output Speed Sensor Assembly
- (17) Manual Shaft Detent Spring Bolt
- (18) Manual Shaft Detent Lever Spring Assembly
- (19) A/Trans Input Speed Sensor Assembly
- (20) A/Trans Input Speed Sensor Assembly O-Ring Seal
- (21) A/Trans Input Speed Sensor Bolt
- (22) Fill Cap
- (23) Fill Cap Seal
- (24) Torque Converter Housing Gasket
- (25) A/Trans Fluid Pump Seal Assembly
- (26) Torque Converter with Fluid Pump Housing Assembly
- (27) Torque Converter and Differential Housing Bolt
- (28) A/Trans Fluid Fill Tube Plug Assembly
- (29) Torque Converter Assembly

Transmission Case Assembly

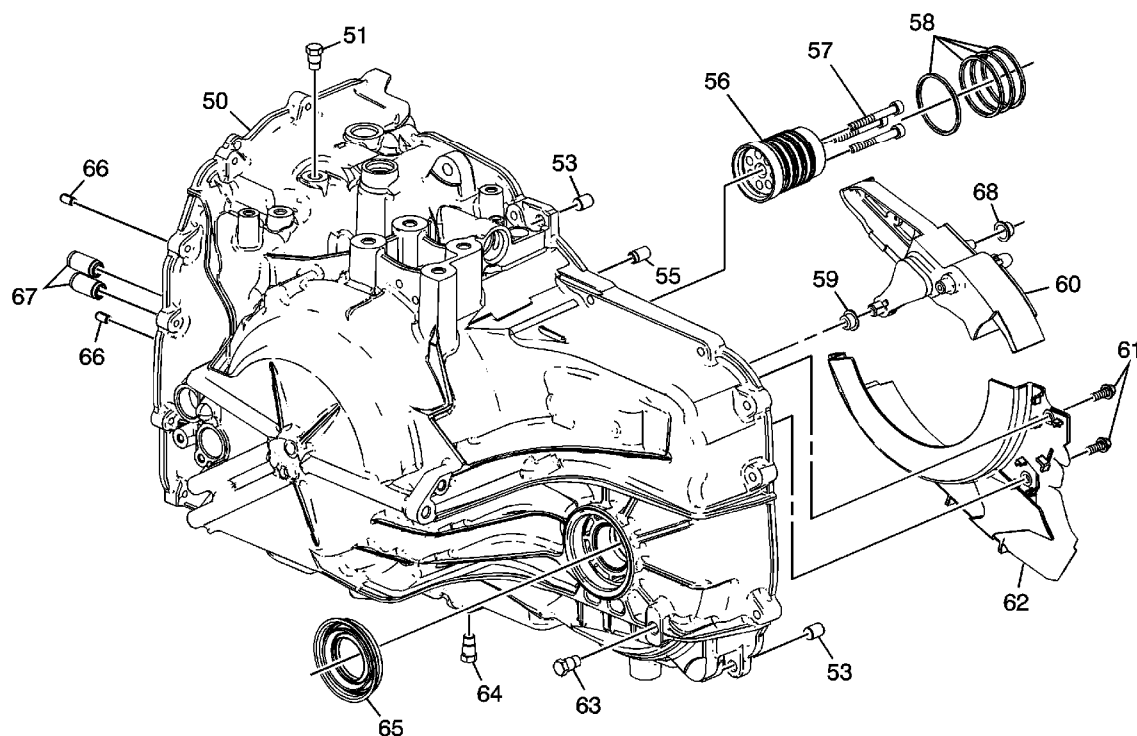


- (50) A/Trans Case Assembly
- (51) A/Trans Fluid Pressure Test Hole Plug
- (53) Transmission Case Cover Locator Pin
- (55) A/Trans Fluid Check Ball
- (56) Input Shaft Support
- (57) Input Shaft Support Bolt
- (58) 3-5-Reverse and 4-5-6 Clutch Fluid Seal Ring
- (59) Drive Link Lube Fluid Seal
- (60) Drive Link Lube Scoop
- (61) Front Differential Carrier Baffle Bolt
- (62) Front Differential Carrier Baffle
- (63) Oil Level Plug
- (64) Drain Plug
- (65) Drive Shaft Oil Seal Assembly
- (66) Control Valve Body Locator Pin
- (67) 1-2-3-4 and Low Reverse Clutch Fluid Passage Seal
- (68) Drive Link Lube Fluid Seal

Torque Converter and Fluid Pump Housing Assembly

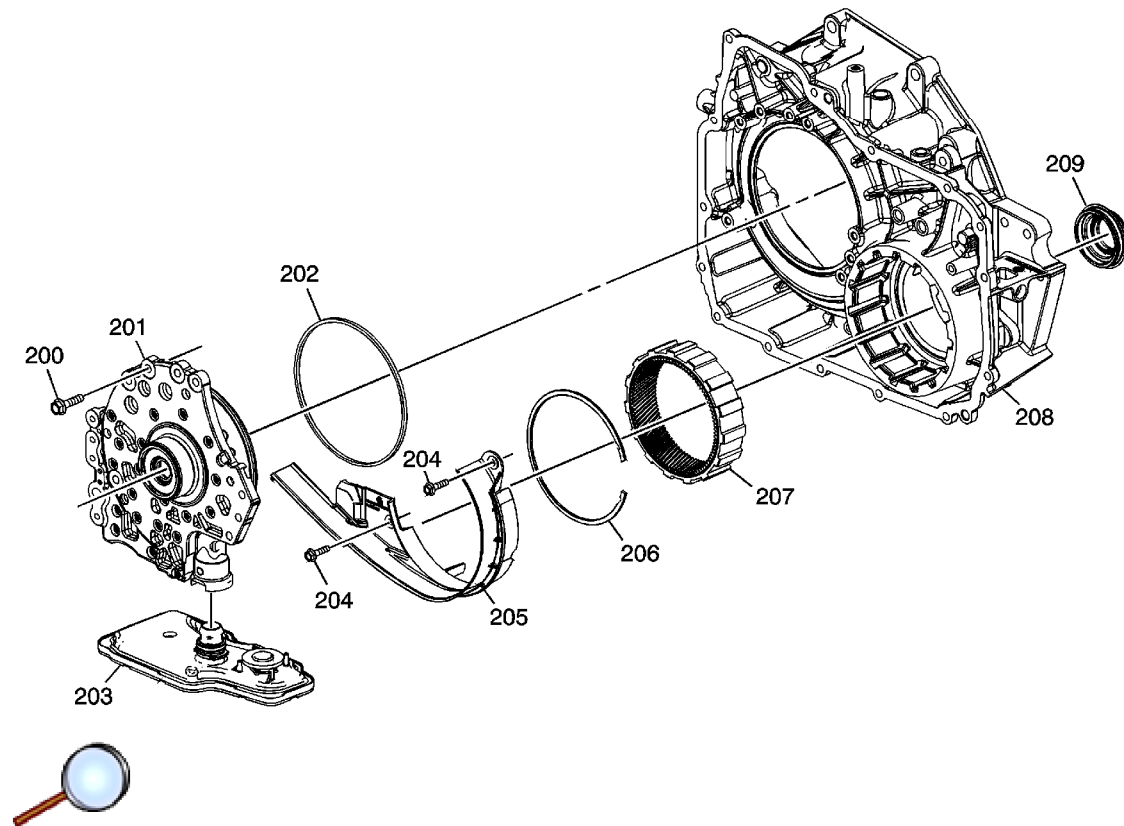


- (200) A/Trans Fluid Pump Bolt
- (201) A/Trans Fluid Pump Assembly
- (202) Torque Converter and Differential Housing Seal
- (203) A/Trans Fluid Filter Assembly
- (204) Front Differential Carrier Baffle Bolt
- (205) Front Differential Carrier Baffle
- (206) Front Differential Ring Gear Retainer
- (207) Front Differential Ring Gear
- (208) Torque Converter and Differential Housing
- (209) Front Wheel Drive Shaft Oil Seal Assembly

Drive Link Assembly

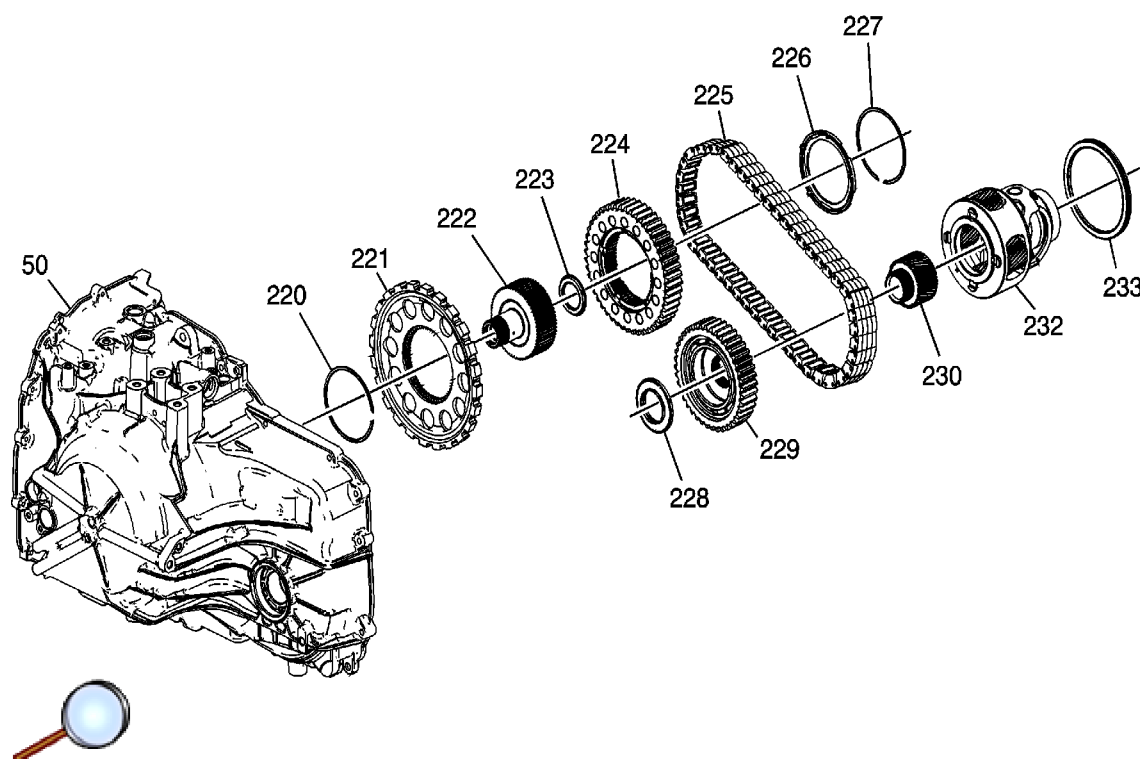

- (50) A/Trans Case
- (220) Park Gear Retainer Ring
- (221) Park Gear
- (222) Output Carrier Transfer Drive Gear Hub
- (223) Drive Sprocket Bearing Assembly
- (224) Drive Sprocket
- (225) Drive Link Assembly
- (226) Drive Sprocket Thrust Washer
- (227) Drive Sprocket Retainer Ring
- (228) Driven Sprocket Bearing Assembly
- (229) Driven Sprocket
- (230) Final Drive Sun Gear
- (232) Differential Carrier Assembly
- (233) Front Differential Carrier Bearing Assembly

Oil Pump Assembly

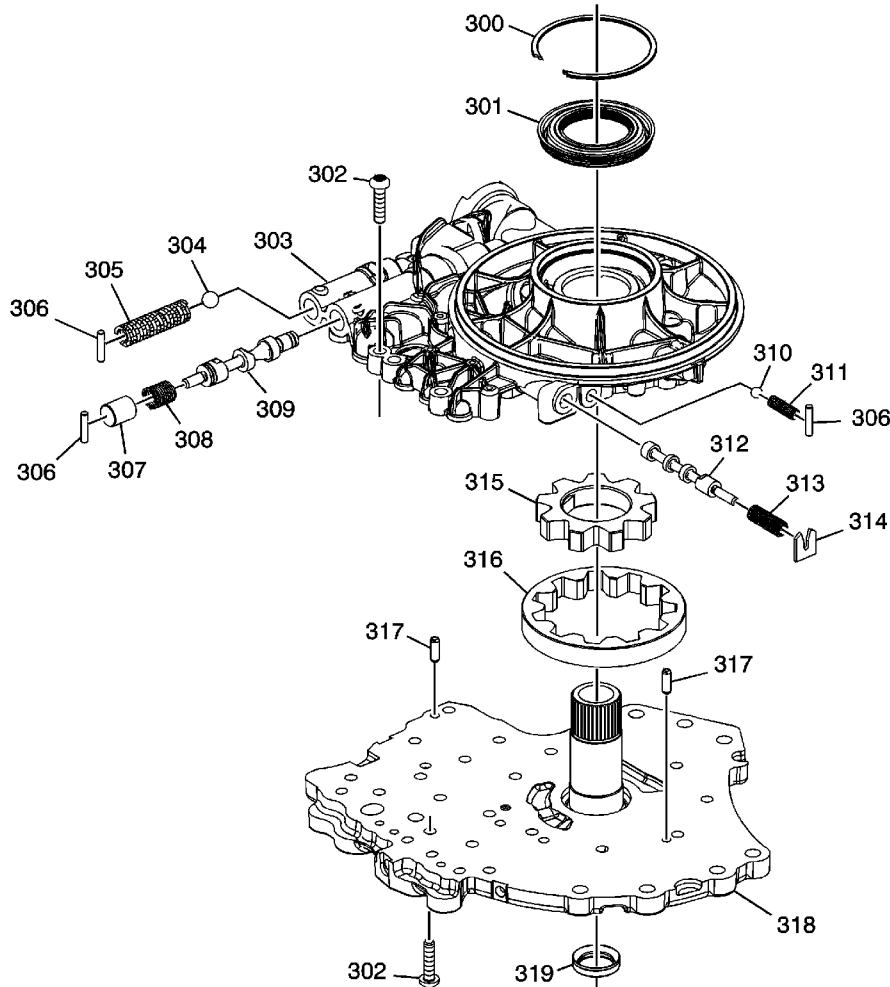


- (300) Torque Converter Fluid Seal Retainer
- (301) Torque Converter Fluid Seal Assembly
- (302) A/Trans Fluid Pump Cover Bolt
- (303) A/Trans Fluid Pump Body
- (304) Pump Blowoff Ball Valve
- (305) Pump Blowoff Valve Spring
- (306) Pressure Regulator Valve Bore Plug Retainer
- (307) Pressure Regulator Valve Bore Plug
- (308) Pressure Regulator Valve Spring
- (309) Pressure Regulator Valve
- (310) Torque Converter Clutch Blowoff Ball Valve

© 2010 General Motors Corporation. All rights reserved.


- (311) Torque Converter Clutch Blowoff Ball Valve Spring
- (312) Torque Converter Clutch Control Valve
- (313) Torque Converter Clutch Control Valve Spring
- (314) Torque Converter Clutch Control Valve Spring Retainer
- (315) A/Trans Fluid Pump Drive Gear
- (316) A/Trans Fluid Pump Driven Gear
- (317) Cover to Body Locating Pin
- (318) A/Trans Fluid Pump Cover Assembly
- (319) Torque Converter Fluid Seal Assembly

Control Valve Body Assembly (1 of 2)

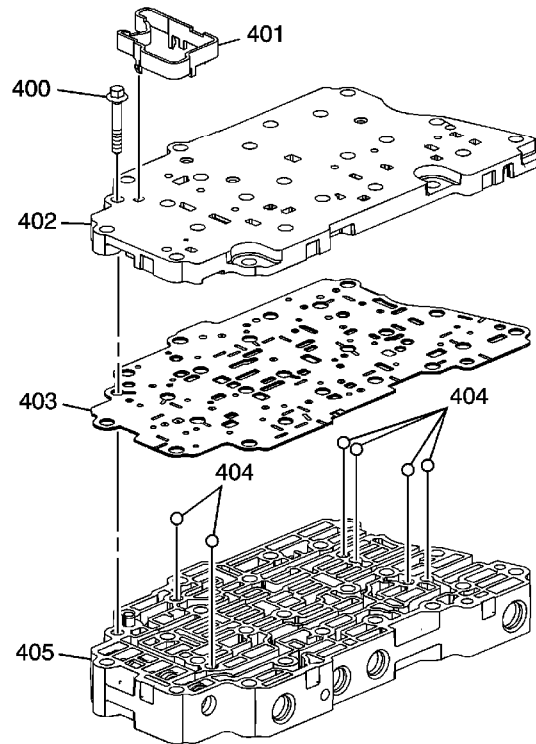

- (400) Control Valve Body Bolt
- (401) Control Solenoid Valve Support
- (402) Valve Channel Plate
- (403) Channel Plate to Valve Body Spacer Plate Assembly
- (404) Control Valve Body Ball Check Valve
- (405) Control Valve Body Assembly

Control Valve Body Assembly (2 of 2)

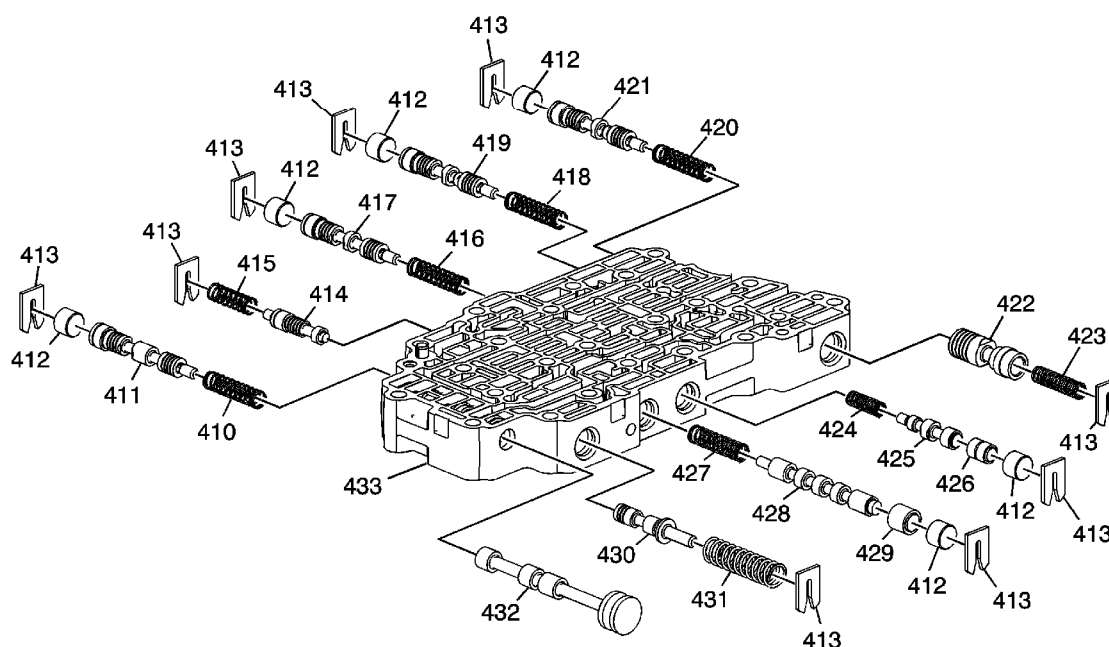


- (410) Reverse and 4-5-6 Clutch Regulator Valve Spring
- (411) Reverse and 4-5-6 Clutch Regulator Valve
- (412) Clutch Valve Bore Plug
- (413) Valve Spring Retainer
- (414) 1-2-3-4 Clutch Boost Valve
- (415) 1-2-3-4 Clutch Boost Valve Spring
- (416) 1-2-3-4 Clutch Regulator Valve Spring
- (417) 1-2-3-4 Clutch Regulator Valve
- (418) 2-6 Clutch Regulator Valve Spring
- (419) 2-6 Clutch Regulator Valve
- (420) 3-5-Reverse Clutch Regulator Valve Spring
- (421) 3-5-Reverse Clutch Regulator Valve
- (422) Clutch Piston Dam Feed Regulator Valve
- (423) Clutch Piston Dam Feed Regulator Valve Spring
- (424) Torque Converter Clutch Regulator Apply Valve Spring
- (425) Torque Converter Clutch Regulator Apply Valve
- (426) Torque Converter Clutch Regulator Apply Shuttle Valve
- (427) Clutch Select Valve Spring

© 2010 General Motors Corporation. All rights reserved.


- (428) Clutch Select Valve
- (429) Default Override Shuttle Valve
- (430) Actuator Feed Limit Valve
- (431) Actuator Feed Limit Valve Spring
- (432) Manual Valve
- (433) Control Valve Body Assembly

3-5 Reverse Clutch Assembly

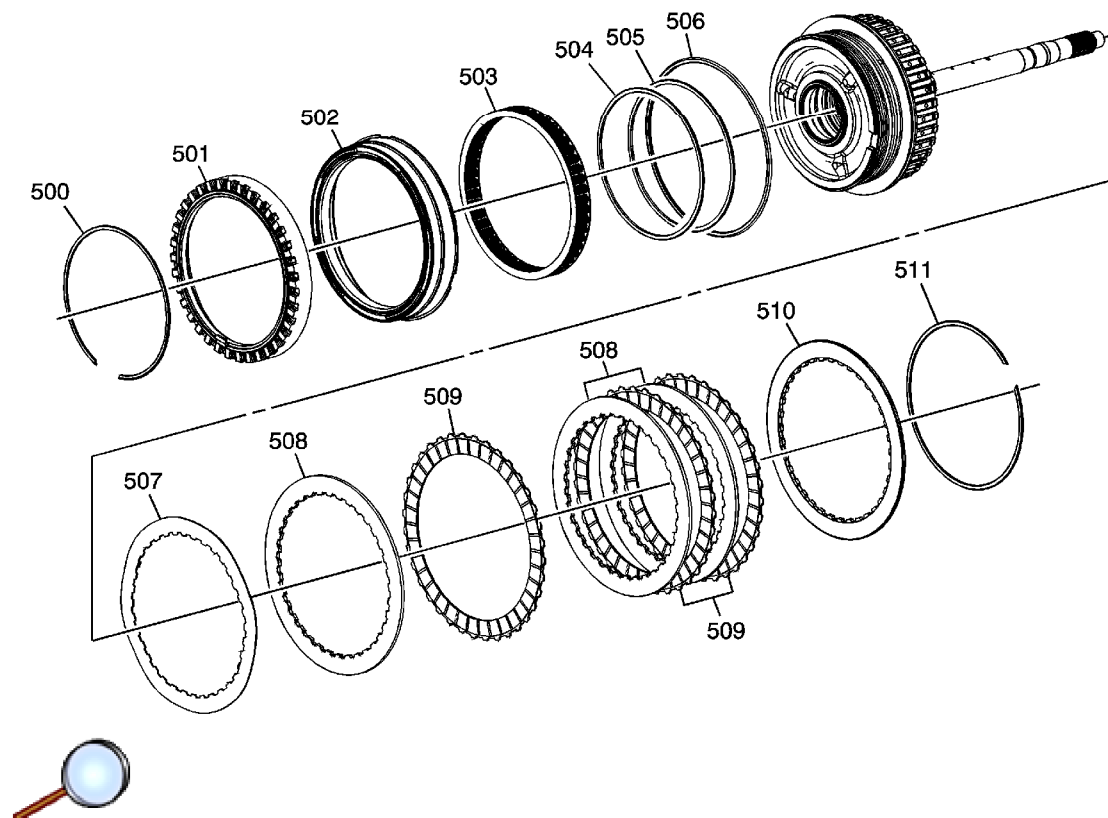

- (500) A/Trans Input Shaft Speed Sensor Reluctor Wheel Retainer Ring
- (501) A/Trans Input Shaft Speed Sensor Reluctor Wheel
- (502) 3-5-Reverse Clutch Piston
- (503) 3-5-Reverse Clutch Piston Return Spring Assembly
- (504) 3-5-Reverse Clutch Piston Inner Seal
- (505) 3-5-Reverse Clutch Piston Inner Seal
- (506) 3-5-Reverse Clutch Piston Dam Seal
- (507) 3-5-Reverse Clutch Apply Plate
- (508) 3-5-Reverse Clutch Plate
- (509) 3-5-Reverse Clutch (w/Friction Material) Plate Assembly
- (510) 3-5-Reverse Clutch Backing Plate
- (511) 3-5-Reverse Clutch Backing Plate Retainer Ring


4-5-6 Clutch Assembly

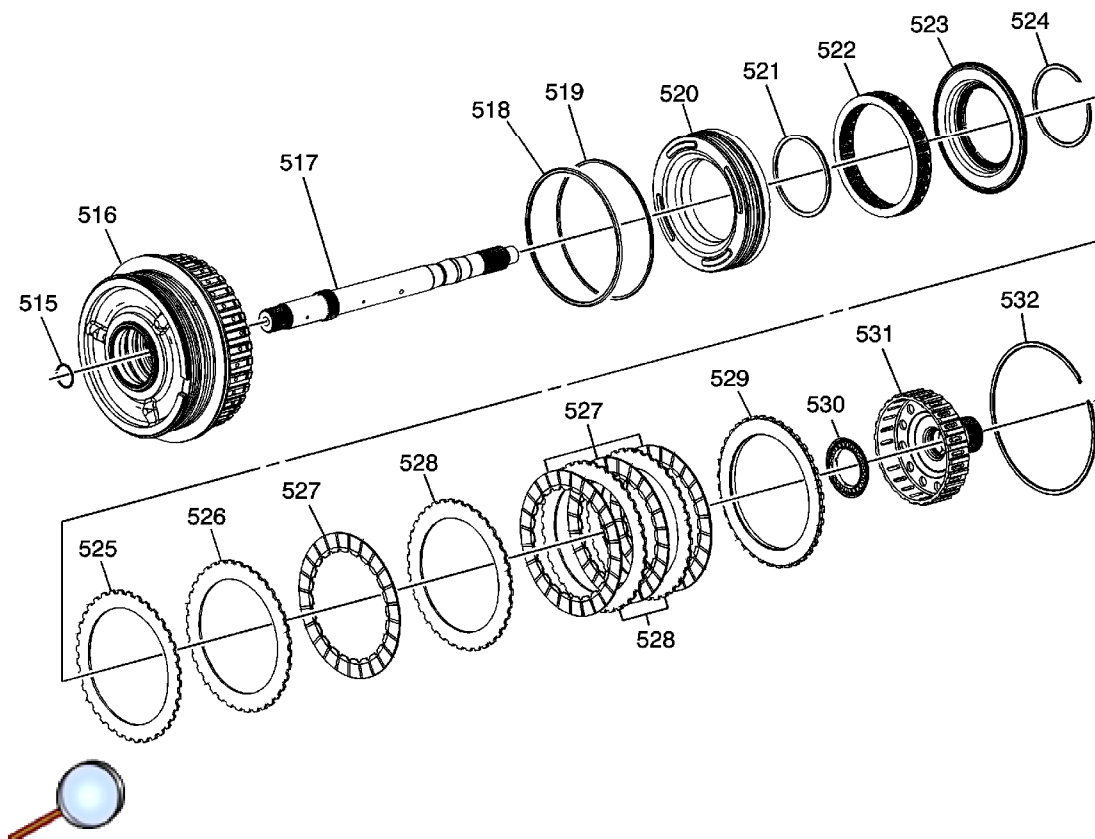

- (515) Turbine Shaft Retainer Ring
- (516) 3-5-Reverse and 4-5-6 Clutch Housing Assembly
- (517) Turbine Shaft
- (518) 4-5-6 Clutch Piston Outer Seal
- (519) 4-5-6 Clutch Piston Outer Seal
- (520) 4-5-6 Clutch Piston
- (521) 4-5-6 Clutch Piston Inner Seal
- (522) 4-5-6 Clutch Piston Return Spring Assembly
- (523) 4-5-6 Clutch Piston Fluid Dam Assembly
- (524) 4-5-6 Clutch Piston Fluid Dam Retainer Ring
- (525) 4-5-6 Clutch (Waved) Plate
- (526) 4-5-6 Clutch Apply Plate
- (527) 4-5-6 Clutch (w/Friction Material) Plate Assembly
- (528) 4-5-6 Clutch Plate
- (529) 4-5-6 Clutch Backing Plate
- (530) Reaction Carrier Hub Thrust Bearing Assembly
- (531) Reaction Carrier Hub Assembly
- (532) 4-5-6 Clutch Backing Plate Retainer Ring

© 2010 General Motors Corporation. All rights reserved.

2-6, Low and Reverse and 1-2-3-4 Clutch Plate Assemblies

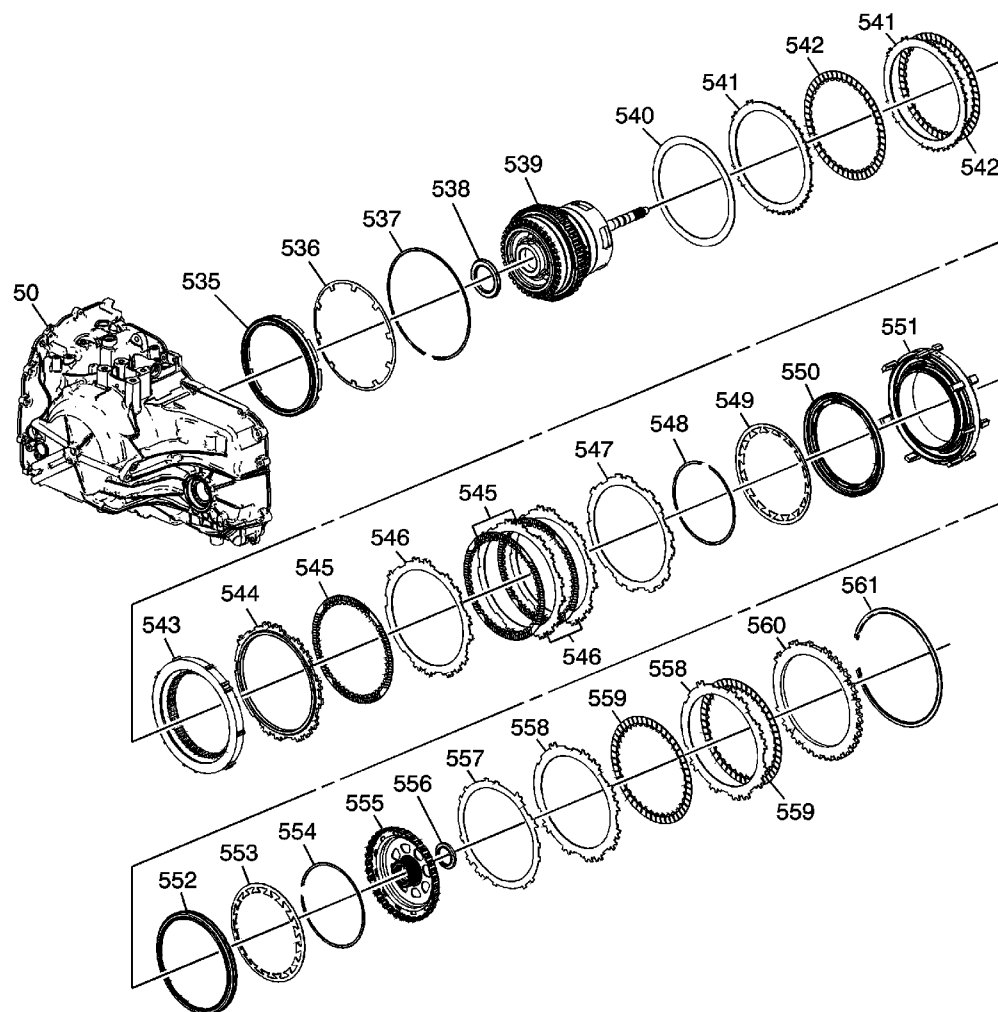


- (50) A/Trans Case
- (535) 2-6 Clutch Piston Assembly
- (536) 2-6 Clutch Spring
- (537) 2-6 Clutch Spring Retainer Ring
- (538) 3-5-Reverse and 4-5-6 Clutch Housing Thrust Bearing
- (539) 3-5-Reverse and 4-5-6 Clutch Housing Assembly
- (540) 2-6 Clutch Apply (Waved) Plate
- (541) 2-6 Clutch Plate
- (542) 2-6 Clutch (w/Friction Material) Plate Assembly
- (543) Low and Reverse Clutch Assembly
- (544) Low and Reverse Clutch Backing Plate

© 2010 General Motors Corporation. All rights reserved.


- (545) Low and Reverse Clutch (w/Friction Material) Plate Assembly
- (546) Low and Reverse Clutch Plate
- (547) Low and Reverse Clutch Apply (Waved) Plate
- (548) Low and Reverse Clutch Spring Retainer
- (549) Low and Reverse Clutch Spring
- (550) Low and Reverse Clutch Piston
- (551) Low and Reverse and 1-2-3-4 Clutch Housing
- (552) 1-2-3-4 Clutch Piston
- (553) 1-2-3-4 Clutch Spring
- (554) 1-2-3-4 Clutch Piston Retainer
- (555) Output Sun Gear Assembly
- (556) Output Sun Thrust Bearing Assembly
- (557) 1-2-3-4 Clutch (Waved) Plate
- (558) 1-2-3-4 Clutch Plate
- (559) 1-2-3-4 Clutch (w/Friction Material) Plate Assembly
- (560) 1-2-3-4 Clutch Backing Plate
- (561) 1-2-3-4 Clutch Backing Plate Retainer Ring

Input, Output and Reaction Gearsets

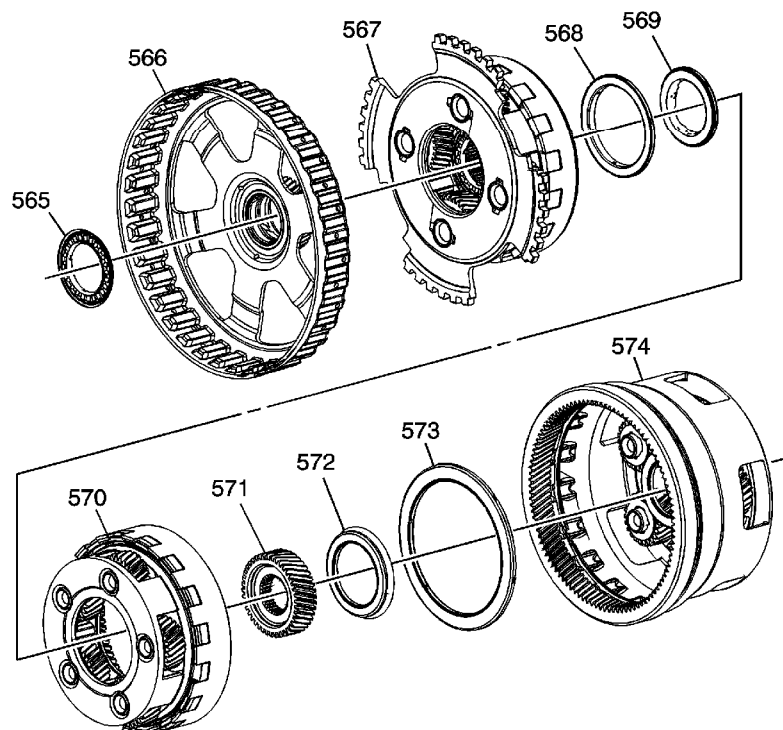

- (565) Reaction Sun Gear Thrust Bearing Assembly
- (566) Reaction Sun Gear Assembly
- (567) Reaction Carrier Assembly
- (568) Input Carrier Thrust Bearing Assembly
- (569) Input Sun Gear Thrust Bearing Assembly
- (570) Input Carrier Assembly
- (571) Input Sun Gear
- (572) Input Sun Gear Thrust Bearing Assembly
- (573) Output Carrier Thrust Bearing Assembly
- (574) Output Carrier Assembly

Front Differential Carrier Assembly

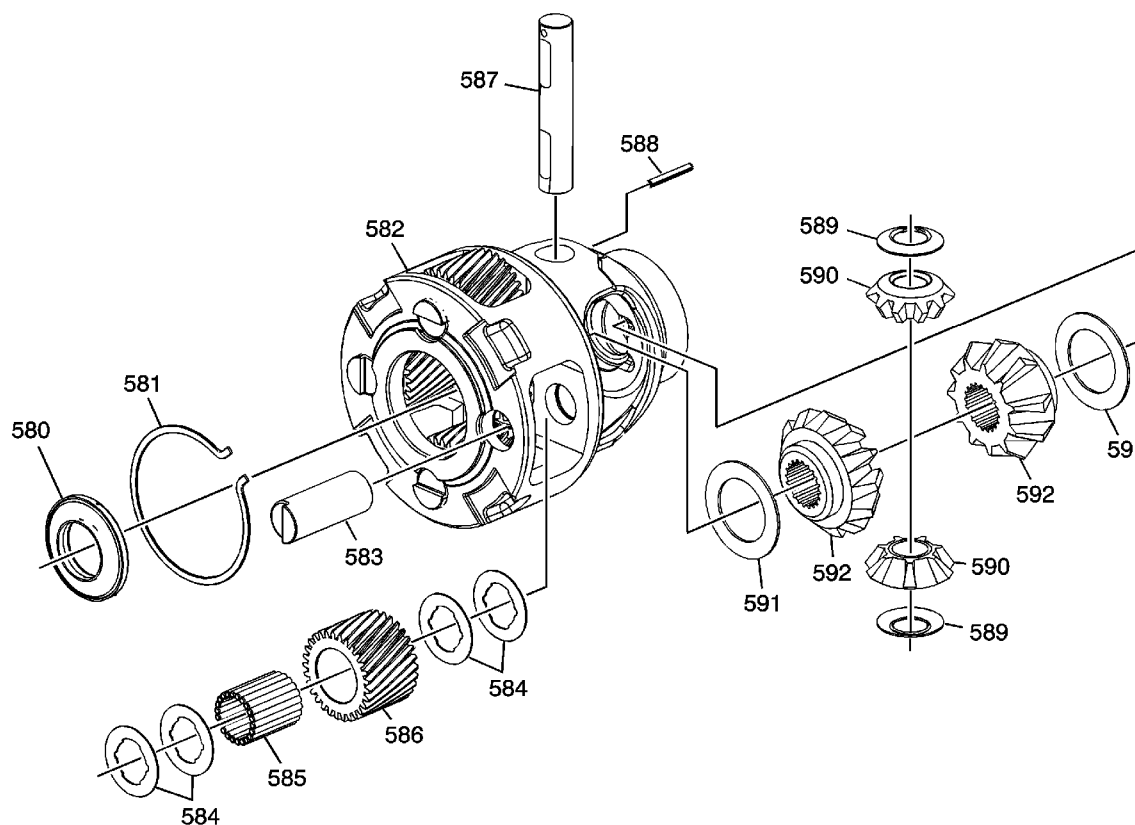


- (580) Differential Sun Gear to Differential Housing Bearing Assembly
- (581) Final Drive Retainer
- (582) Differential Carrier Assembly
- (583) Final Drive Pinion Pin
- (584) Final Drive Inner and Outer Washer
- (585) Final Drive Roller
- (586) Pinion Final Drive Gear
- (587) Front Differential Pinion Gear Shaft
- (588) Front Differential Pinion Gear Shaft Pin
- (589) Front Differential Pinion Gear Thrust Washer
- (590) Front Differential Pinion Gear

© 2010 General Motors Corporation. All rights reserved.

(591) Front Differential Side Gear Thrust Washer

(592) Front Differential Side Gear

Park System Components

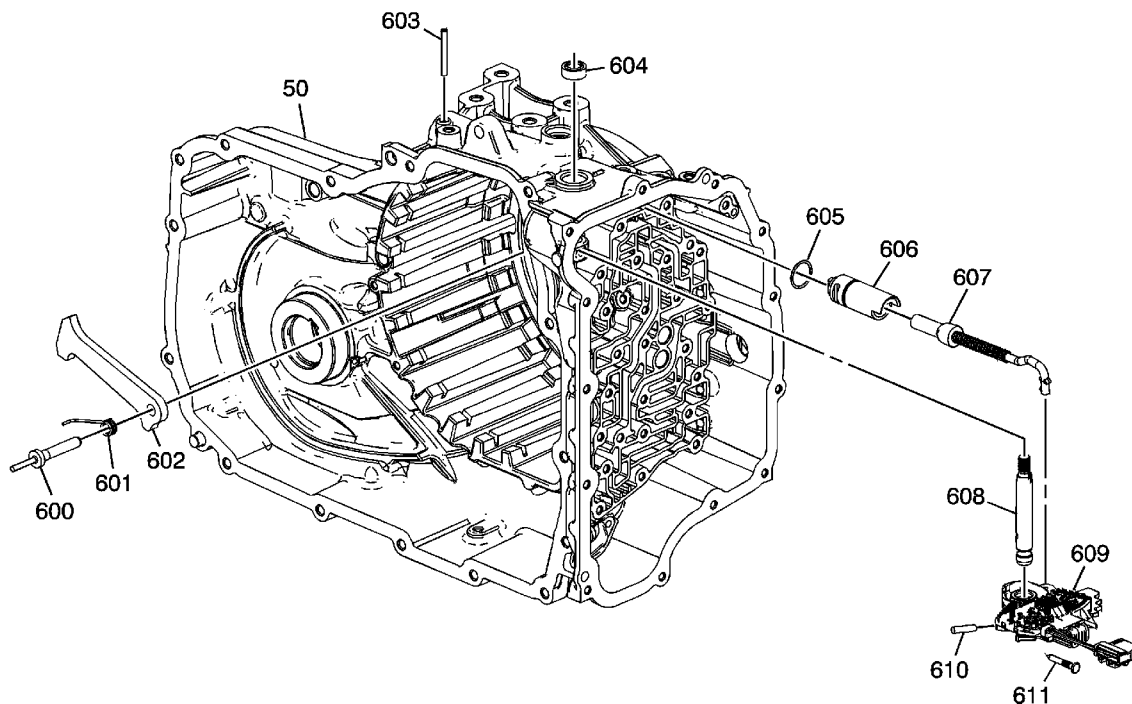

- (50) A/Trans Case
- (600) Park Pawl Shaft
- (601) Park Pawl Spring
- (602) Park Pawl
- (603) Park Pawl Actuator Guide Pin
- (604) Manual Shift Shaft Seal
- (605) Park Pawl Actuator Guide Seal
- (606) Park Pawl Actuator Guide
- (607) Park Pawl Actuator Assembly
- (608) Manual Shift Detent Lever Shaft
- (609) Manual Shift Detent (w/Shaft Position Switch) Lever Assembly
- (610) Manual Shift Detent Lever Pin
- (611) Manual Shift Shaft Pin