


Cylinder Head and Components

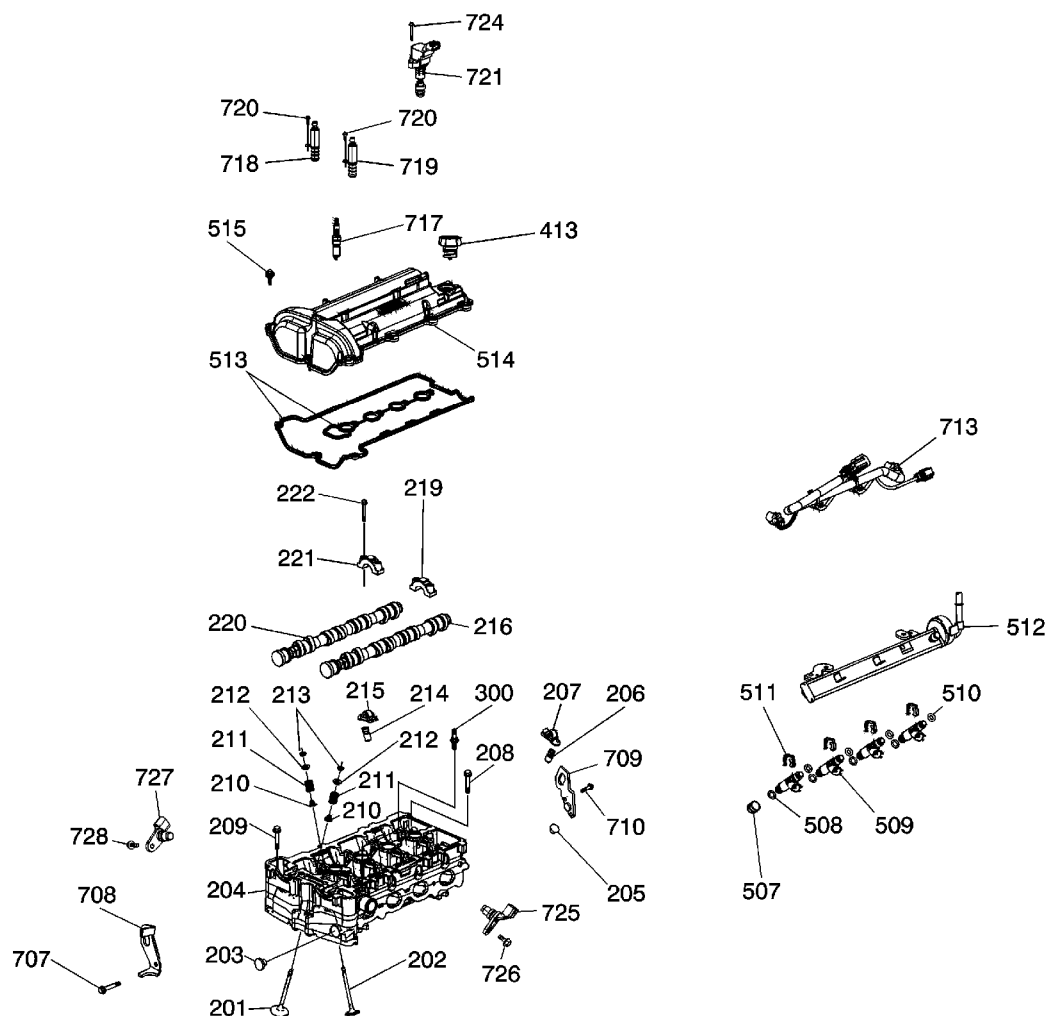


- (201) Exhaust Valve
- (202) Intake Valve
- (203) Timing Chain Guide Bolt Access Hole
- (204) Cylinder Head
- (205) Cylinder Head Gallery Plug
- (206) Hydraulic Lash Adjuster
- (207) Roller Finger Follower
- (208) Cylinder Head Bolt
- (209) Small Cylinder Head Bolt
- (210) Valve Stem Seal
- (211) Valve Spring

© 2010 General Motors Corporation. All rights reserved.


- (212) Valve Spring Retainer
- (213) Valve Keys
- (214) Hydraulic Lash Adjuster
- (215) Roller Finger Follower
- (216) Intake Camshaft
- (219) Camshaft Cap
- (220) Exhaust Camshaft
- (221) Camshaft Cap
- (222) Camshaft Cap Bolt
- (300) Coolant Air Bleed Fitting
- (413) Engine Oil Fill Cap
- (507) Fuel Injector Rotator Cup
- (508) Fuel Injector O-ring
- (509) Fuel Injector
- (510) Fuel Injector O-ring
- (511) Fuel Injector Clip
- (512) Fuel Rail
- (513) Camshaft Cover Gasket
- (514) Camshaft Cover
- (515) Camshaft Cover Bolt
- (707) Front Lift Bracket Bolt
- (708) Front Lift Bracket
- (709) Rear Lift Bracket
- (710) Rear Lift Bracket Bolt
- (713) Fuel Injector Wiring Harness
- (717) Spark Plug
- (718) Camshaft Position Actuator Solenoid Valve - Exhaust
- (719) Camshaft Position Actuator Solenoid Valve - Intake
- (720) Camshaft Position Actuator Solenoid Valve Bolt
- (721) Ignition Coil
- (724) Ignition Coil Bolt
- (725) Camshaft Position Sensor
- (726) Camshaft Position Sensor Bolt
- (727) Camshaft Position Sensor
- (728) Camshaft Position Sensor Bolt

Intake Manifold and Components

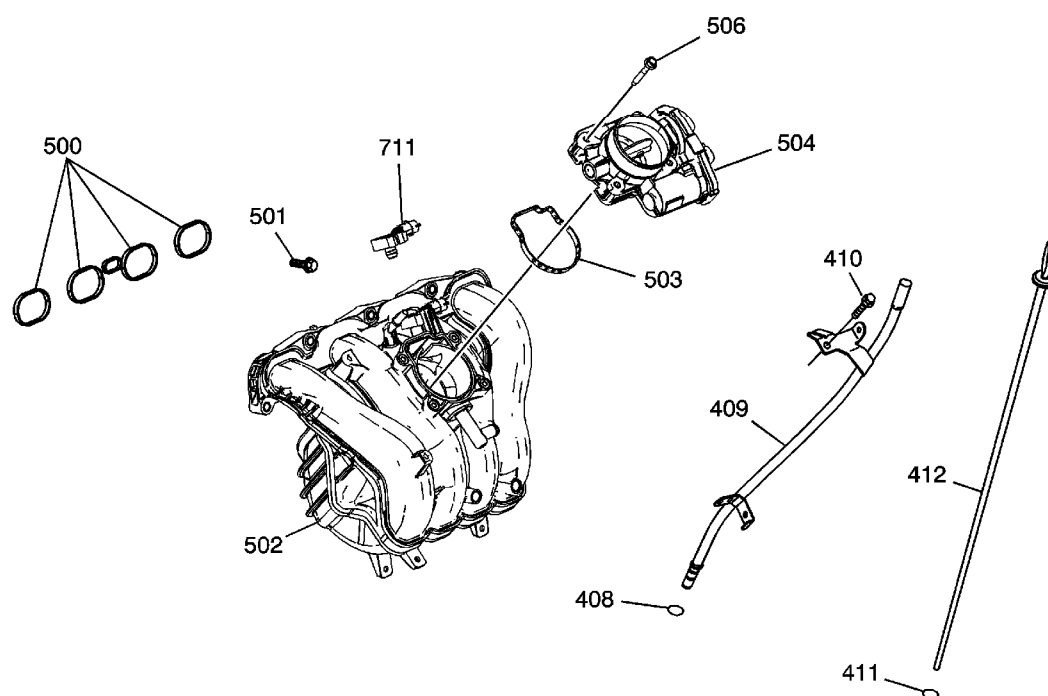


- (408) Oil Indicator Tube O-ring
- (409) Oil Indicator Tube
- (410) Oil Indicator Tube Bolt
- (411) Oil Indicator O-ring
- (412) Oil Indicator
- (500) Intake Manifold Gasket
- (501) Intake Manifold Bolt
- (502) Intake Manifold
- (503) Throttle Body Seal
- (504) Throttle Body
- (506) Throttle Body Bolt
- (711) Map Sensor

Exhaust Manifold and Components

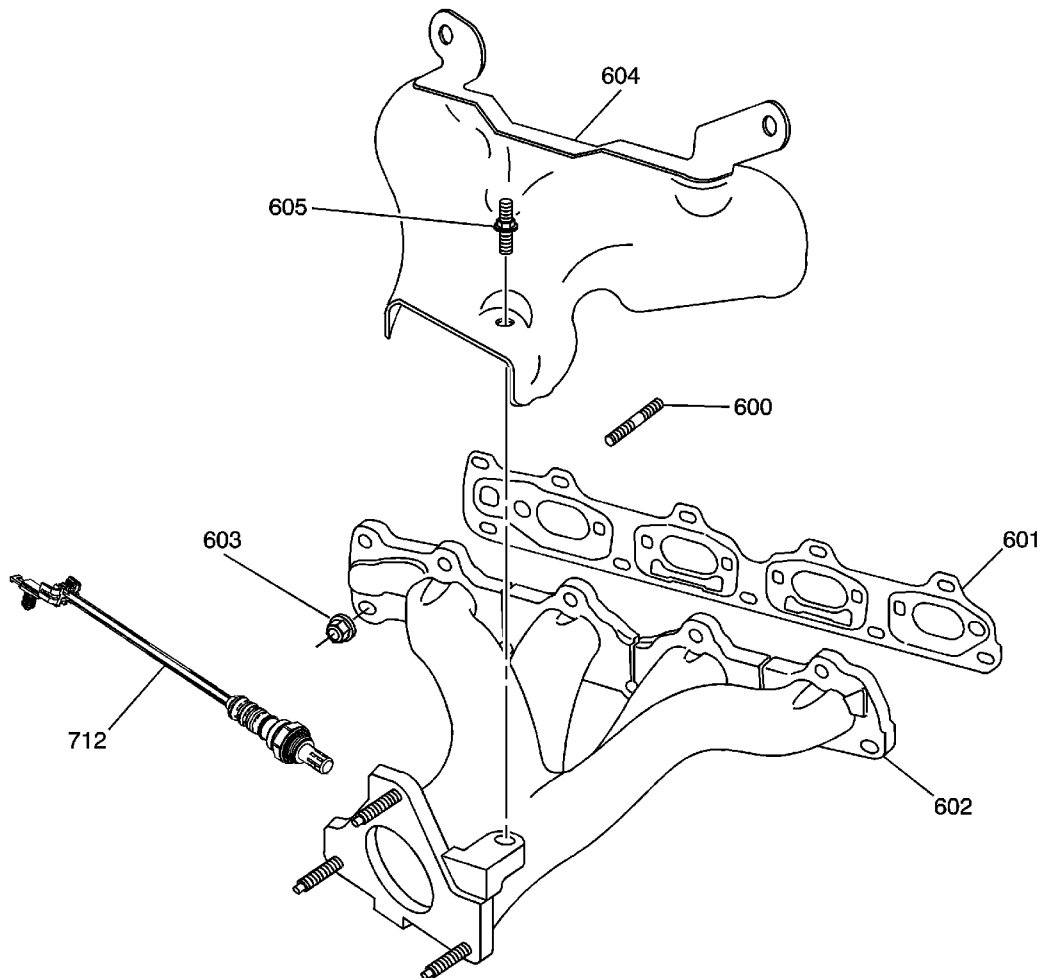

- (600) Exhaust Manifold Stud
- (601) Exhaust Manifold Gasket
- (602) Exhaust Manifold
- (603) Exhaust Manifold Nut
- (604) Exhaust Manifold Heat Shield
- (605) Exhaust Manifold Heat Shield Stud
- (712) Oxygen Sensor

Engine Block and Components

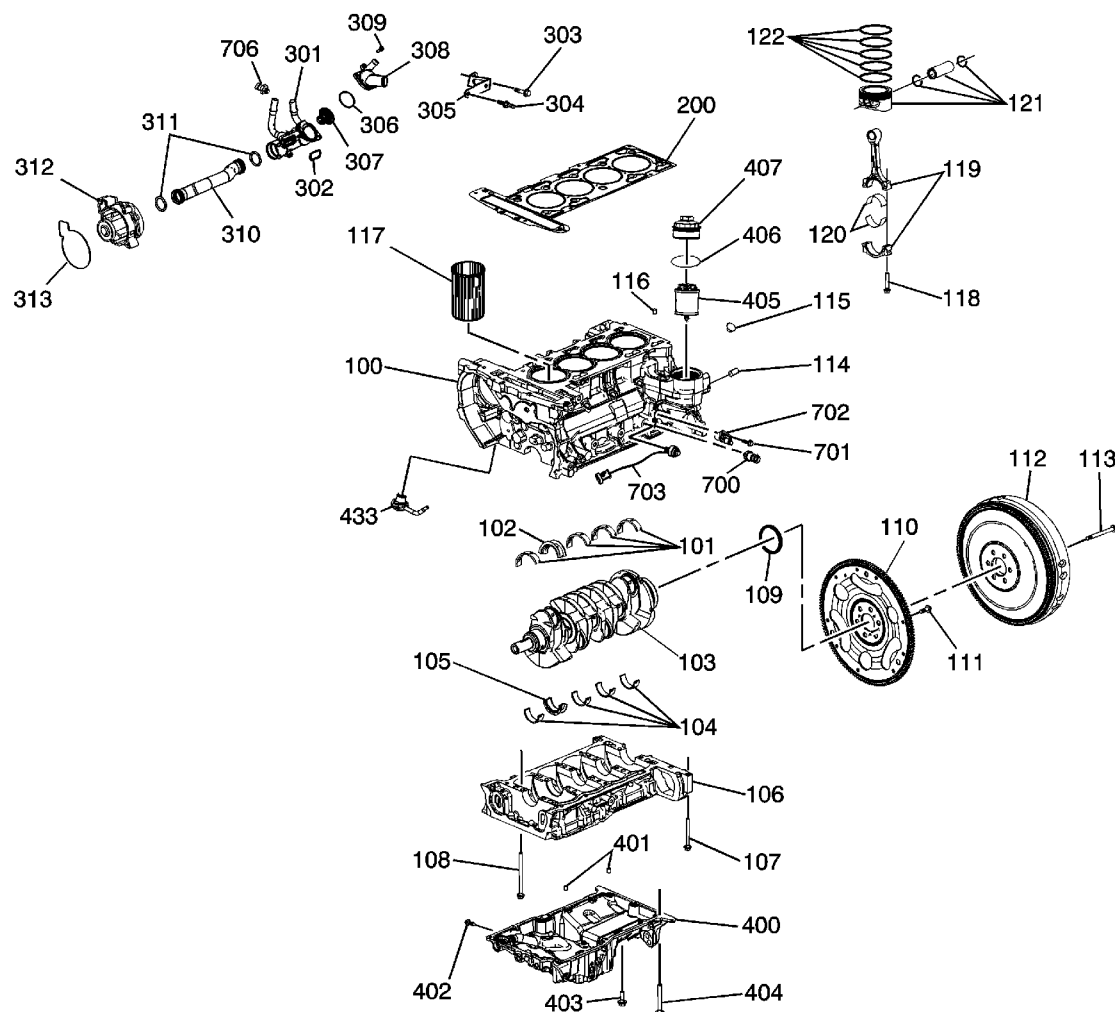


- (100) Engine Block
- (101) Crankshaft Bearing - Upper
- (102) Crankshaft Thrust Bearing - Upper
- (103) Crankshaft
- (104) Crankshaft Bearing - Lower
- (105) Crankshaft Thrust Bearing - Lower
- (106) Lower Crankcase
- (107) Lower Crankcase Perimeter Bolt
- (108) Lower Crankcase Main Bearing Bolt
- (109) Crankshaft Rear Seal
- (110) Flywheel - Automatic Transmission

© 2010 General Motors Corporation. All rights reserved.

- (111) Automatic Transaxle Flywheel to Crankshaft Bolt
- (112) Manual Transaxle Flywheel
- (113) Manual Transaxle Flywheel Bolt
- (114) Engine Block to Transaxle Alignment Pin
- (115) Engine Block Gallery Plug
- (116) Cylinder Head Alignment Pin
- (117) Cylinder Bore Sleeve
- (118) Connecting Rod Cap Bolt
- (119) Connecting Rod
- (120) Connecting Rod Bearing
- (121) Piston Assembly
- (122) Piston Ring Assembly
- (200) Cylinder Head Gasket
- (301) Thermostat Housing
- (302) Thermostat Housing to Block Gasket
- (303) Water Pipe Support Bracket Bolt
- (304) Water Pipe Support Bracket Bolt Stud
- (305) Water Pipe Support Bracket
- (306) Thermostat Gasket
- (307) Thermostat
- (308) Thermostat Housing Cap
- (309) Thermostat Housing Cap Bolt
- (310) Water Transfer Pipe
- (311) Water Transfer Pipe O-ring Seals
- (312) Water Pump
- (313) Water Pump to Engine Block Seal
- (400) Engine Oil Pan
- (401) Engine Oil Pan Alignment Pins
- (402) Engine Oil Pan Drain Plug
- (403) Engine Oil Pan Bolt
- (404) Engine Oil Pan Long Bolt
- (405) Oil Filter
- (406) Oil Filter Cap O-ring
- (407) Oil Filter Cap
- (433) Piston Oil Squirter
- (700) Oil Pressure Switch
- (701) Crankshaft Position Sensor Bolt
- (702) Crankshaft Position Sensor
- (703) Knock Sensor
- (706) Coolant Temperature Sensor

Timing Chain and Components

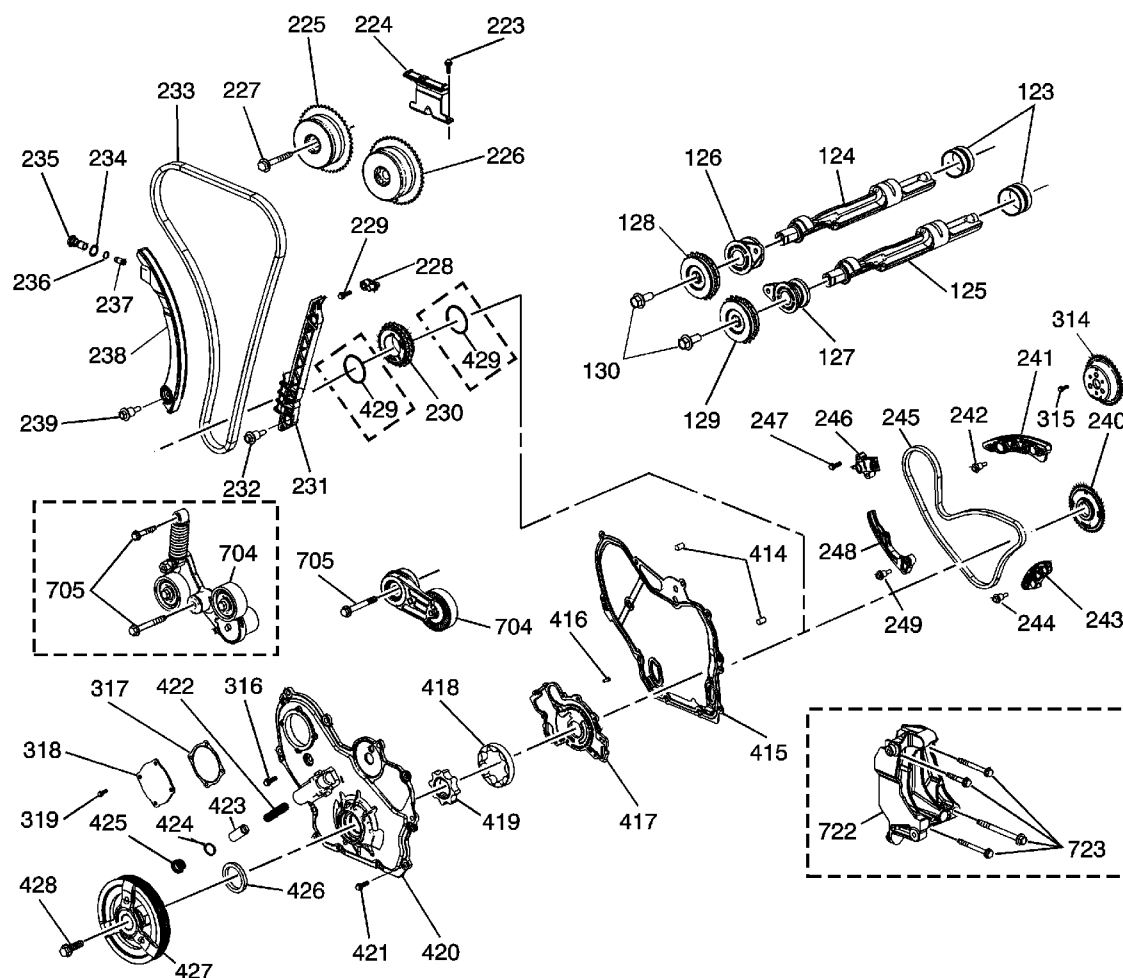

- (123) Balance Shaft Rear Bearing
- (124) Exhaust Balance Shaft
- (125) Intake Balance Shaft
- (126) Exhaust Balance Shaft Bearing Carrier
- (127) Intake Balance Shaft Bearing Carrier
- (128) Exhaust Balance Shaft Drive Sprocket
- (129) Intake Balance Shaft Drive Sprocket
- (130) Balance Shaft Drive Sprocket Bolts
- (223) Upper Timing Chain Guide Bolt
- (224) Upper Timing Chain Guide
- (225) Exhaust Camshaft Position Actuator

© 2010 General Motors Corporation. All rights reserved.

- (226) Intake Camshaft Position Actuator
- (227) Camshaft Position Actuator Bolt
- (228) Timing Chain Oil Nozzle
- (229) Timing Chain Oil Nozzle Bolt
- (230) Timing Chain Drive Sprocket
- (231) Fixed Timing Chain Guide
- (232) Fixed Timing Chain Guide Bolt
- (233) Timing Chain
- (234) Timing Chain Tensioner Washer
- (235) Timing Chain Tensioner Body
- (236) Timing Chain Tensioner O-ring Seal
- (237) Timing Chain Tensioner Plunger
- (238) Adjustable Timing Chain Guide
- (239) Adjustable Timing Chain Guide Bolt
- (240) Balance Shaft Drive Sprocket
- (241) Balance Shaft Drive Chain Guide
- (242) Balance Shaft Drive Chain Guide Bolt
- (243) Balance Shaft Drive Chain Guide
- (244) Balance Shaft Drive Chain Guide Bolt
- (245) Balance Shaft Drive Chain
- (246) Balance Shaft Drive Chain Tensioner Assembly
- (247) Balance Shaft Drive Chain Tensioner Assembly Bolt
- (248) Adjustable Balance Shaft Drive Chain Guide
- (249) Adjustable Balance Shaft Drive Chain Guide Bolt
- (314) Water Pump Drive Sprocket
- (315) Water Pump Drive Sprocket Bolt
- (316) Water Pump Bolt
- (317) Engine Front Cover Access Plate Gasket
- (318) Engine Front Cover Access Plate
- (319) Engine Front Cover Access Plate Bolt
- (414) Engine Front Cover Alignment Pins
- (415) Engine Front Cover Gasket
- (416) Oil Pump Cover Bolt
- (417) Oil Pump Cover
- (418) Oil Pump Outer Gerotor
- (419) Oil Pump Inner Gerotor
- (420) Engine Front Cover
- (421) Engine Front Cover Bolt
- (422) Oil Pressure Relief Valve Spring
- (423) Oil Pressure Relief Valve Plunger
- (424) Oil Pressure Relief Valve O-ring Seal
- (425) Oil Pressure Relief Valve Plug
- (426) Crankshaft Front Seal
- (427) Crankshaft Damper
- (428) Crankshaft Damper Bolt

- (429) Friction Washer (Some Models)
- (704) Belt Tensioner (Some Models)
- (705) Belt Tensioner Bolt (Some Models)
- (722) Belt Tensioner Bracket (Some Models)
- (723) Belt Tensioner Bracket Bolts (Some Models)