



Heated Seats

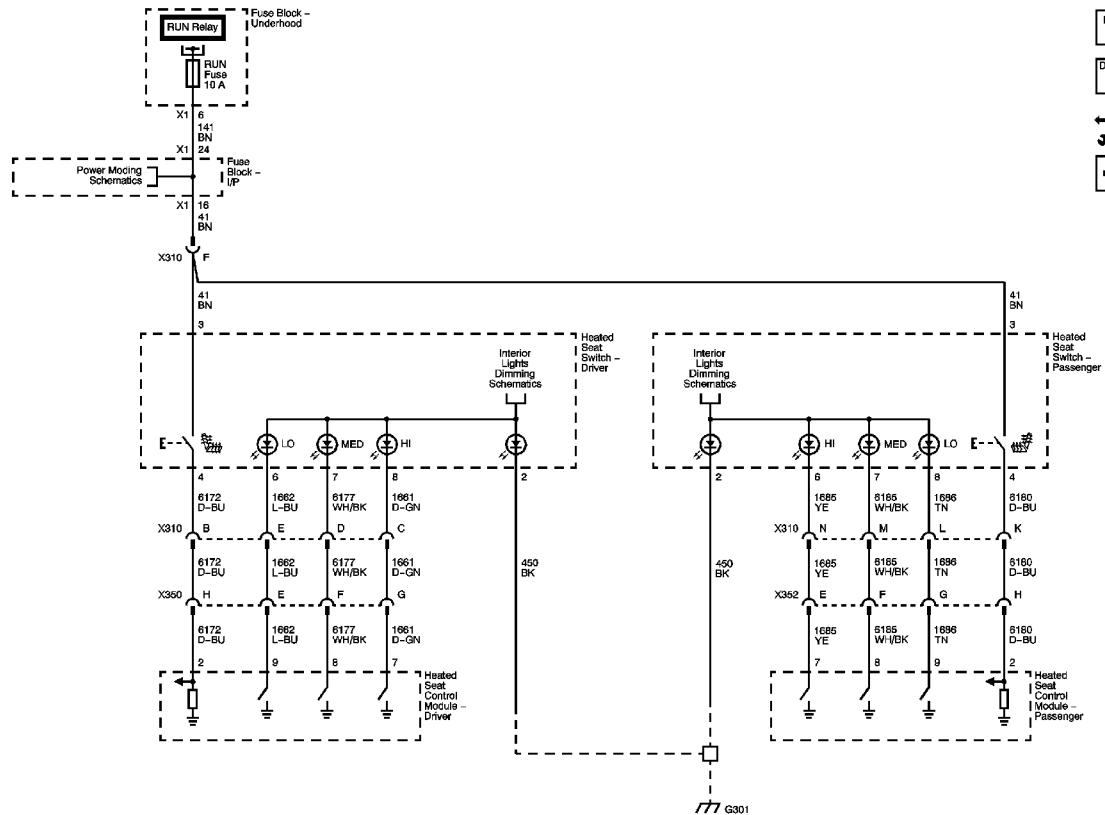


Front Seat Heater Switch Replacement

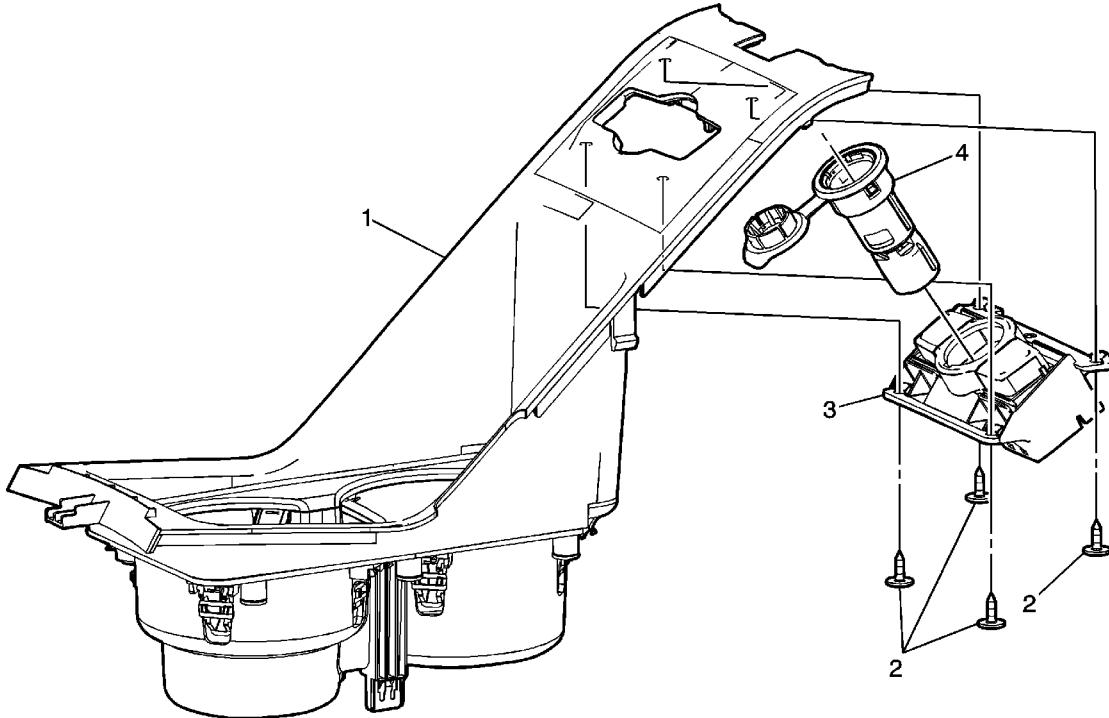


Callout	Component Name
1	Front Floor Console Front Cover Assembly Refer to Front Floor Rear Console Front Cover Replacement .
2	Heated Seat Switch Screw (Qty: 4) Caution: Refer to Fastener Caution in the Preface section. Tighten 2 N·m (18 lb in)
3	Heated Seat Switch
4	Front Floor Console Accessory Power Receptacle Refer to Cigar Lighter Receptacle or 12-Volt Accessory Power Receptacle Replacement .

Front Seat Heater Control Module Replacement

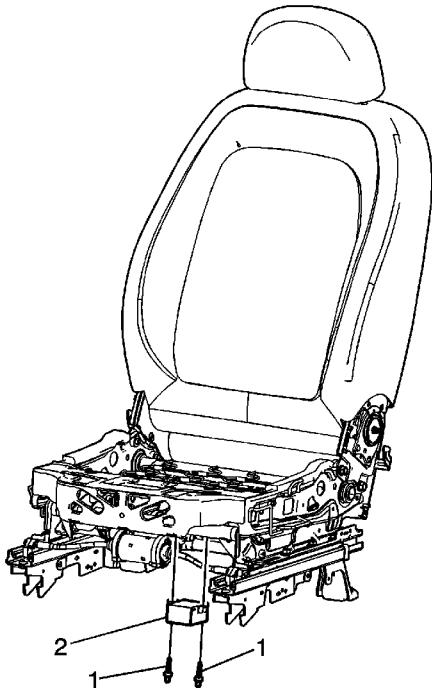

Callout	Component Name
<h3>Preliminary Procedures</h3> <ol style="list-style-type: none">1. Remove the front seat. Refer to Front Seat Replacement - Bucket.2. Remove the front seat cushion cover and pad. Refer to Front Seat Cushion Cover and Pad Replacement.	
1	Front Heated Seat Control Module Rivets (Qty: 2) Procedure <ol style="list-style-type: none">1. Drill out the head of the rivet to remove the module.2. Install new rivets for installation.
2	Front Heated Seat Control Module Procedure <ol style="list-style-type: none">1. Disconnect the electrical connector.2. Check to make sure the heated seats are functioning properly.

Driver or Passenger Seat Back Cushion Heater Replacement

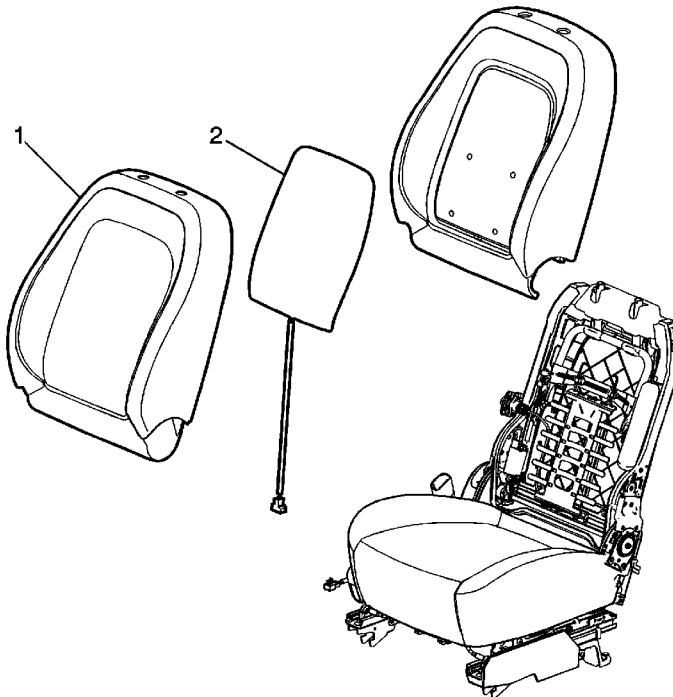


 **Callout** **Component Name**

Callout	Component Name
<h3>Preliminary Procedures</h3>	
	<ol style="list-style-type: none">1. Remove the front seat. Refer to Front Seat Replacement - Bucket .2. Remove the front seat back panel. Refer to Driver or Passenger Seat Back Cushion Finish Panel Replacement .3. Remove the front seat head restraint. Refer to Front Seat Head Restraint Replacement .4. Remove the front seat head restraint guides. Refer to Front Seat Head Restraint Guide Replacement .5. Remove the front seat lumbar support actuator knob and bezel, if equipped. Refer to Driver Seat Lumbar Support Actuator Knob Bezel Replacement .6. Remove the front seat outer adjuster finish cover. Refer to Driver or Passenger Seat Outer Adjuster Finish Cover Replacement .7. Remove the front seat inner adjuster finish cover. Refer to Driver or Passenger Seat Inner Adjuster Finish Cover Replacement .
	Front Seat Back Cushion Cover

Procedure © 2010 General Motors Corporation. All rights reserved.


1	<ol style="list-style-type: none">1. Disengage the j-channel retainers from the seat back cushion frame.2. Disconnect the electrical connectors that attach to the seat back cushion, if equipped.3. Remove the inflatable restraint module hog rings from the seat cover, use new hog rings when installing.4. Remove the seat back cushion cover and pad as an assembly.5. Pull the cover away from the pad to disengage the retainers.
2	Front Seat Back Cushion Heater

Driver Seat Cushion Heater Replacement

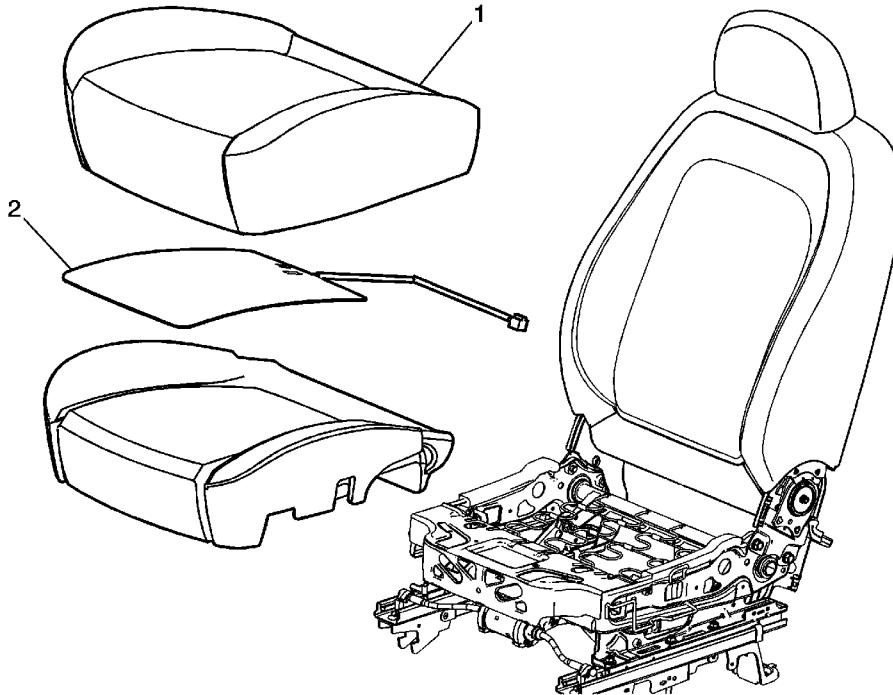

Callout	Component Name
<h3>Preliminary Procedures</h3> <ol style="list-style-type: none">1. Remove the front seat. Refer to Front Seat Replacement - Bucket .2. Remove the front seat outer adjuster finish cover. Refer to Driver or Passenger Seat Outer Adjuster Finish Cover Replacement .3. Remove the front seat inner adjuster finish cover. Refer to Driver or Passenger Seat Inner Adjuster Finish Cover Replacement .	
1	Front Seat Cushion Cover
	<h3>Procedure</h3> <ol style="list-style-type: none">1. Disengage the j-channel retainers from the seat back cushion frame.2. Disconnect the electrical connectors that attach to the seat back cushion, if equipped.3. Remove the seat belt buckle pretensioner electrical wire from the seat cushion and cover.4. Remove the seat cushion cover and pad as an assembly.5. Pull the cover away from the pad to disengage the retainers.
2	Front Seat Cushion Heater

Passenger Seat Cushion Heater Replacement

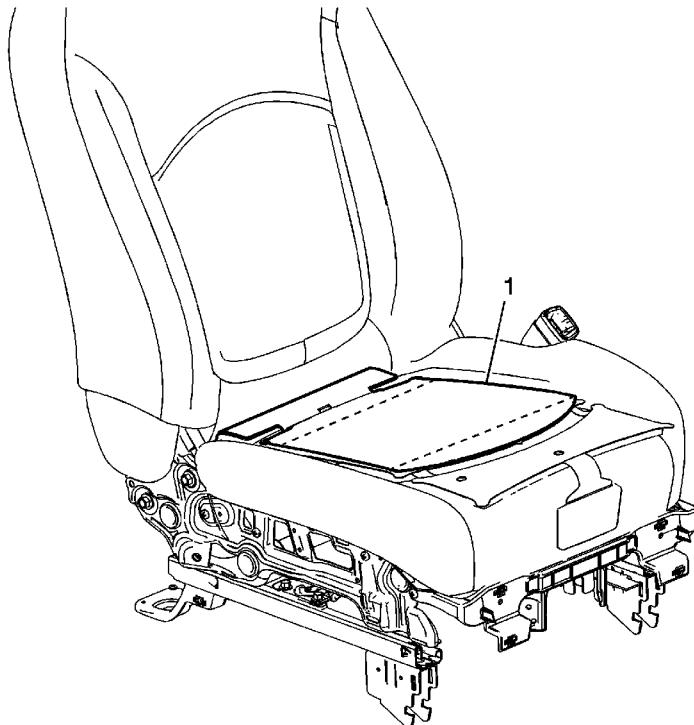

Callout	Component Name
<p>Warning: Replace the passenger presence system as a complete assembly to prevent possible injury to the occupant. All the components in the service kit are assembled and calibrated as a unit. Using only some of the components in the service kit will cause the passenger presence system to operate improperly.</p>	

Preliminary Procedure

1. Remove the front passenger seat. Refer to [Front Seat Replacement - Bucket](#).
2. Remove the front seat outer adjuster finish cover. Refer to [Driver or Passenger Seat Outer Adjuster Finish Cover Replacement](#).
3. Remove the front seat inner adjuster finish cover. Refer to [Driver or Passenger Seat Inner Adjuster Finish Cover Replacement](#).
4. Remove the front seat cushion cover. Refer to [Front Seat Cushion Cover and Pad Replacement](#).

1	Passenger Seat Cushion Heater
	<h3>Procedure</h3> <ol style="list-style-type: none">1. Using a pair of scissors cut out the seat heater element between the front and rear adhesive strips as shown, leaving the old adhesive strip area on the

	<p>Passenger Presence System (PPS).</p> <ol style="list-style-type: none">2. Cut the pigtail wire flush to the faulty element and discard.3. Remove the heater element leaving the old adhesive strips in tact on the PPS. The new seat heater adhesive strips will be placed over the old adhesive strips.	
--	--	--