

Diagnostic Trouble Code Charts**Master DTC Index**

Module	Section
<u>ABS</u> module	REFER to: Anti-Lock Brake System (ABS) and Stability Control (206-09 Anti-Lock Brake System (ABS) and Stability Control, Diagnosis and Testing).
<u>ACM</u>	<ul style="list-style-type: none"> Without SYNC, REFER to: Information and Entertainment System (415-00D) . With SYNC, REFER to: Information and Entertainment System (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Diagnosis and Testing).
<u>APIM</u>	REFER to: Information and Entertainment System (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Diagnosis and Testing).
<u>ATCM</u>	REFER to: Four-Wheel Drive Systems (308-07A Four-Wheel Drive Systems, Diagnosis and Testing).
<u>BCM</u>	REFER to: Body Control Module (BCM) (419-10 Multifunction Electronic Modules, Diagnosis and Testing).
<u>BECMB</u>	REFER to: Airbag Supplemental Restraint System (SRS) (501-20B Supplemental Restraint System, Diagnosis and Testing).
<u>CCM</u>	REFER to: Cruise Control (419-03B Cruise Control - Vehicles With: Adaptive Cruise Control, Diagnosis and Testing).
<u>DSP</u>	REFER to: Information and Entertainment System (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Diagnosis and Testing).
<u>DCDC</u> (voltage quality module [VQM])	REFER to: Direct Current/Direct Current (DC/DC) Converter Control Module (414-05) .
<u>FCIM</u>	<ul style="list-style-type: none"> Without SYNC, REFER to: Information and Entertainment System (415-00D) . With SYNC, REFER to: Information and Entertainment System (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Diagnosis and Testing).
<u>GWM</u>	

	REFER to: Communications Network (418-00 Module Communications Network, Diagnosis and Testing).
<u>HUD</u> module	REFER to: Collision Warning and Collision Avoidance System (419-03C Collision Warning and Collision Avoidance System, Diagnosis and Testing).
<u>IPC</u>	REFER to: Instrumentation, Message Center and Warning Chimes (413-01 Instrumentation, Message Center and Warning Chimes, Diagnosis and Testing).
<u>IPMA</u>	REFER to: Lane Keeping System (419-07 Lane Keeping System, Diagnosis and Testing).
<u>OCS</u>	REFER to: Airbag Supplemental Restraint System (SRS) (501-20B Supplemental Restraint System, Diagnosis and Testing).
<u>PAM</u>	REFER to: Parking Aid (413-13B) .
<u>PCM</u>	REFER to: Electronic Engine Controls (303-14 Electronic Engine Controls - 2.3L EcoBoost (201kW/273PS), Diagnosis and Testing).
<u>PSCM</u>	REFER to: Power Steering (211-02 Power Steering, Diagnosis and Testing).
<u>RCM</u>	REFER to: Airbag Supplemental Restraint System (SRS) (501-20B Supplemental Restraint System, Diagnosis and Testing).
<u>RTM</u>	REFER to: Tire Pressure Monitoring System (TPMS) (204-04B Tire Pressure Monitoring System (TPMS), Diagnosis and Testing).
<u>SCCM</u>	REFER to: Steering Wheel and Column Electrical Components (211-05 Steering Wheel and Column Electrical Components, Diagnosis and Testing).
<u>SODL</u>	REFER to: Blind Spot Information System (419-04 Side and Rear Vision, Diagnosis and Testing).
<u>SODR</u>	REFER to: Blind Spot Information System (419-04 Side and Rear Vision, Diagnosis and Testing).
<u>TCU</u>	REFER to: Information and Entertainment System (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Diagnosis and Testing).
<u>TRM</u>	REFER to: Trailer Lamps (417-01 Exterior Lighting, Diagnosis and Testing).

