

**Wire Terminal Inspection and Removal****Disconnect**

1. **WARNING:** Before beginning any service procedure in this section, refer to Health and Safety cautions in section 100-00 General Information. Failure to follow this instruction may result in serious personal injury.

Refer to: Health and Safety Precautions (100-00 General Information) .

**NOTE:** To avoid wiring pin (terminal) damage, Rotunda Flex Probes NUD105-R025D or Terminal Probe Kit 29-011A must be used to connect test equipment or jumper wires to pins (terminals).

- Male to female pin (terminal) fit is critical for correct connection and durability.
- Pin (terminal) fit may be checked by using the mating pin (terminal) to test for normal separation force (a damaged pin or terminal will have very low separation force from the mating pin or terminal).
- Correctly checking the separation force of small pins (terminals) may require removal of the connector terminal guide/retainer if it adds drag to the pin (terminal) insertion or removal.
- For more detail on the replacement of damaged connectors or pins (terminals) refer to the video below.

2.

[Click here to view a video version of this procedure.](#)



3. **NOTE:** The connector hard-shell information, which is measured in millimeters is the distance from the front face of the connector to the engagement point on the terminal release tang. Mark the listed distance on the terminal removal tool prior to removing the terminal.

**NOTE:** The dimensions of the connector hard-shell and the connector terminals release tang are listed above the corresponding graphics.

4.

**Audio Front Control Module (ACM), Body Control Module (BCM) and Instrument Panel Cluster (IPC)  
Electrical Connector**


Callout	Connector
1	External terminal release tang
2	Electrical connector locking tab



5.

**Audio Front Control Module (ACM), Front Controls Interface Module (FCIM), Gateway Module A (GWM), and Heating, Ventilation and Air Conditioning (HVAC) Control Module Electrical Connector**

Callout	Connector
1	Distance to release tang - 0.2953 in (7.5 mm) (inner terminal) - 0.4646 in (11.8 mm) (outer terminal)
2	Terminal width size - 0.0244 in (.62 mm) (inner terminal) - 0.1102 in (2.8 mm) (outer terminal)

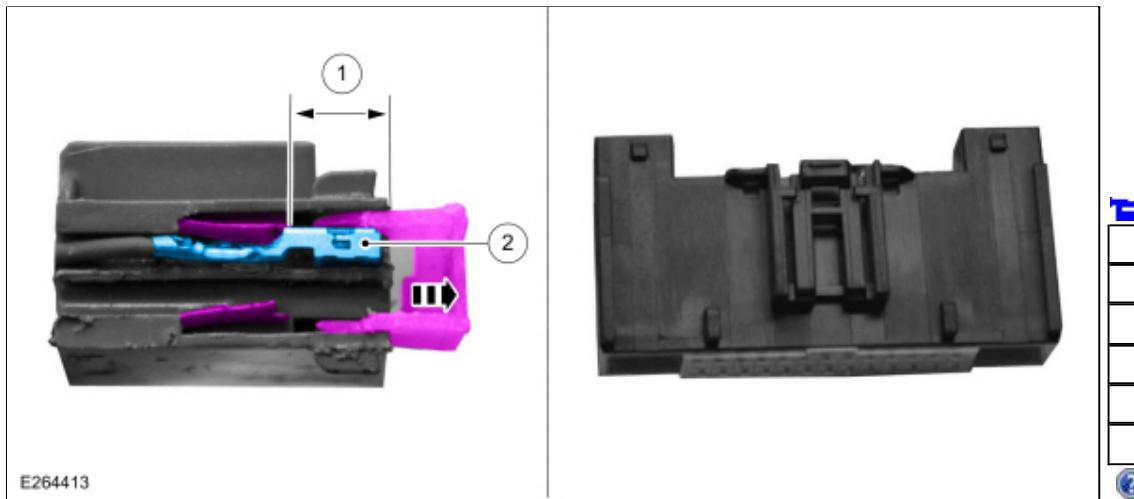

6.

**Body Control Module (BCM) Electrical Connector**


Callout	Connector
1	Terminal width size - 0.1102 in (2.8 mm) (inner terminal) - 0.2480 in (6.3 mm) (outer terminal)
2	Distance to release tang - 0.1260 in (3.2 mm) (inner terminal) - 0.1575 in (4 mm) (outer terminal)
3	Terminal width size - 0.0591 in (1.5 mm)
4	Distance to release tang - 0.3780 in (9.6 mm) (lower terminal)



7.

#### Body Control Module (BCM) Electrical Connector

Callout	Connector
1	Terminal width size - 0.0591 in (1.5 mm) (inner terminal) - 0.1102 in (2.8 mm) (outer terminal)
2	Distance to release tang - 0.3780 in (9.6 mm) (inner terminal)
3	Distance to release tang - 0.1575 in (4 mm)
4	Distance to release tang - 0.1575 in (4 mm)
5	Terminal width size - 0.2480 in (6.3 mm)

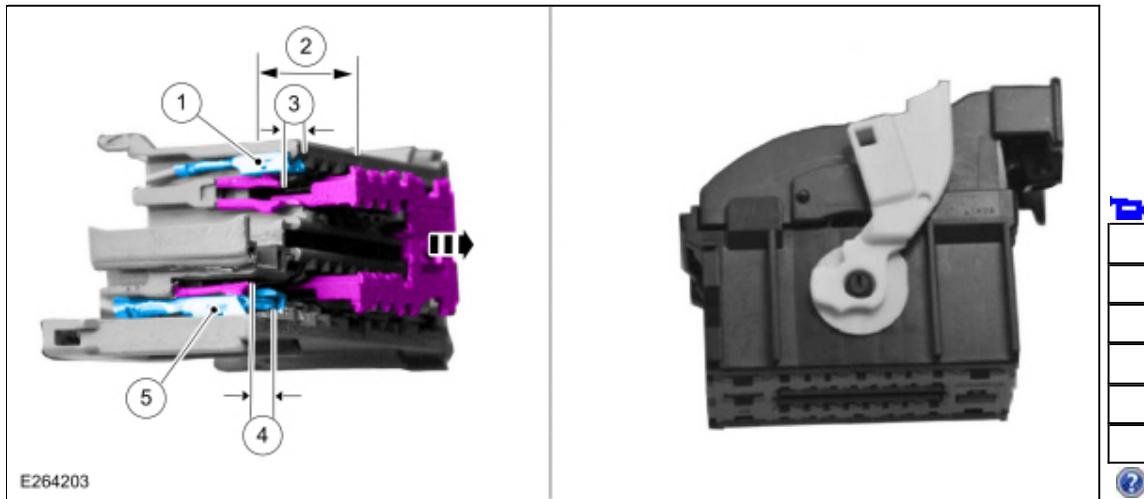


8.

#### Body Harness In-line Electrical Connector

Callout	Connector


1	Distance to release tang - 0.3346 in (8.5 mm)
2	Terminal width size - 0.1102 in (2.8 mm)
3	Terminal width size - 0.0591 in (1.5 mm)
4	Distance to release tang - 0.3858 in (9.8 mm) (inner)

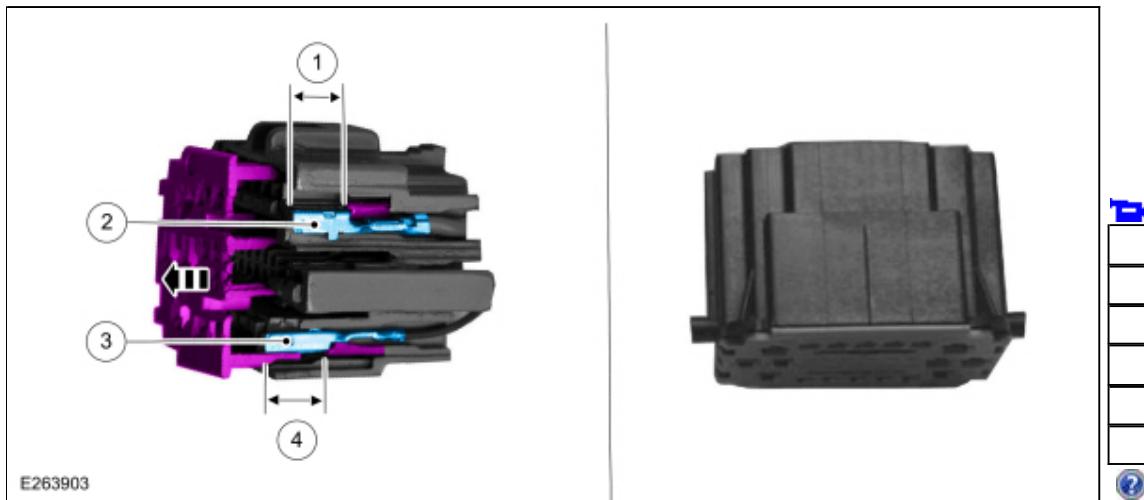

9.

### Body Harness In-line Electrical Connector


Callout	Connector
1	Distance to release tang - 0.3543 in (9 mm)
2	Terminal width size - 0.0591 in (1.5 mm) (inner terminal) - 0.1102 in (2.8 mm) (outer terminal)
3	Terminal width size - 0.2480 in (6.3 mm)
4	Distance to release tang - 0.3543 in (9 mm)

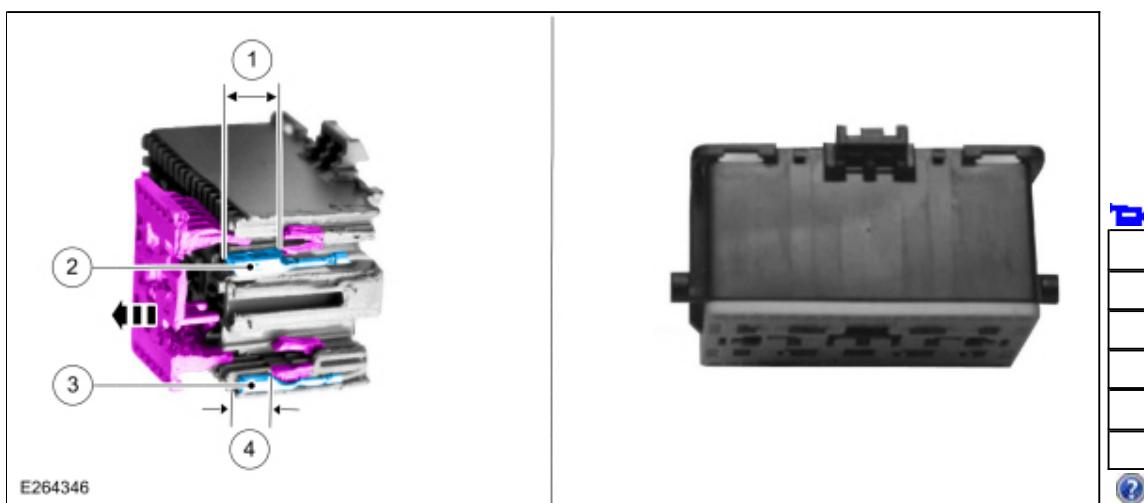

10.

**Body Harness In-line and Seat Harness Electrical Connector**


Callout	Connector
1	Distance to release tang - 0.4331 in (11 mm)
2	Terminal width size - 0.0591 in (1.5 mm)
3	Terminal width size - 0.0591 in (1.5 mm)
4	Distance to release tang - 0.4331 in (11 mm)

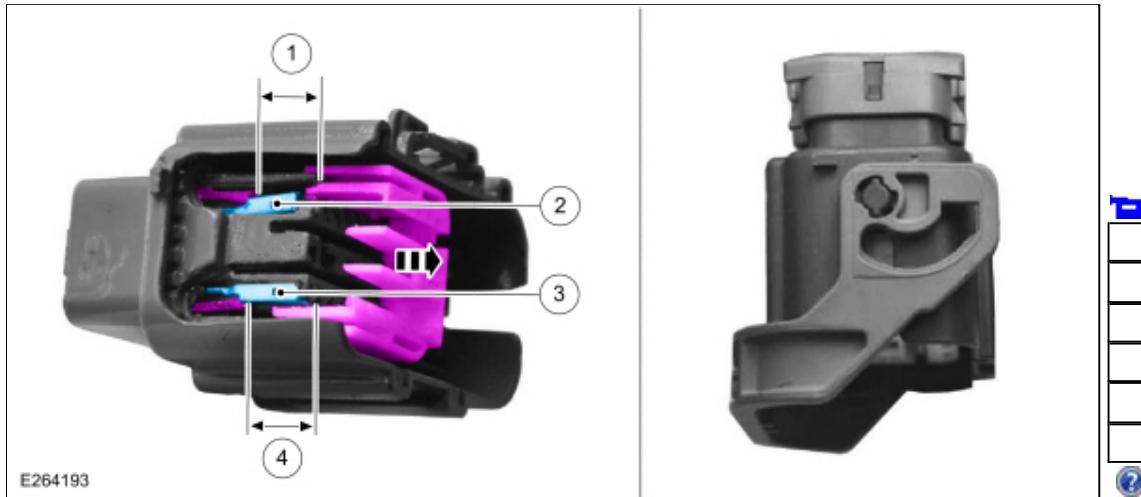

11.

**Body Harness In-line and Seat Module Electrical Connector**

Callout	Connector
1	Terminal width size - 0.0591 in (1.5 mm)
2	Distance to release tang - 0.3937 in (10 mm)

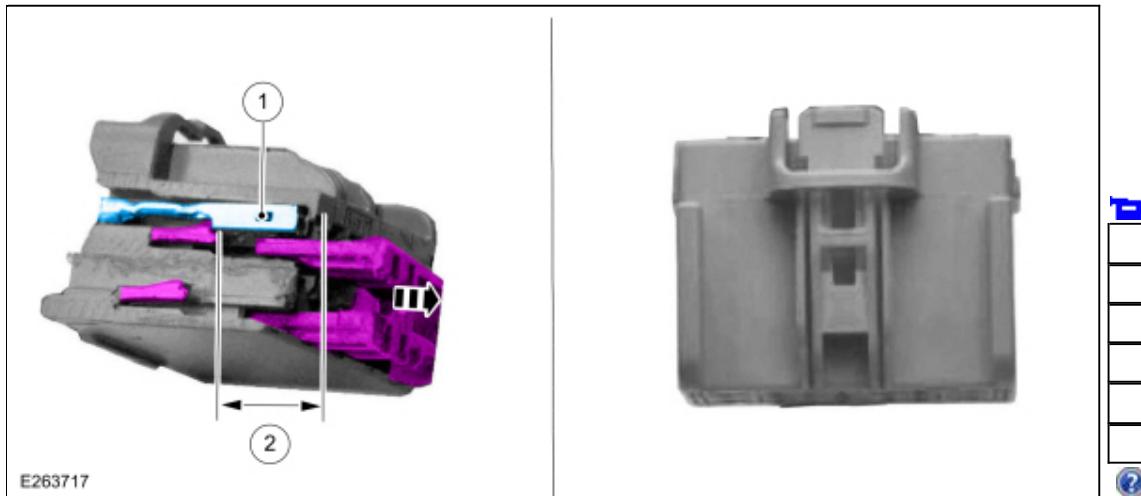

Copyright © 2019 Ford Motor Company

---