

204-01A Front Suspension - RWD Removal and Installation

2019 Ranger

Procedure revision date: 11/27/2018


Front Wheel Bearing and Wheel Hub

 
Base Part Number: 1104


Removal

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

1. Remove the front wheel speed sensor.
Refer to: [Front Wheel Speed Sensor](#) (206-09 Anti-Lock Brake System (ABS) and Stability Control, Removal and Installation).
2. Remove the brake disc.
Refer to: [Brake Disc](#) (206-03 Front Disc Brake, Removal and Installation).
3. Remove the wheel hub cap.

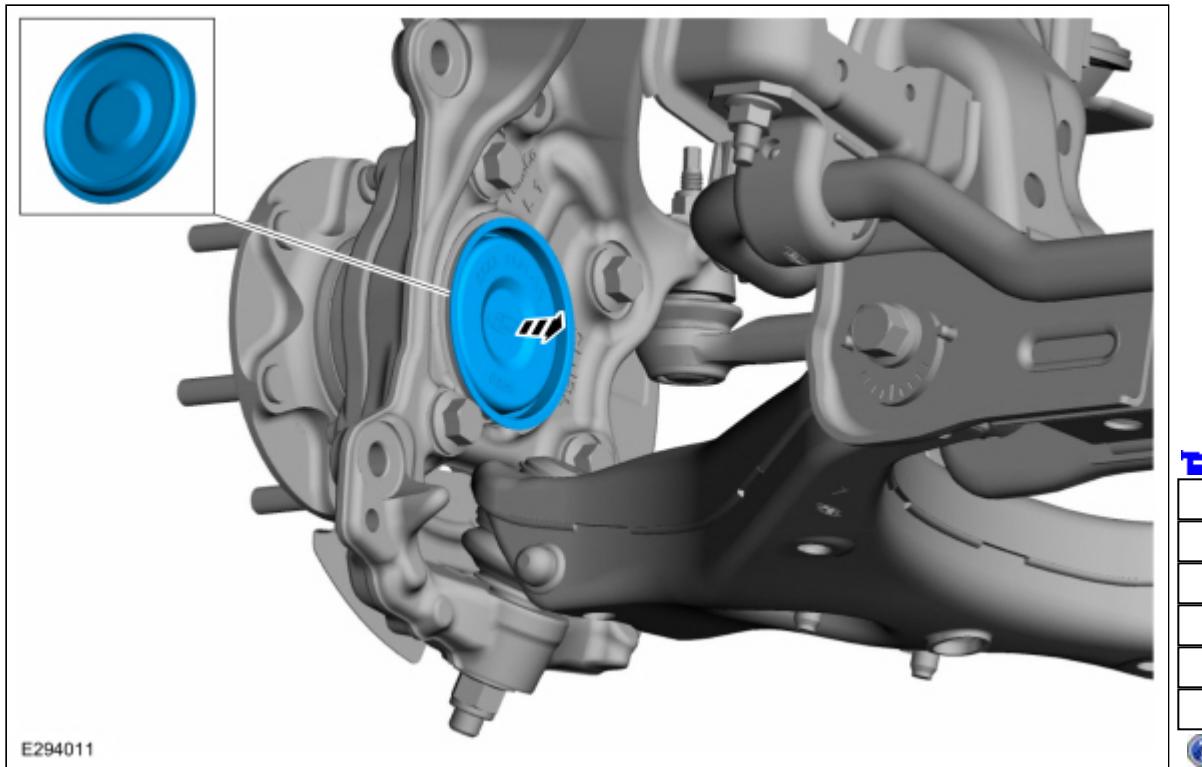


4. Remove and discard the 4 front wheel bearing and wheel hub bolts. Remove the front wheel bearing and wheel hub.

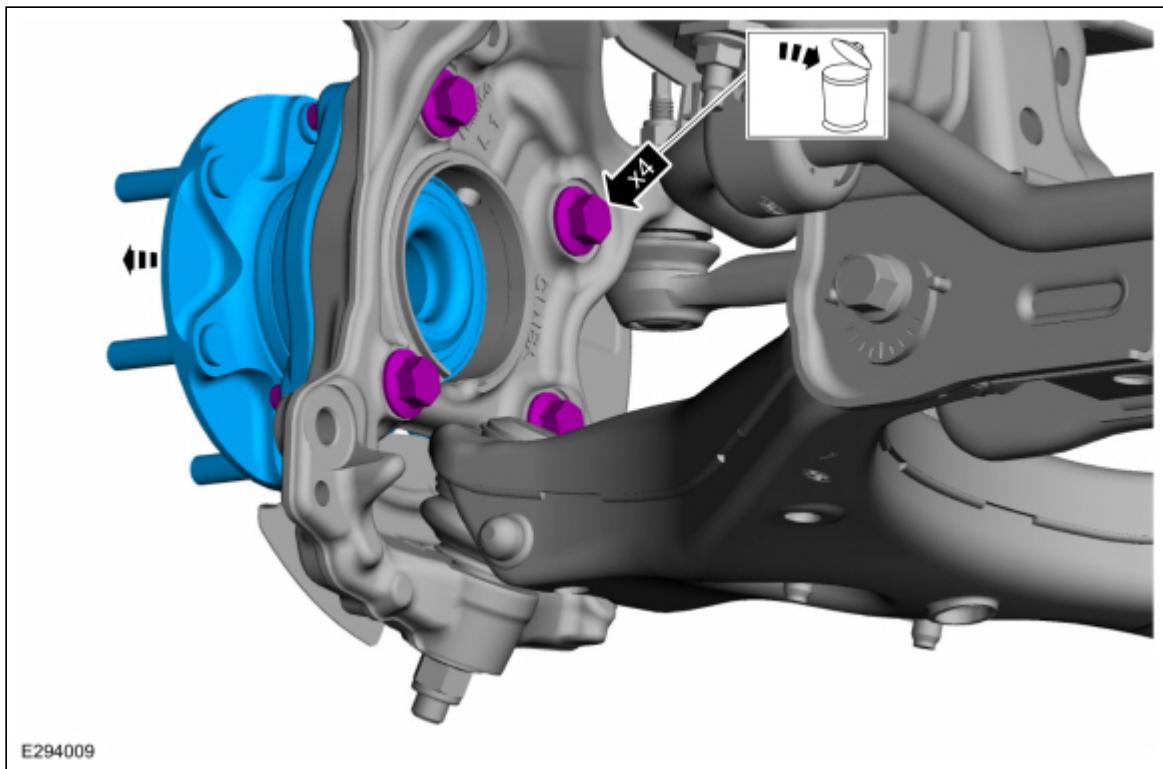


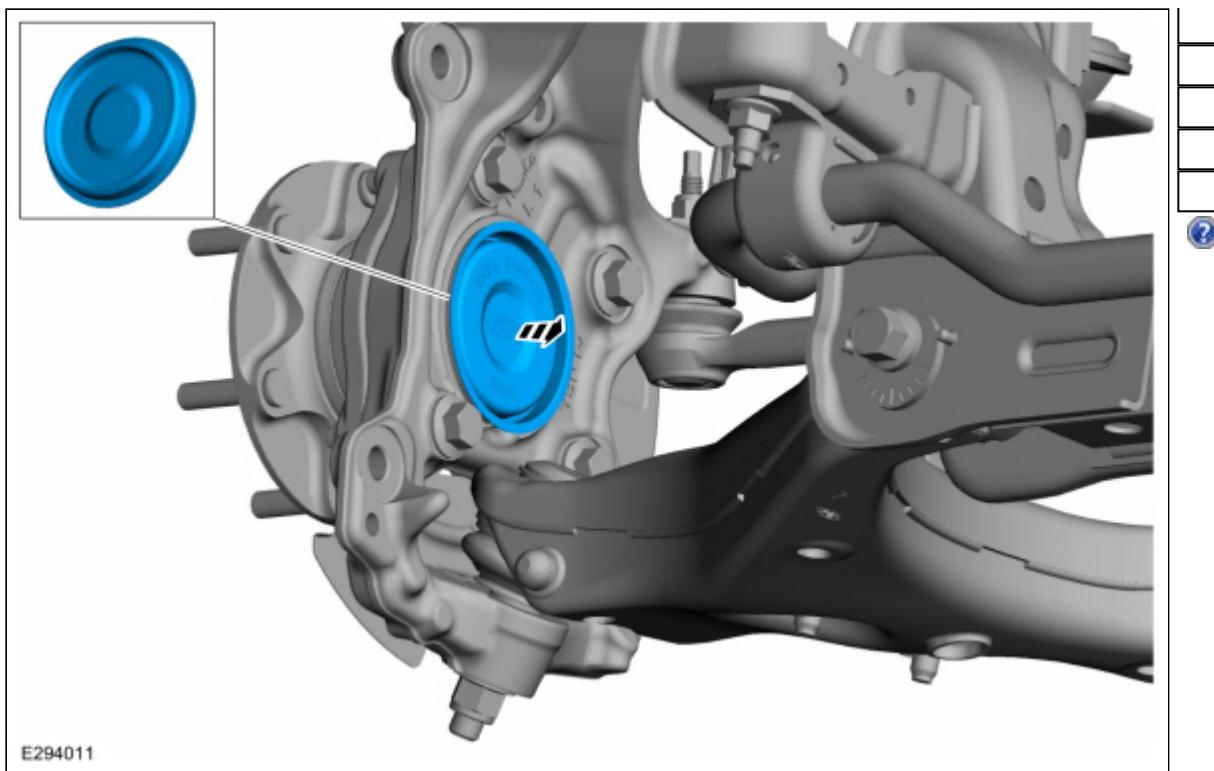
Installation

1. **NOTE: Tighten the bolts in a cross pattern.**

Install the front wheel bearing and wheel hub and install the 4 front wheel bearing and wheel hub bolts.
Torque: 129 lb.ft (175 Nm)

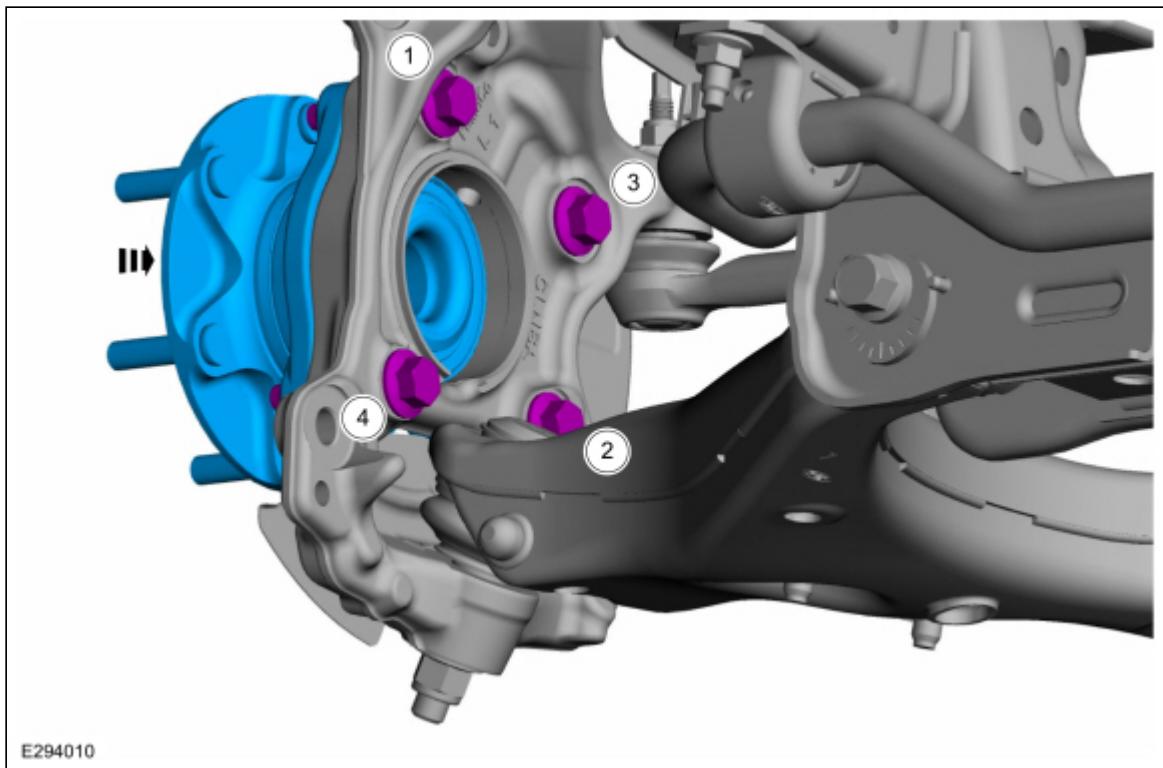

2. Install the wheel hub cap.



3. Install the brake disc.

Refer to: [Brake Disc](#) (206-03 Front Disc Brake, Removal and Installation).

4. Install the front wheel speed sensor.

Refer to: [Front Wheel Speed Sensor](#) (206-09 Anti-Lock Brake System (ABS) and Stability Control, Removal and Installation).

Copyright © 2019 Ford Motor Company

