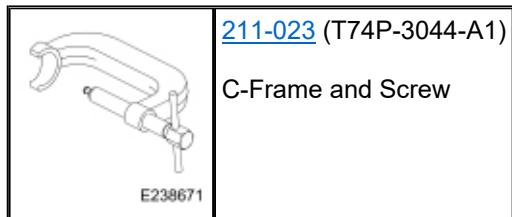


Wheel Studs

Base Part Number: 1107


Special Tool(s) / General Equipment**Removal**

NOTICE: Suspension fasteners are critical parts that affect the performance of vital components and systems. Failure of these fasteners may result in major service expense. Use the same or equivalent parts if replacement is necessary. Do not use a replacement part of lesser quality or substitute design. Tighten fasteners as specified.

NOTE: RWD vehicle shown, 4WD vehicle similar.

1. Remove the brake disc.
Refer to: [Brake Disc](#) (206-03 Front Disc Brake, Removal and Installation).
2. Press the wheel stud from the hub flange.
Use Special Service Tool: [211-023 \(T74P-3044-A1\) C-Frame and Screw](#).




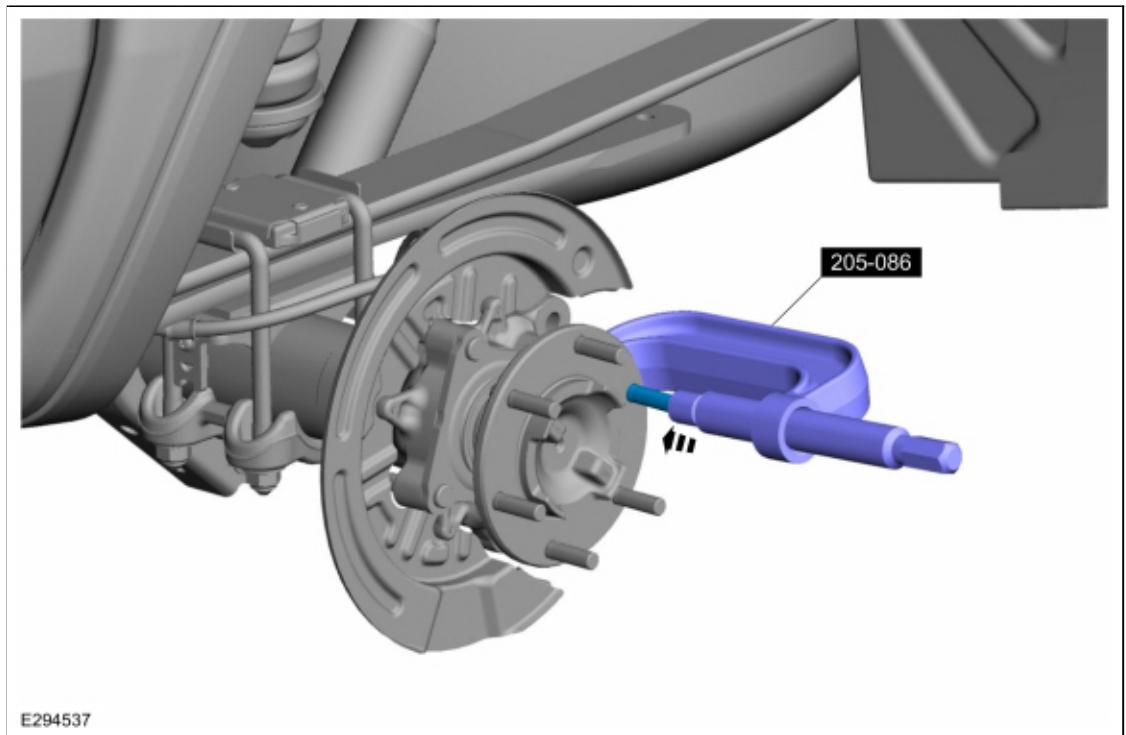


Installation

NOTE: Make sure to use washers that have an ID that is larger than the OD of the wheel stud serrations. Use enough washers (approximately 3 to 4) to allow the wheel stud to fully seat against the hub flange.

 1. Install the wheel stud.
 - Tighten the wheel nut until the wheel stud is seated against the hub flange.
 - Discard the wheel nut.



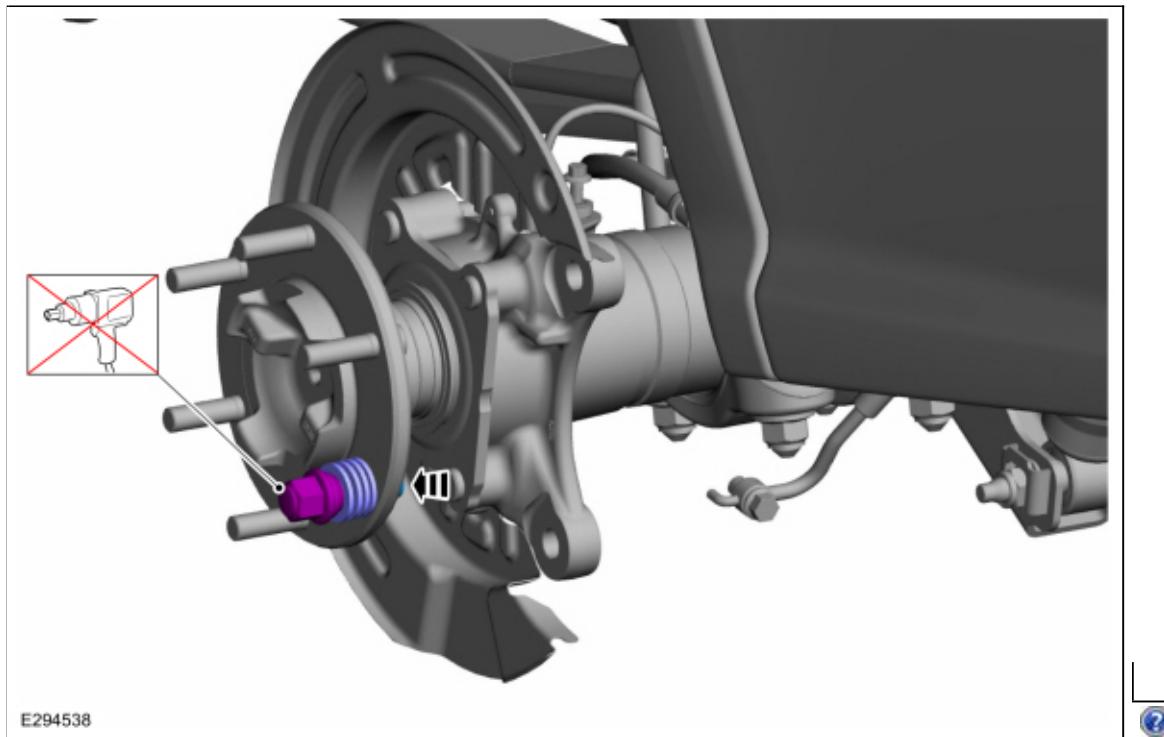

2. Install the brake disc.
Refer to: [Brake Disc](#) (206-03 Front Disc Brake, Removal and Installation).

Copyright © 2019 Ford Motor Company

