


Differential Carrier

Special Tool(s) / General Equipment

 E294702	205-1058 Installer, Differential Side Bearing
Two Leg Puller	

DISASSEMBLY


1. Remove the differential carrier.
Refer to: [Differential Carrier](#) (205-02 Rear Drive Axle/Differential - Vehicles With: Dana M220, Removal and Installation).
2. Both side.
Using the general equipment, remove and discard the differential bearings.
Use the General Equipment: Two Leg Puller

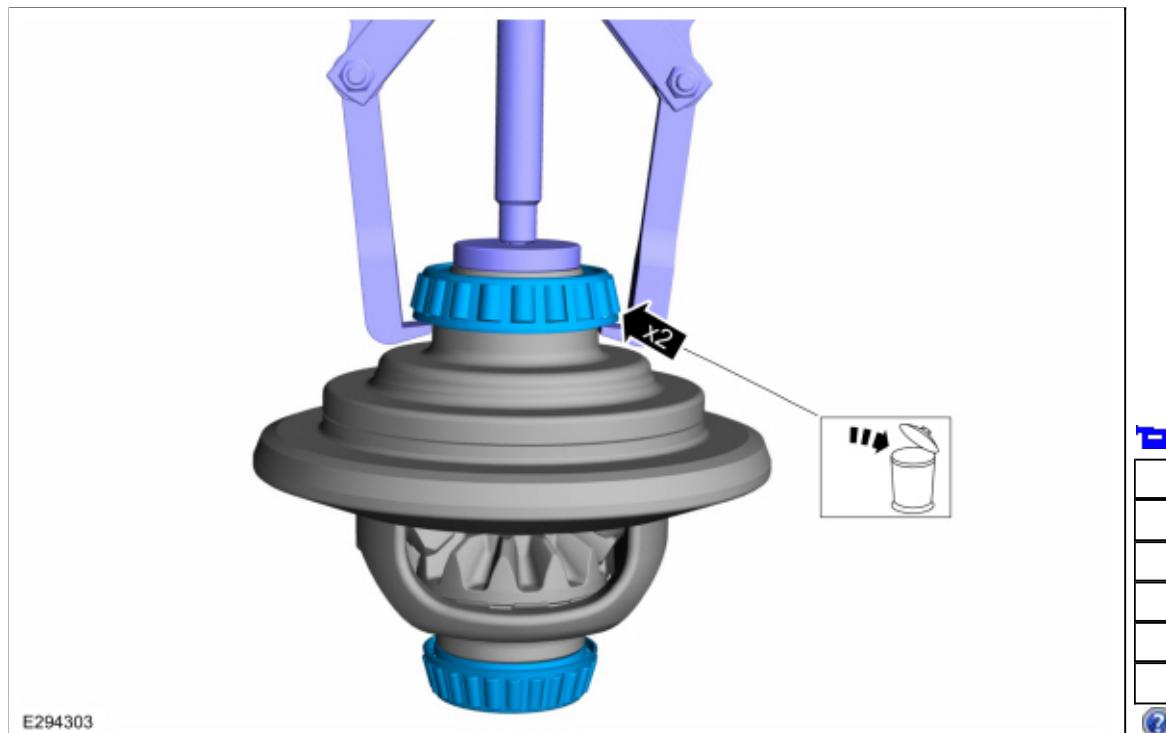

3. **NOTICE: Make sure the mating surfaces are clean and free of oil, dust and debris.**

NOTE: Use solvent and Scotch-Brite® pads to remove.

Clean and inspect the differential carrier bearing mating surface.

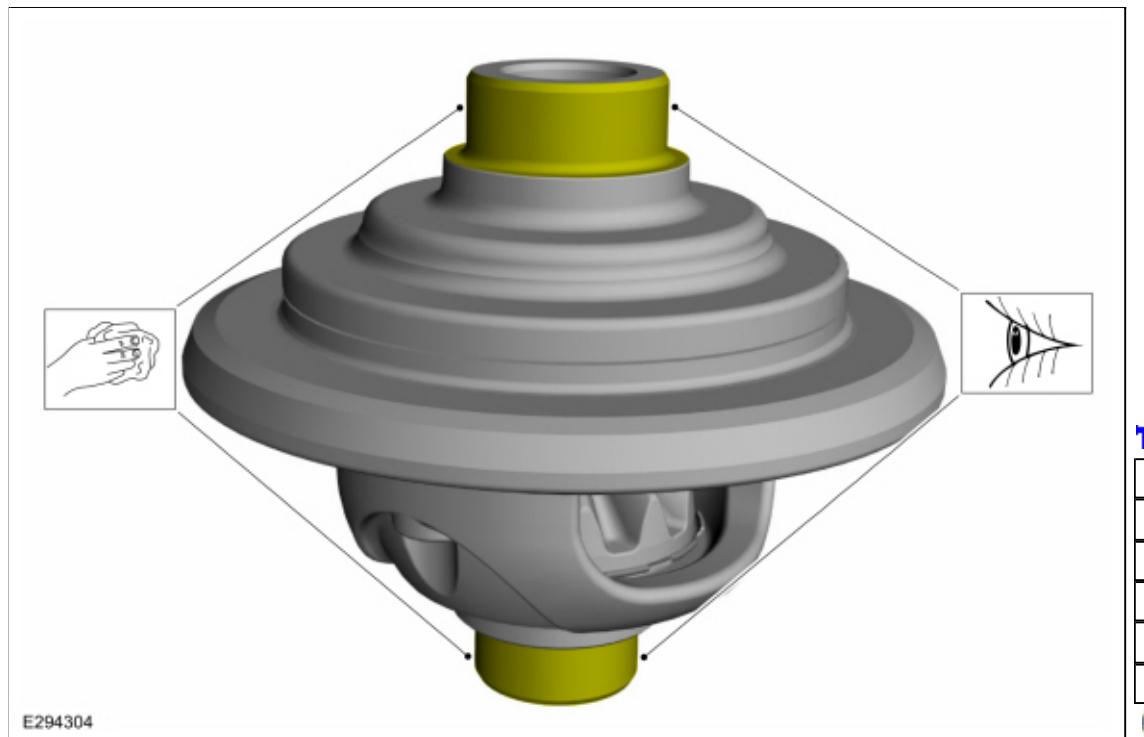


ASSEMBLY

1. Both side.

Using the special tool, install the new differential bearings.

Use Special Service Tool: [205-1058 Installer, Differential Side Bearing](#).



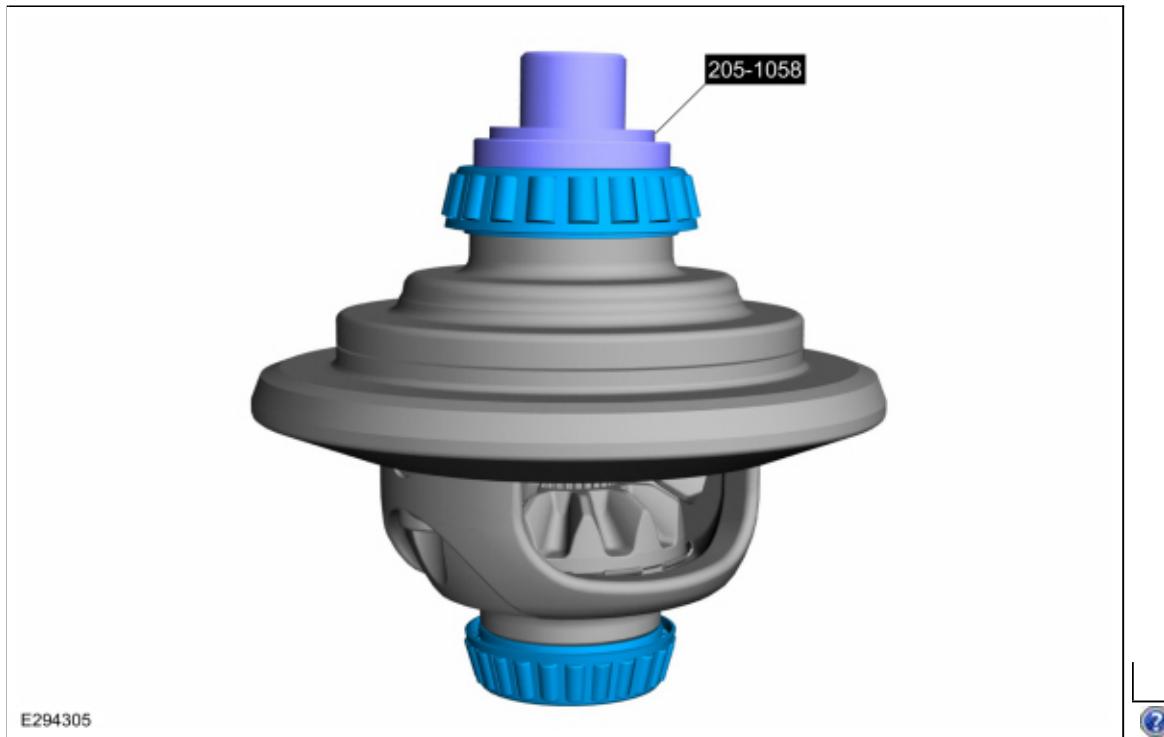

2. Check the differential ring gear backlash.
Refer to: [Ring Gear Backlash Adjustment](#) (205-02 Rear Drive Axle/Differential - Vehicles With: Dana M220, General Procedures).
3. Install the differential carrier.
Refer to: [Differential Carrier](#) (205-02 Rear Drive Axle/Differential - Vehicles With: Dana M220, Removal and Installation).

Copyright © 2019 Ford Motor Company

