


### Differential Breather Tube


#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.



1. Remove front LH wheel only.  
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolts and the engine front undershield.  
*Torque: 22 lb.ft (30 Nm)*

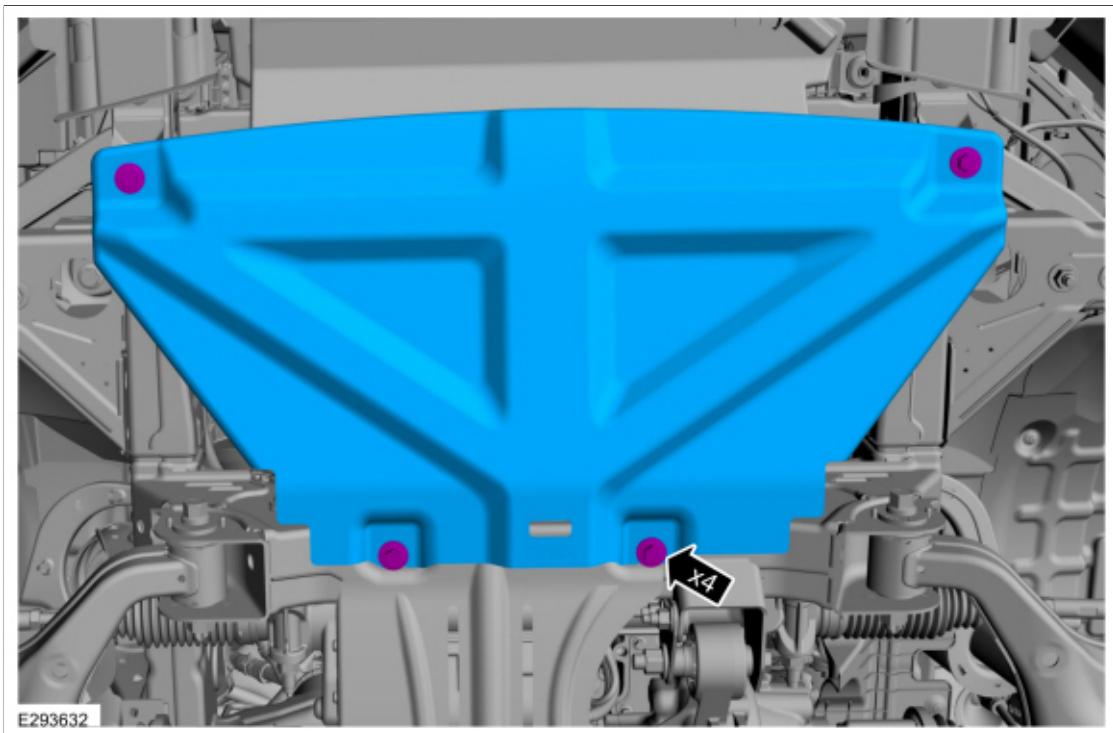


3. Remove the bolts and the front axle skid plate.  
*Torque: 22 lb.ft (30 Nm)*

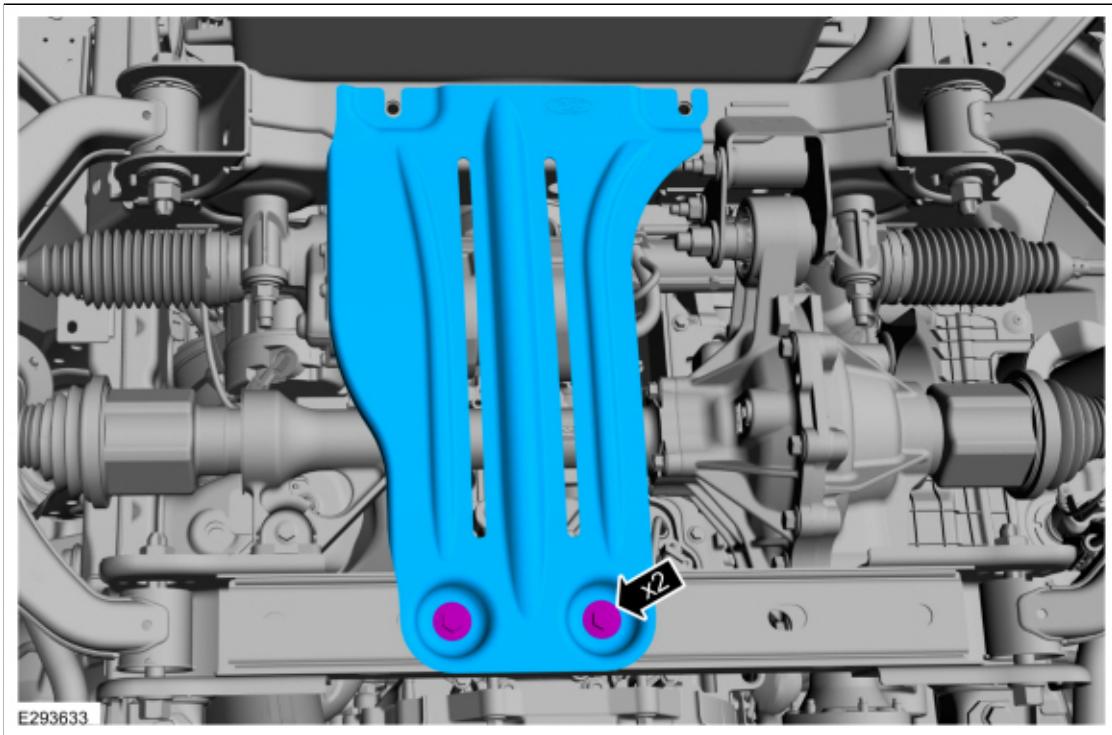

 
4. Remove the pin-type retainers and the fender splash shield.

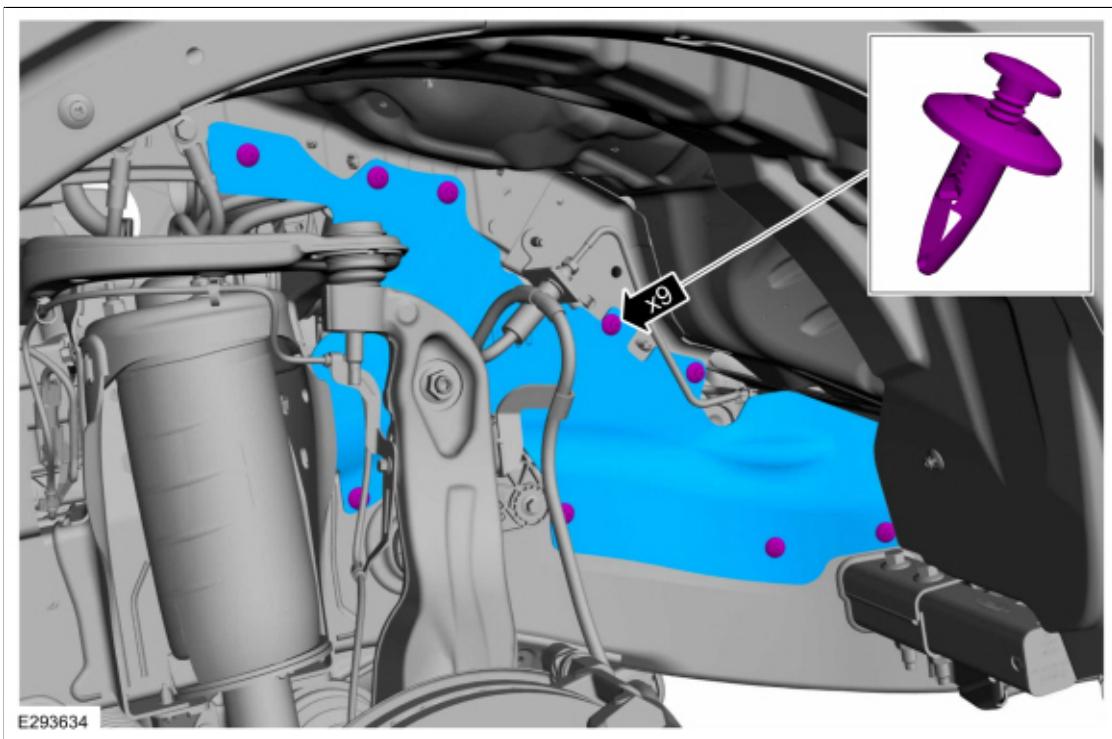

5.
  - Disconnect the front differential breather hose.
  - Detach the retainer clip from breather hose and position aside.

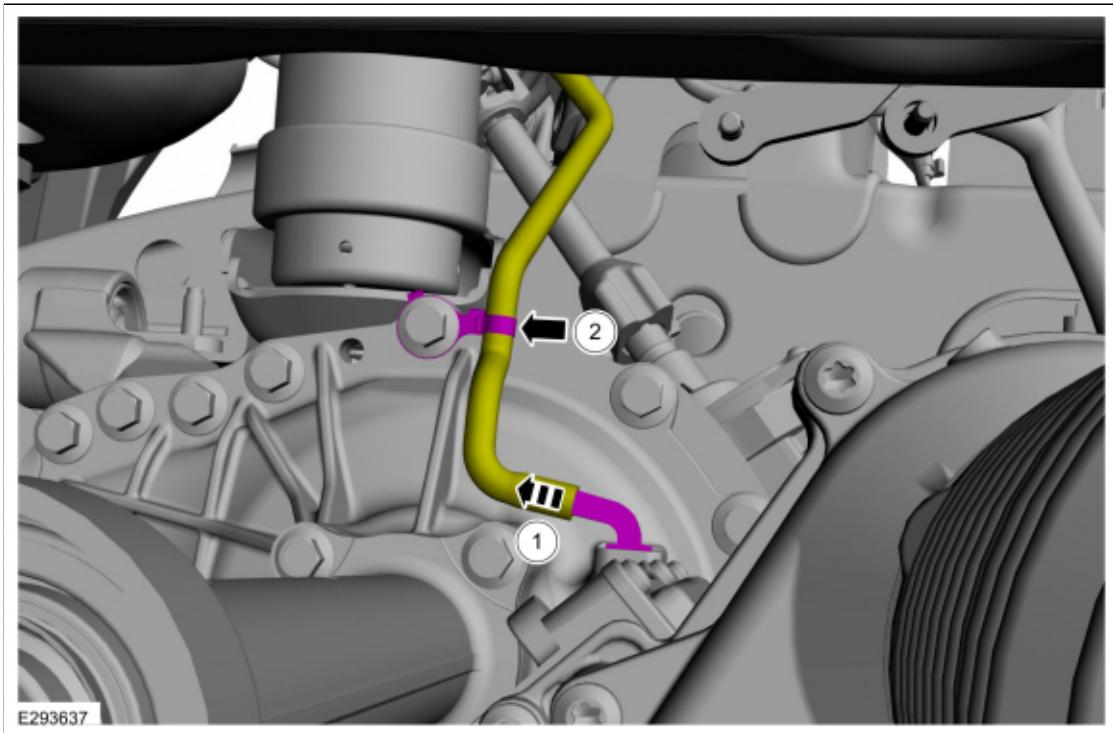

6. Detach the hose from the metal breather tube.

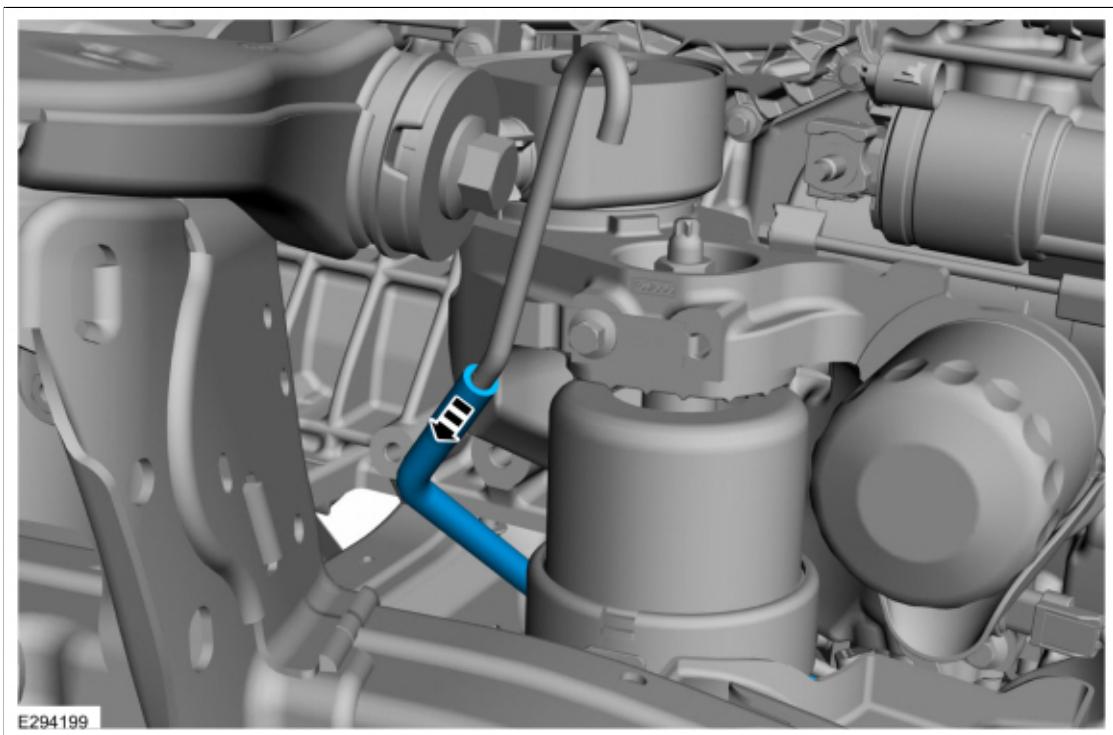

## Installation

1. To install, reverse the removal the procedure.

Copyright © 2019 Ford Motor Company

---