


Brake Caliper**Removal**

NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 21 lb.ft (28 Nm)

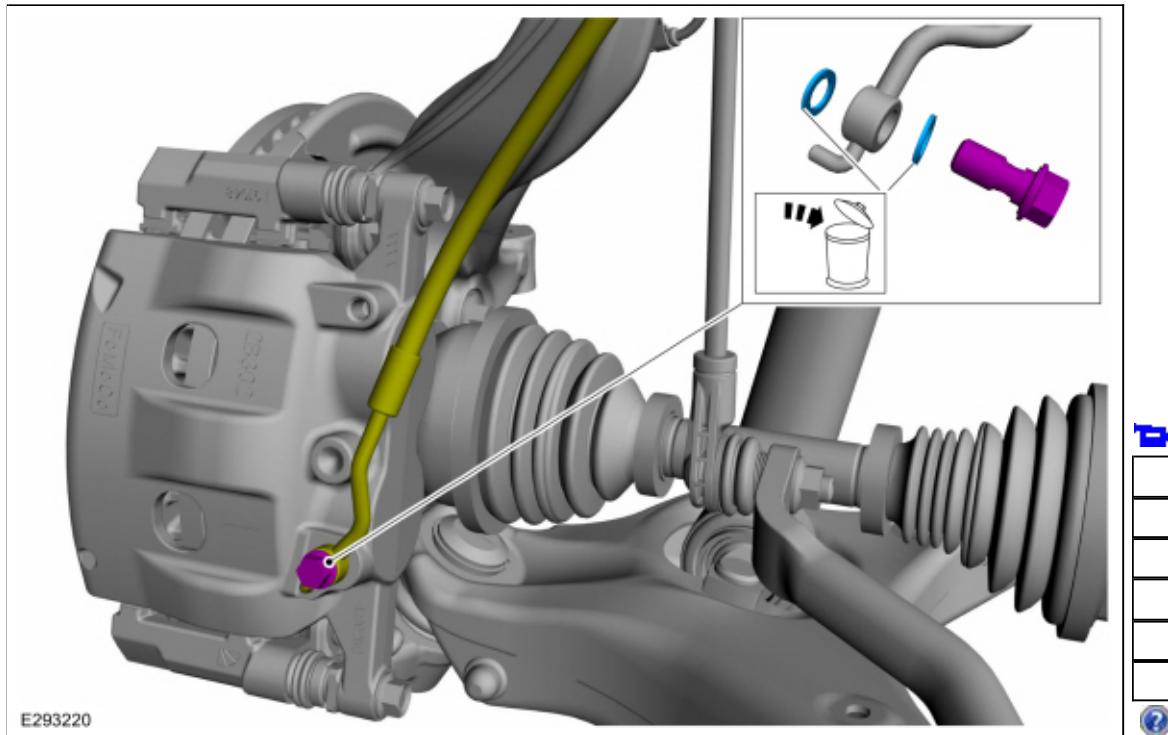

3. **NOTICE: Make sure that all openings are sealed.**

Seal all the openings with clean blanking caps.

4. Remove the bolts and the brake caliper.
Torque: 48 lb.ft (65 Nm)

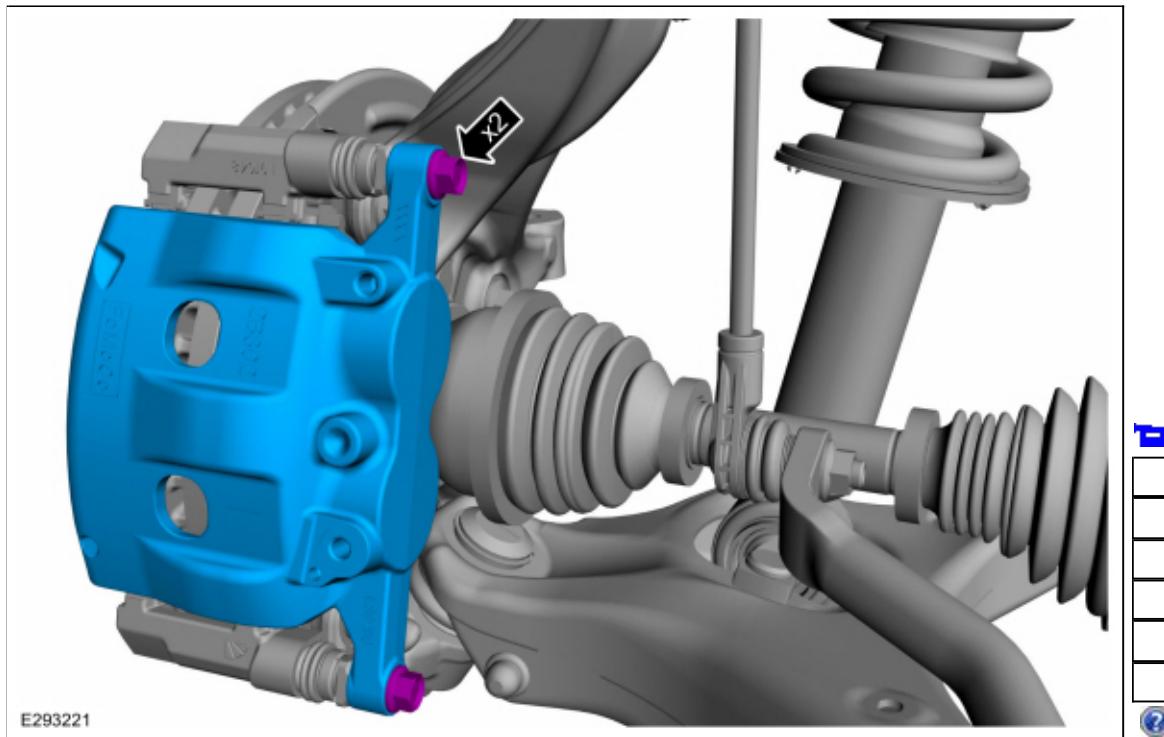

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).

Copyright © 2019 Ford Motor Company

