

Front Brake Flexible Hose**Removal**


NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.

1. **NOTICE:** Make sure that all openings are sealed.


Seal all the openings with clean blanking caps.

2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 21 lb.ft (28 Nm)

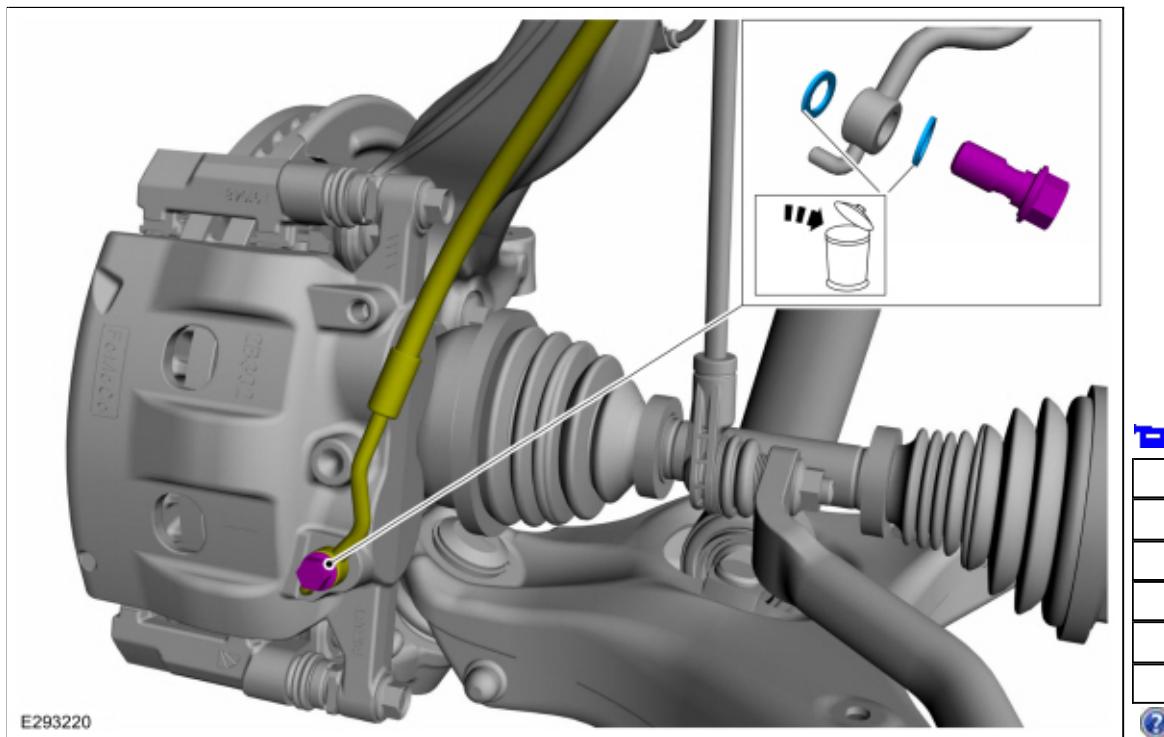

3. Remove the front brake flexible hose.

1. Remove the bolt and detach the front brake hose assembly.
Torque: 22 lb.ft (30 Nm)
2. Remove the nut and detach the front brake hose assembly.
Torque: 18 lb.ft (25 Nm)
3. Disconnect the brake tube fitting and remove the front brake hose assembly.
Torque: 159 lb.in (18 Nm)

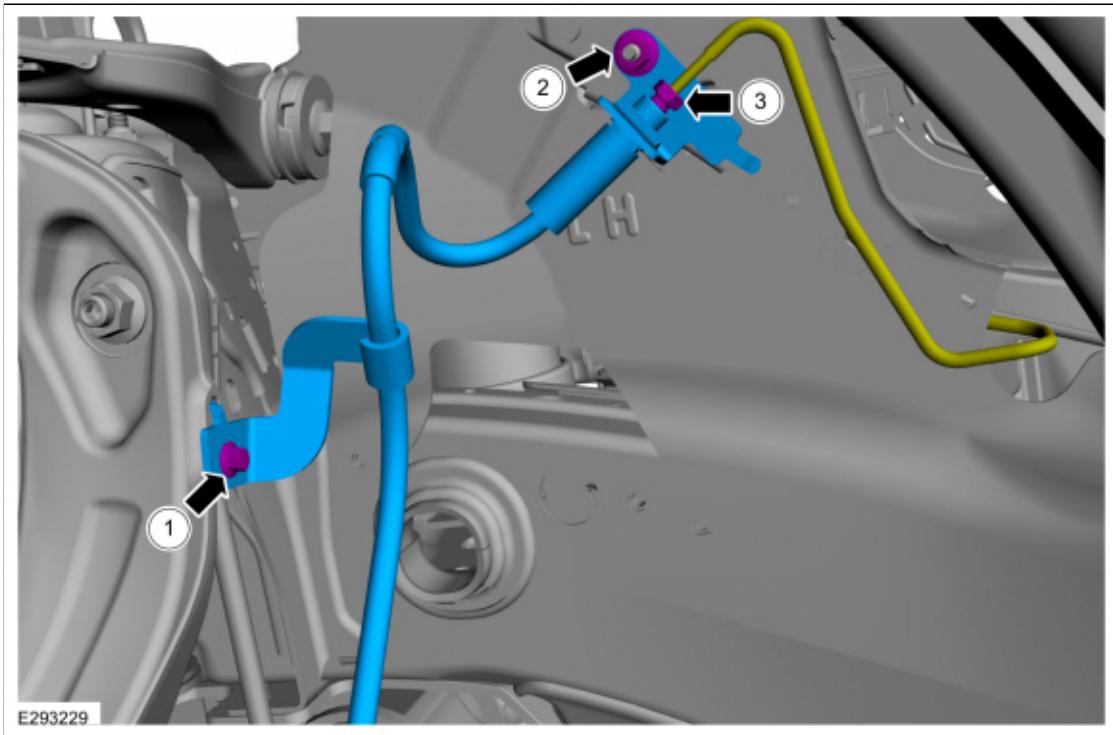

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).

Copyright © 2019 Ford Motor Company

