


### Brake Caliper Anchor Plate

#### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the brake pads.  
Refer to: [Brake Pads](#) (206-04 Rear Disc Brake, Removal and Installation).
2. Remove the bolts and the anchor plate. Discard the bolts.  
*Torque:* 111 lb.ft (150 Nm)

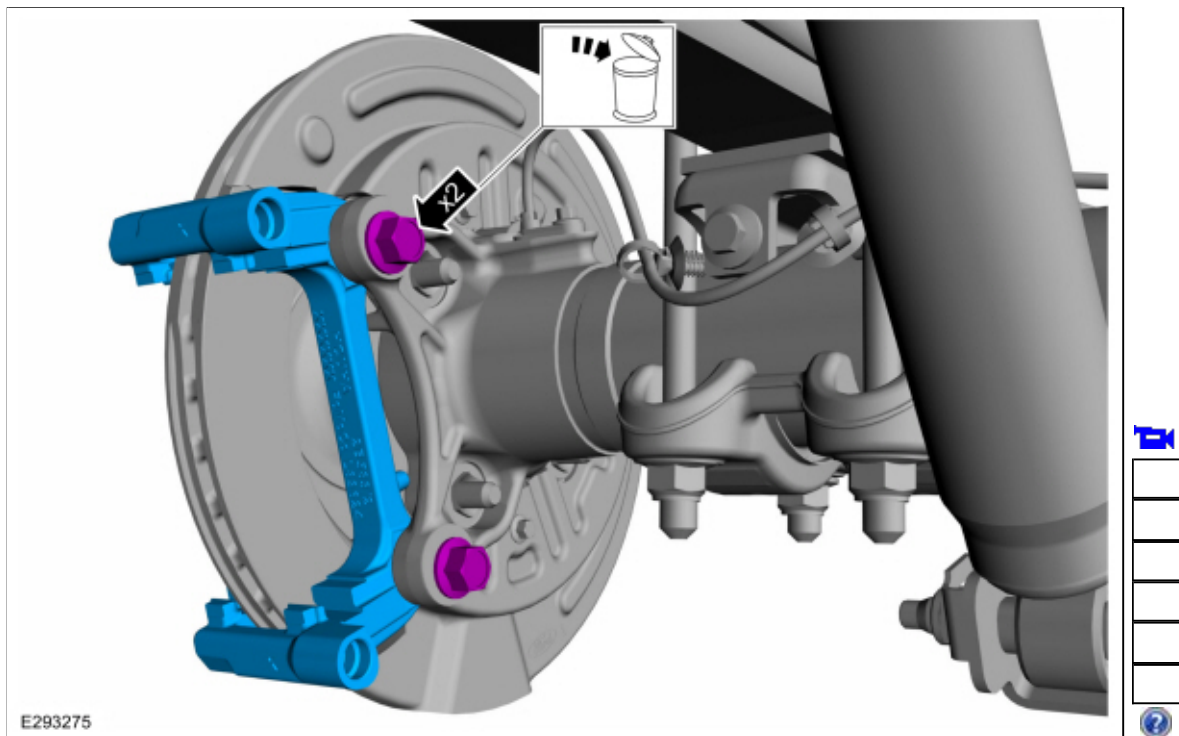

#### Installation

1. To install, reverse the removal procedure.

