

206-04 Rear Disc Brake
Removal and Installation


2019 Ranger
Procedure revision date: 11/15/2018

Brake Disc Shield

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the brake disc.
Refer to: [Brake Disc](#) (206-04 Rear Disc Brake, Removal and Installation).
2. Remove the bolts and the brake disc shield.
Torque: 80 lb.in (9 Nm)

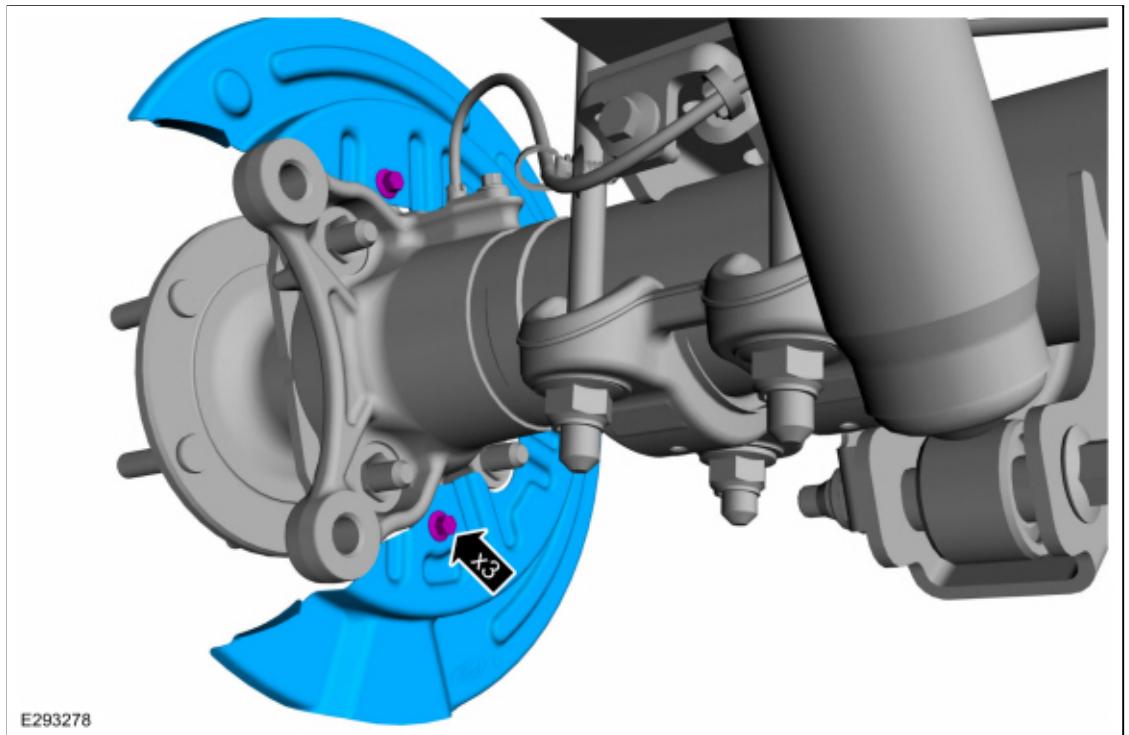

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

