

Rear Brake Inner Flexible Hose


Removal

NOTICE: Make sure that all openings are sealed.


NOTICE: If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.

NOTE: Removal steps in this procedure may contain installation details.

1. Detach the retainer and position aside the harness.

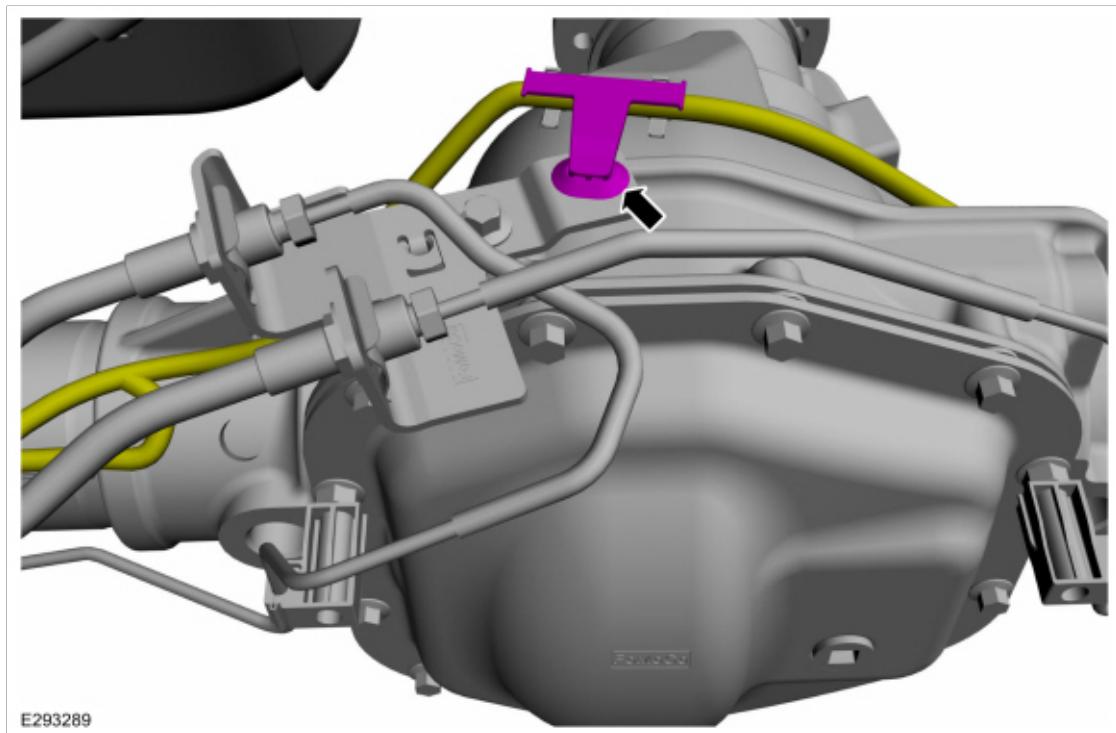


2. Disconnect the 2 brake tube fittings.
Torque: 159 lb.in (18 Nm)

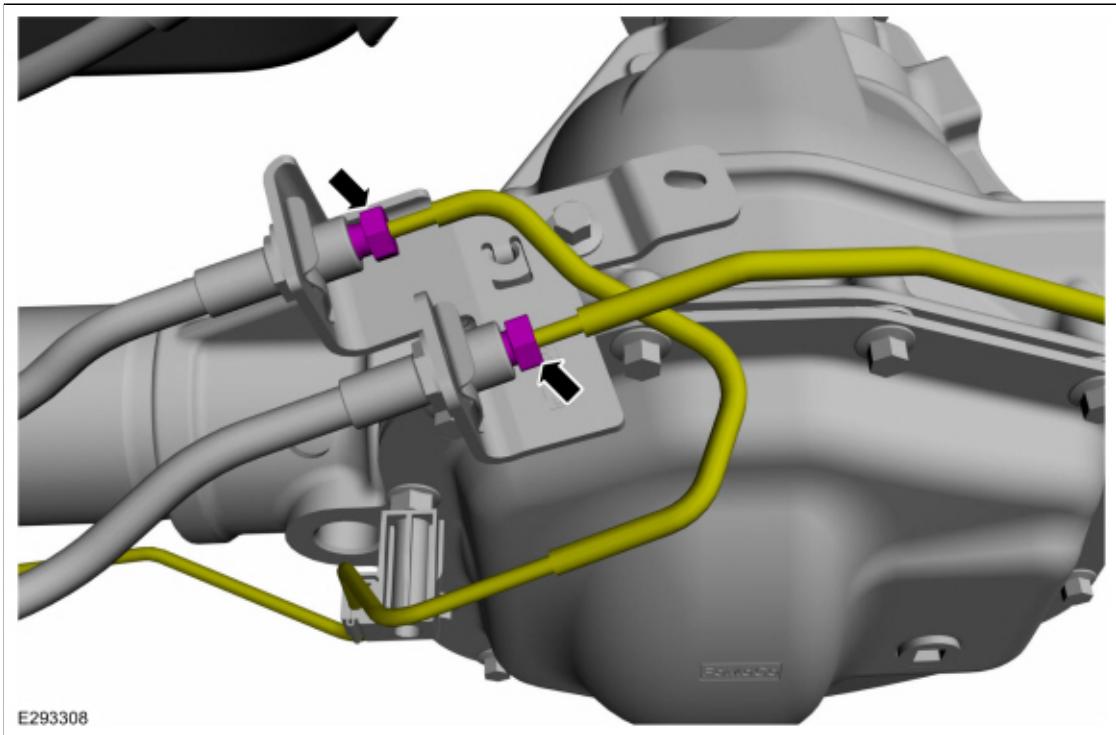

3. Remove the lower bracket bolt.

Torque: 124 lb.in (14 Nm)

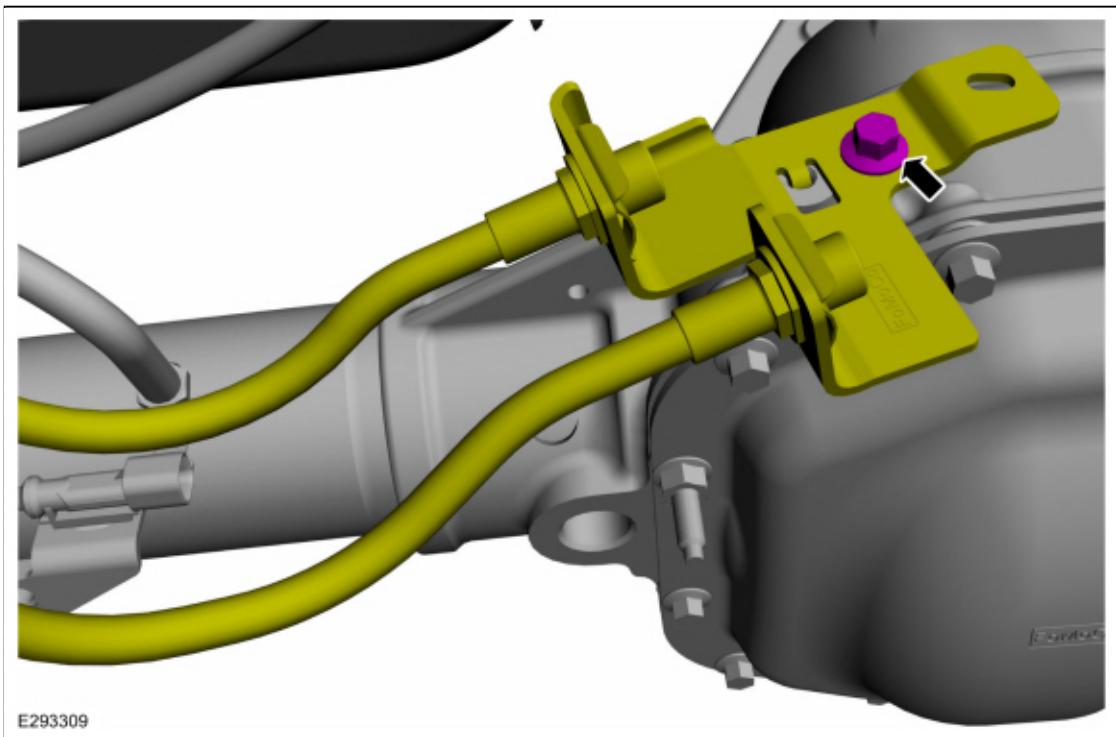


4.

- Remove the inner flexible hose assembly.

- Disconnect the brake tube fittings.

Torque: 159 lb.in (18 Nm)

- Remove the rear brake inner flexible hose mounting clips and the inner flexible hose assembly.

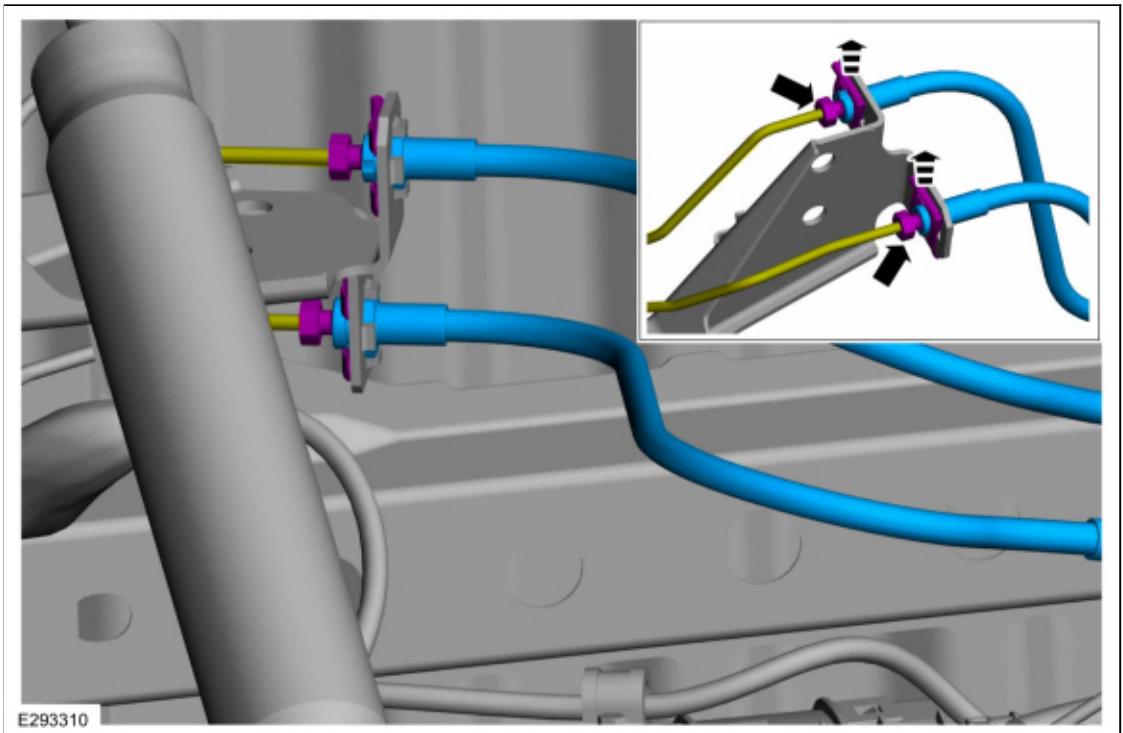

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).

Copyright © 2019 Ford Motor Company

