
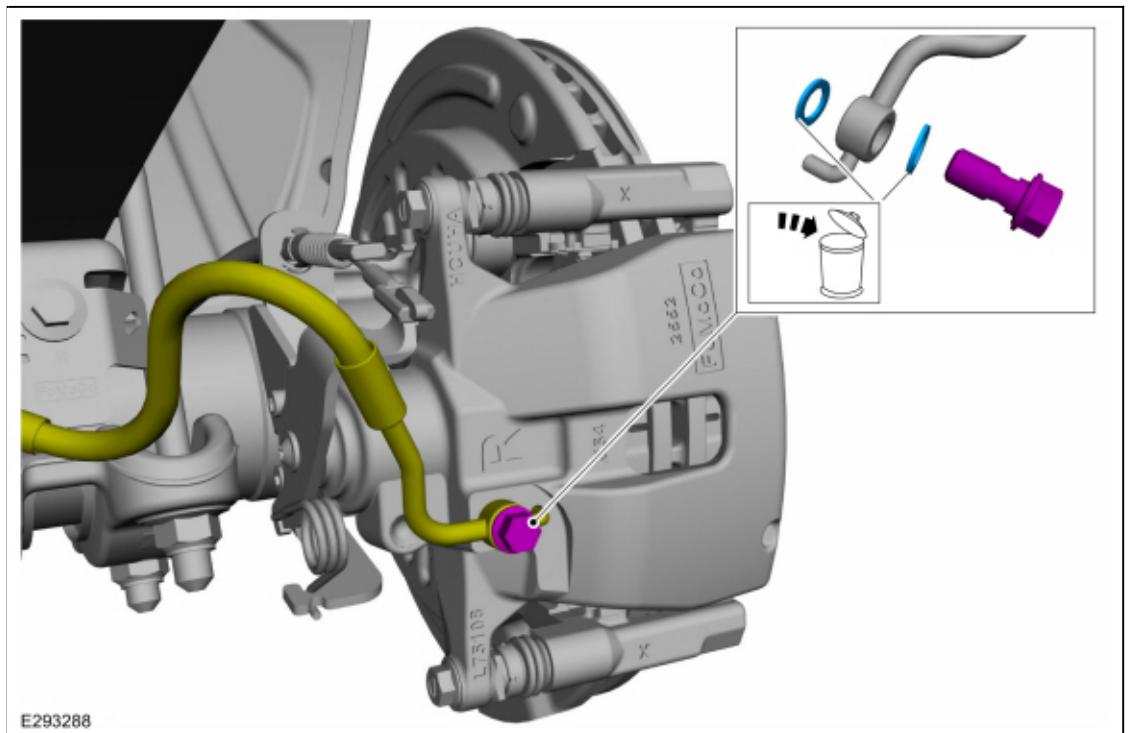


Rear Brake Outer Flexible Hose**Removal****NOTICE:** Make sure that all openings are sealed.**NOTICE:** If the fluid is spilled on the paintwork, the affected area must be immediately washed down with cold water.**NOTE:** Removal steps in this procedure may contain installation details.**Right hand (RH) and left hand (LH) outer brake hoses**

1. Remove the wheel and tire.
Refer to: [Wheel and Tire](#) (204-04A Wheels and Tires, Removal and Installation).
2. Remove the bolt and disconnect the brake hose. Discard the washers.
Torque: 21 lb.ft (28 Nm)


**Right hand (RH) outer brake hose**

3. Detach the wheel speed sensor wiring retainer.

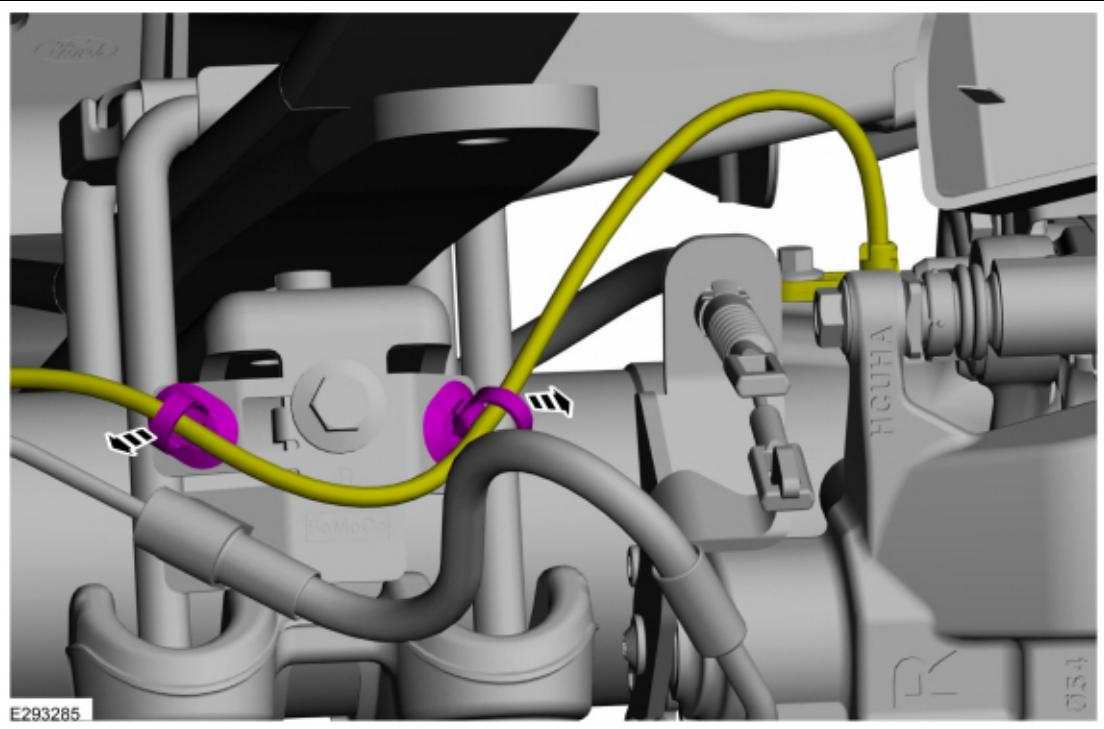

4.

- Detach the brake tube mounting clip.
- Remove the outer brake hose bracket bolt.
Torque: 21 lb.ft (28 Nm)

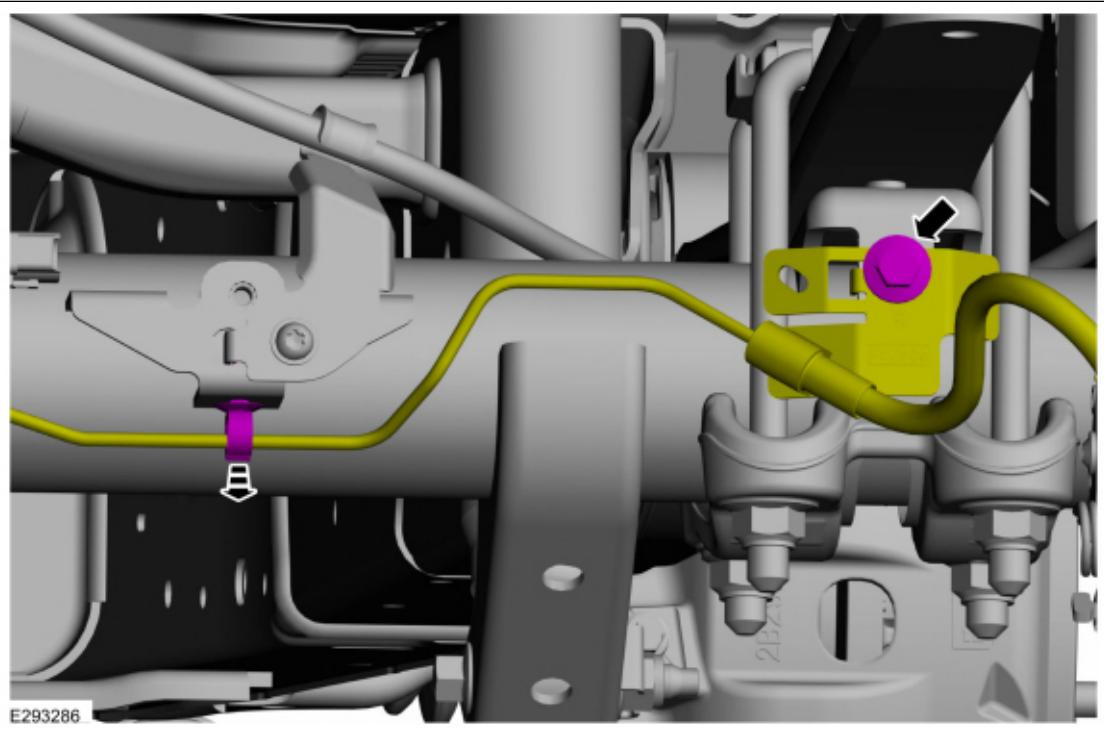


5.

Remove the RH side rear brake outer flexible hose.

- Detach the brake tube mounting clip.
- Disconnect and remove the brake tube fitting.


Torque: 159 lb.in (18 Nm)

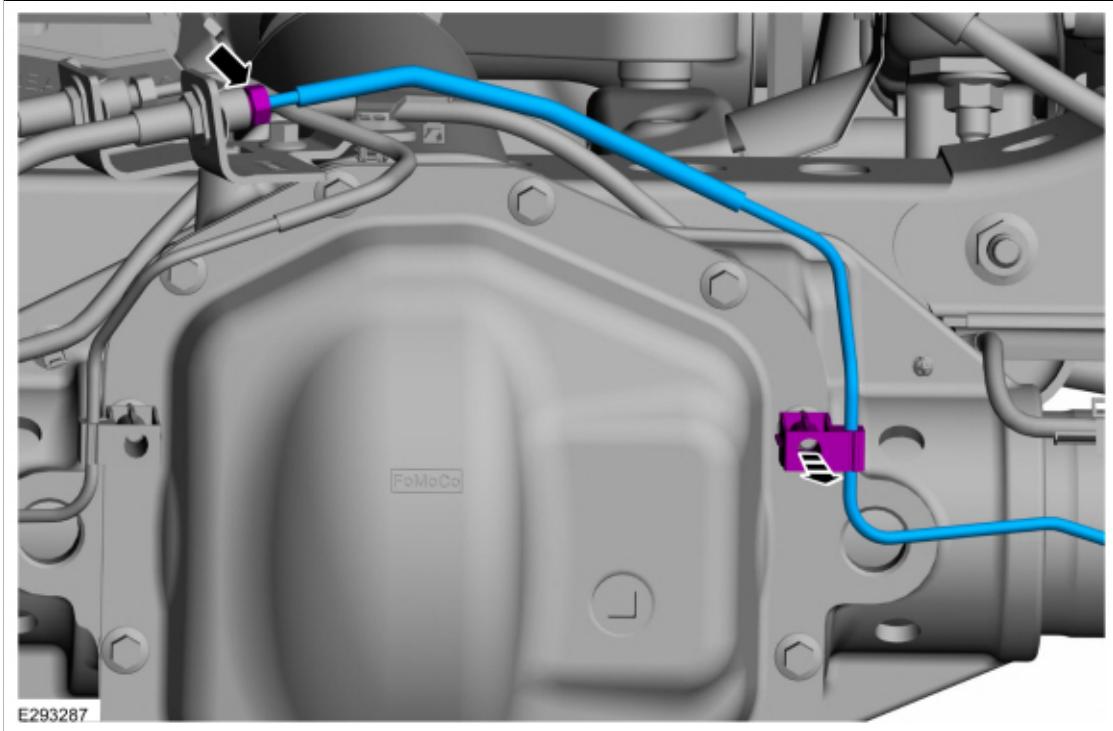

Left hand (LH) outer brake hose


6. Detach the wheel speed sensor wiring retainer.



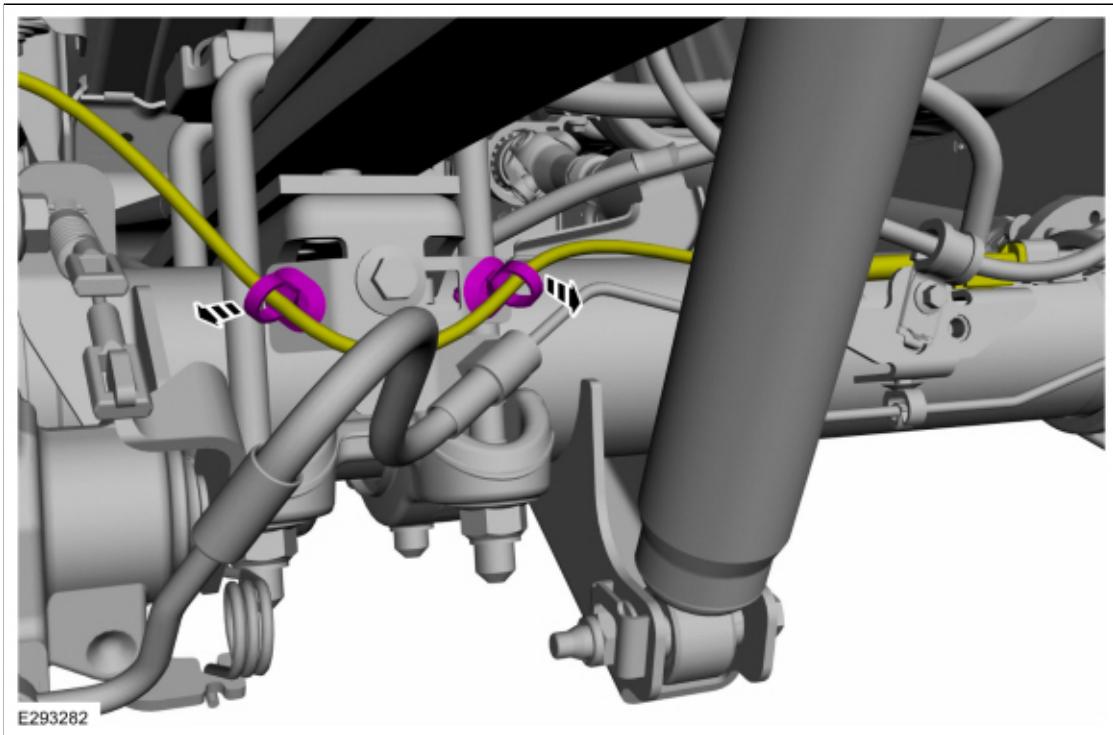

7.

- Detach the brake tube mounting clip.
- Remove the outer brake hose bracket bolt.
Torque: 21 lb.ft (28 Nm)

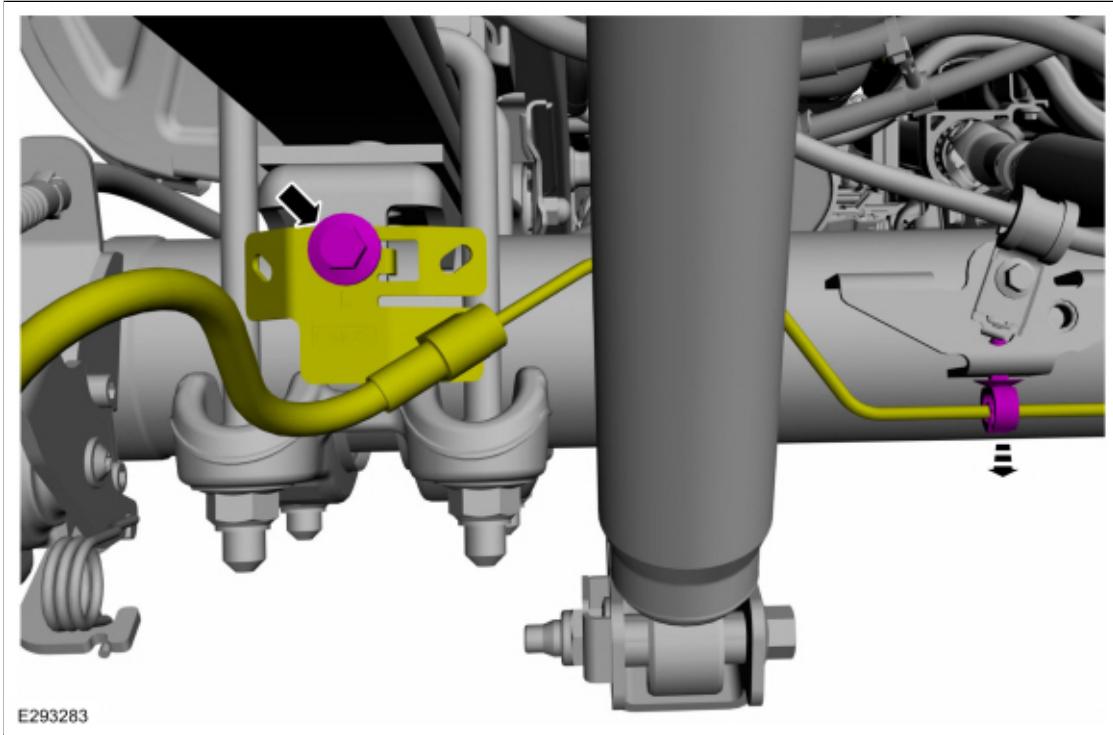


8.

Remove the LH side rear brake outer flexible hose.

- Detach the brake tube mounting clip.
- Disconnect and remove the brake tube fitting.

Torque: 159 lb.in (18 Nm)

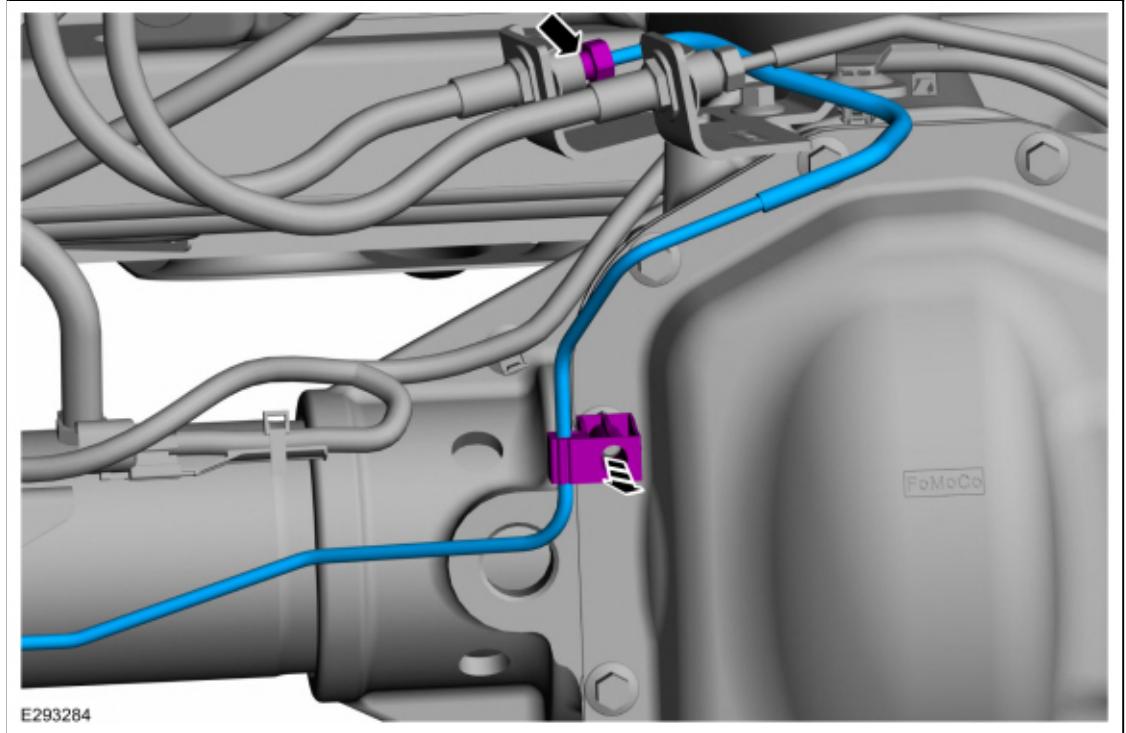

Installation

1. To install, reverse the removal procedure.
2. Bleed the brake system.
Refer to: [Brake System Pressure Bleeding](#) (206-00 Brake System - General Information, General Procedures).

Copyright © 2019 Ford Motor Company

