


Parking Brake Front Cable

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the floor console.
Refer to: [Floor Console](#) (501-12 Instrument Panel and Console, Removal and Installation).
2. Remove the nut.

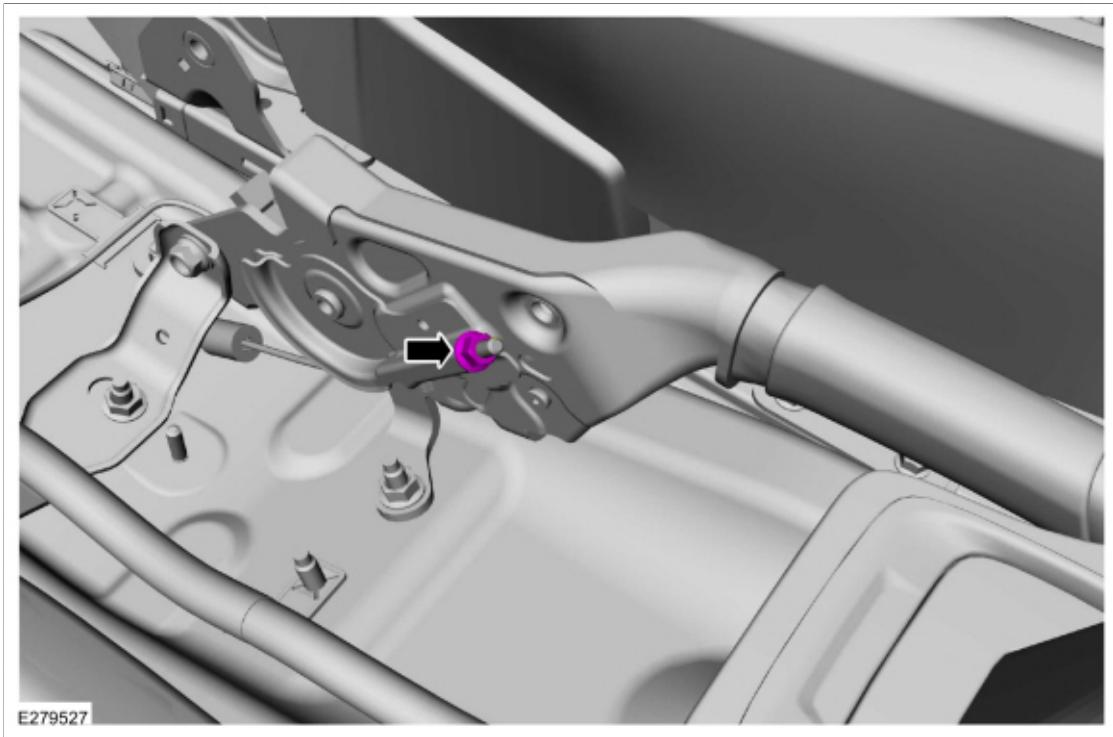


3. Remove the nut.
Torque: 17 lb.ft (23 Nm)




4. Detach the rear cables from the equalizer.

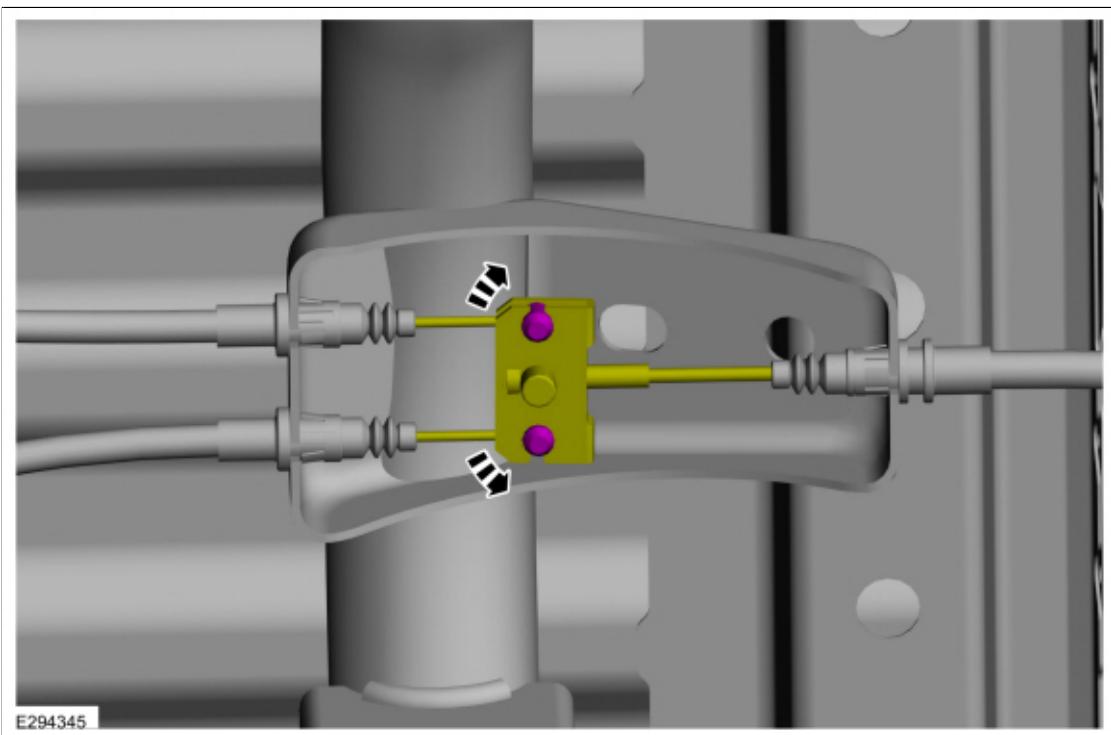


5. Remove the clip and detach the front cable from the bracket.

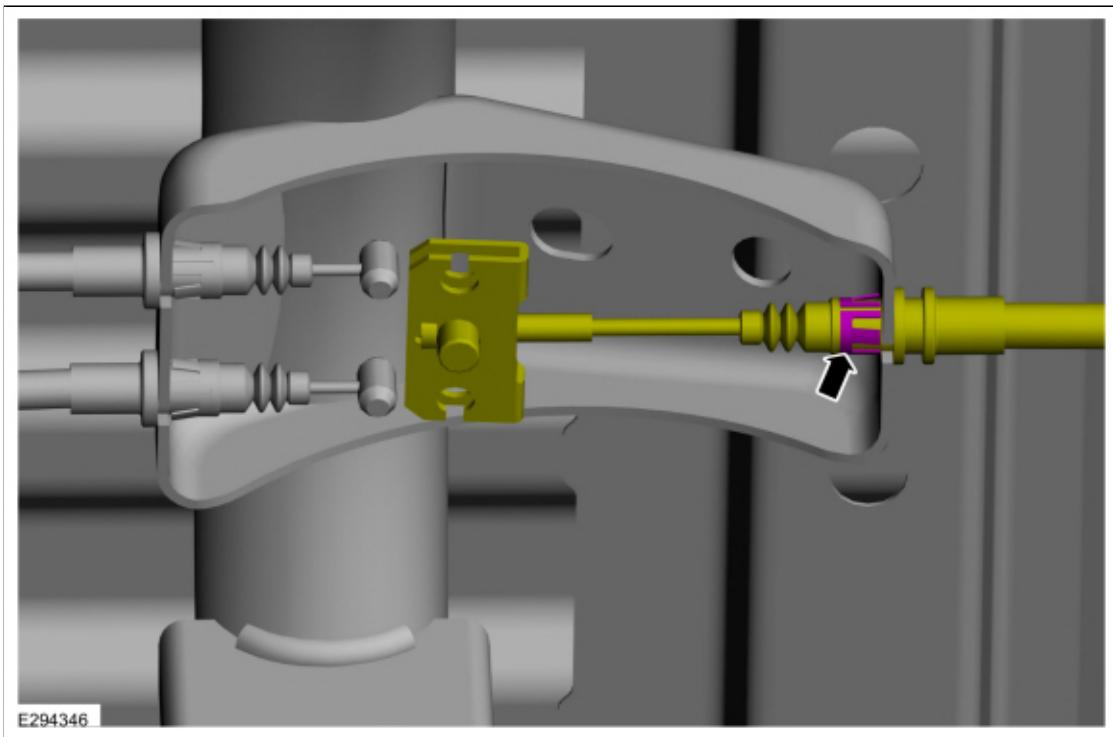

6. Remove the front cable routing bracket nuts.
Torque: 97 lb.in (11 Nm)

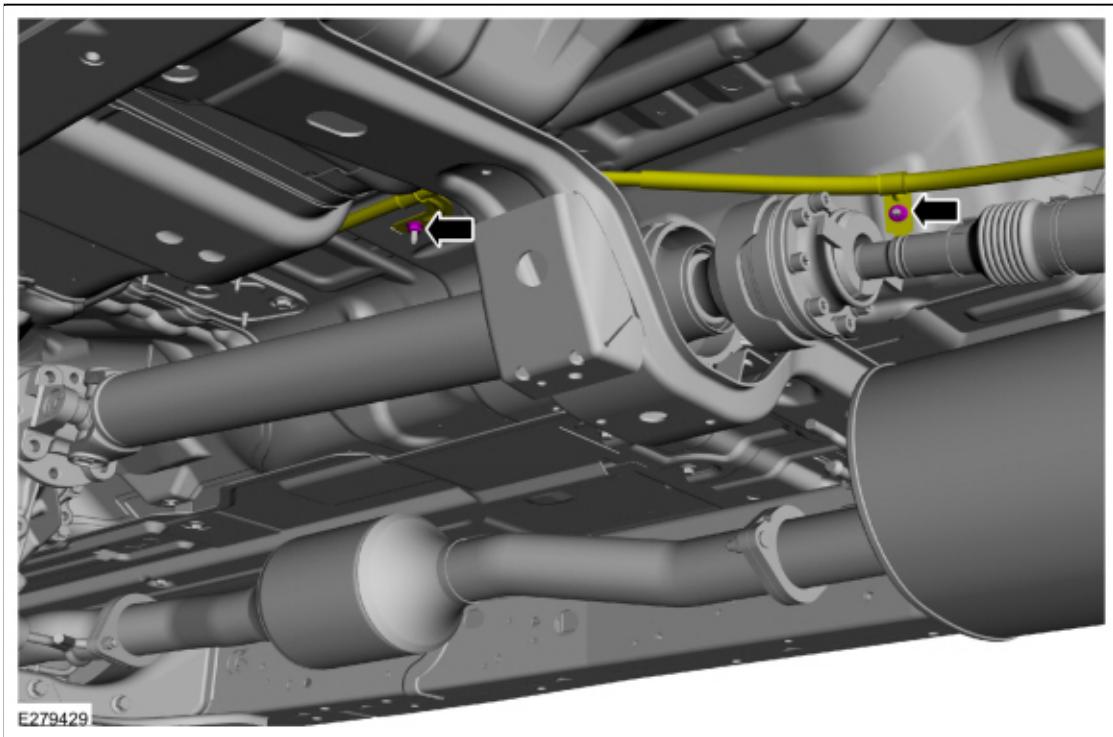

7. Remove the bolts and the front parking brake cable.
Torque: 159 lb.in (18 Nm)

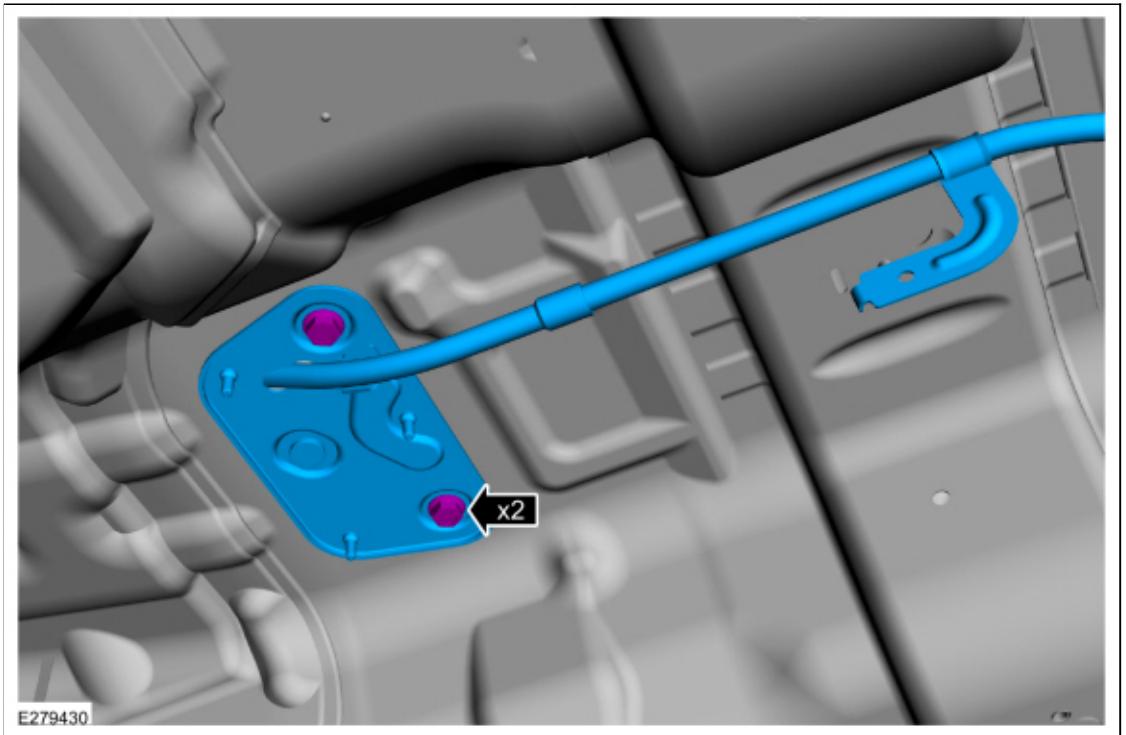

Installation

1. To install, reverse the removal procedure.
2. Before installing the floor console upper trim, adjust the parking brake cables.

Refer to: [Parking Brake Cable Adjustment](#) (206-05 Parking Brake and Actuation, General Procedures).

Copyright © 2019 Ford Motor Company

