

Parking Brake Rear Cables

Special Tool(s) / General Equipment


Interior Trim Remover

Removal


Both Sides

NOTE: LH cable shown, RH similar.


1. Detach the clips and position the trim panel upward to gain access to the cable adjustment nut. Use the General Equipment: Interior Trim Remover

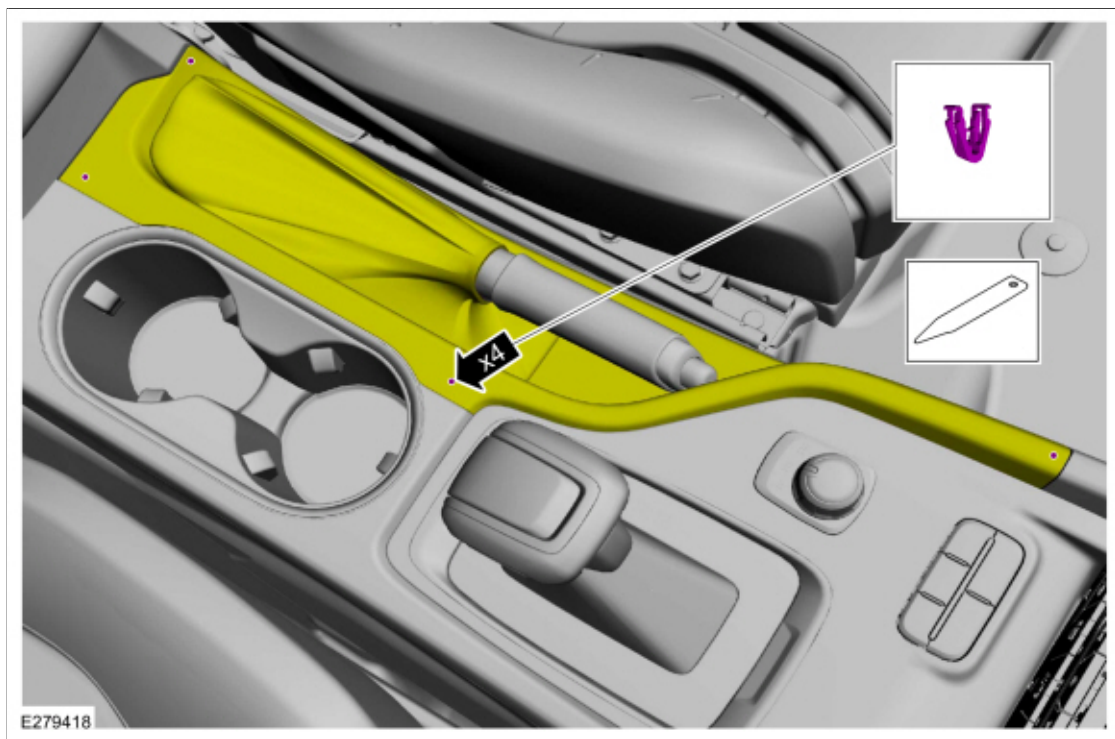


2. Remove the nut.

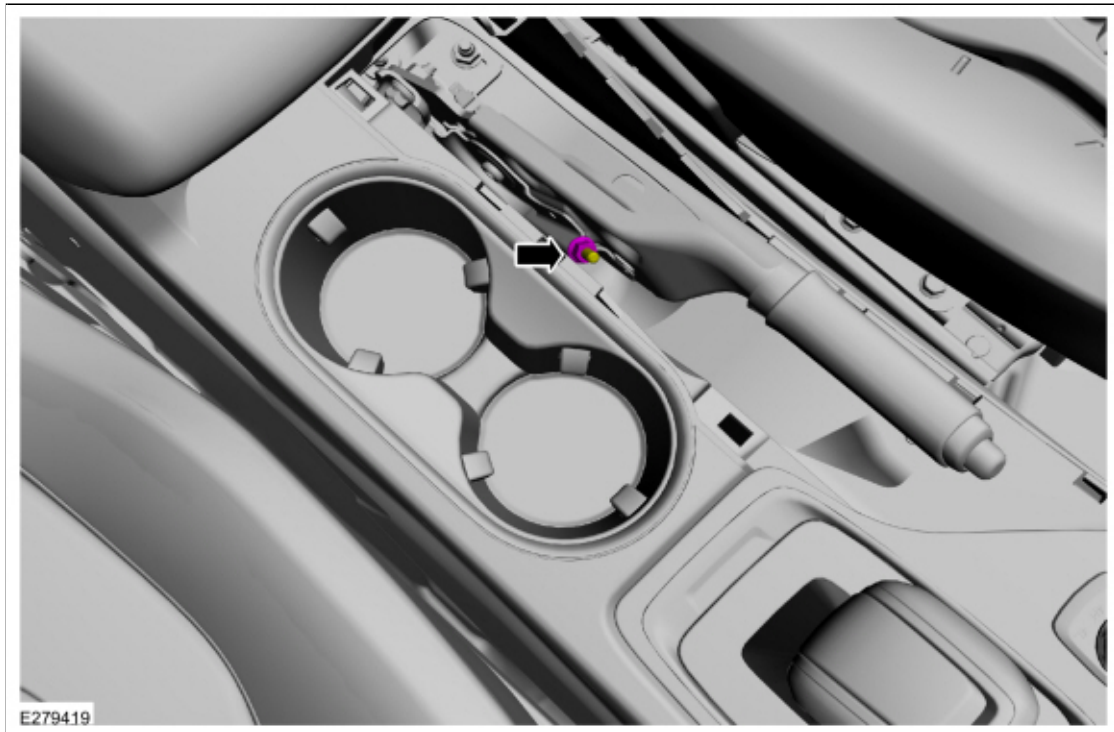

3. Detach the rear cable from the equalizer.

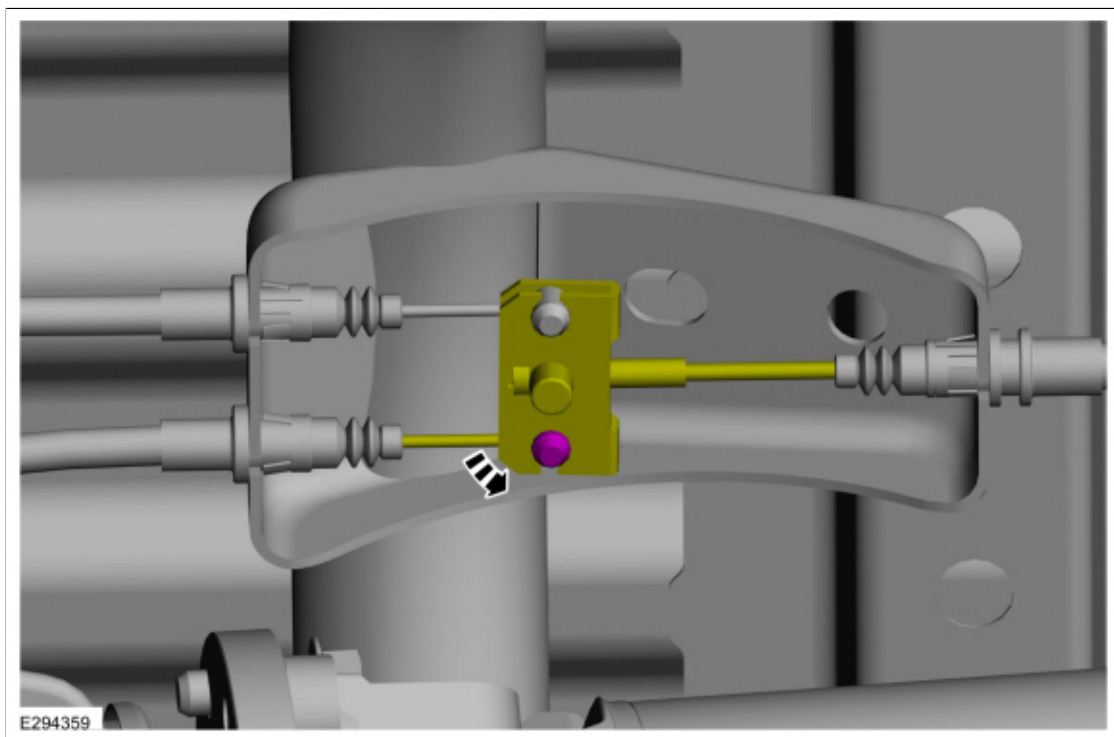


4.
 1. Pull the parking brake lever upward.
 2. Disconnect the parking brake cable from the lever.
 3. Press inward on the tabs and detach the cable.

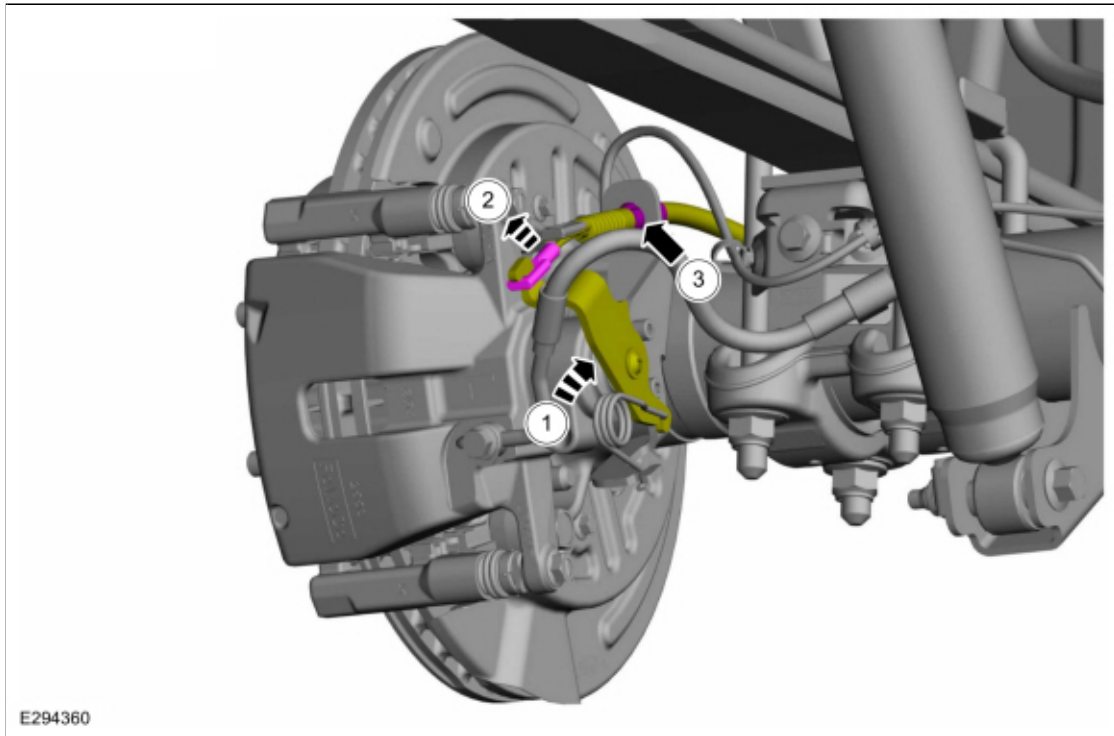


LH Side

5. Remove the parking brake cable mounting bolts.
Torque: 17 lb.ft (23 Nm)

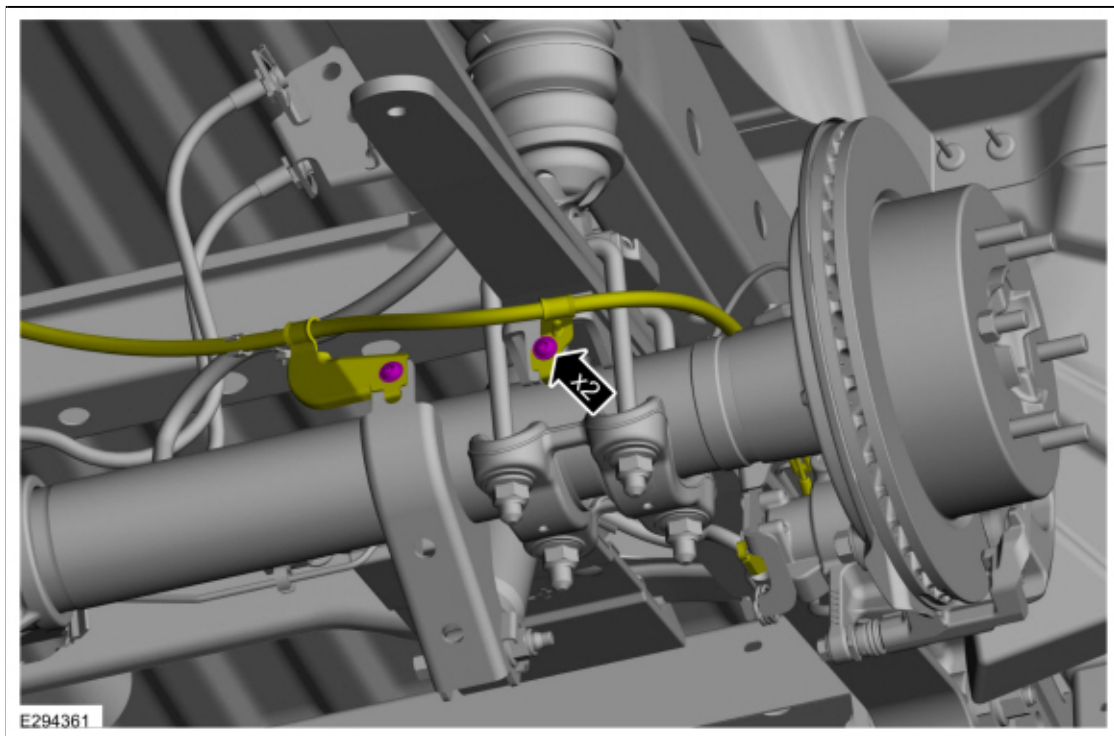


RH Side

6. Remove the parking brake cable mounting bolt.
Torque: 17 lb.ft (23 Nm)

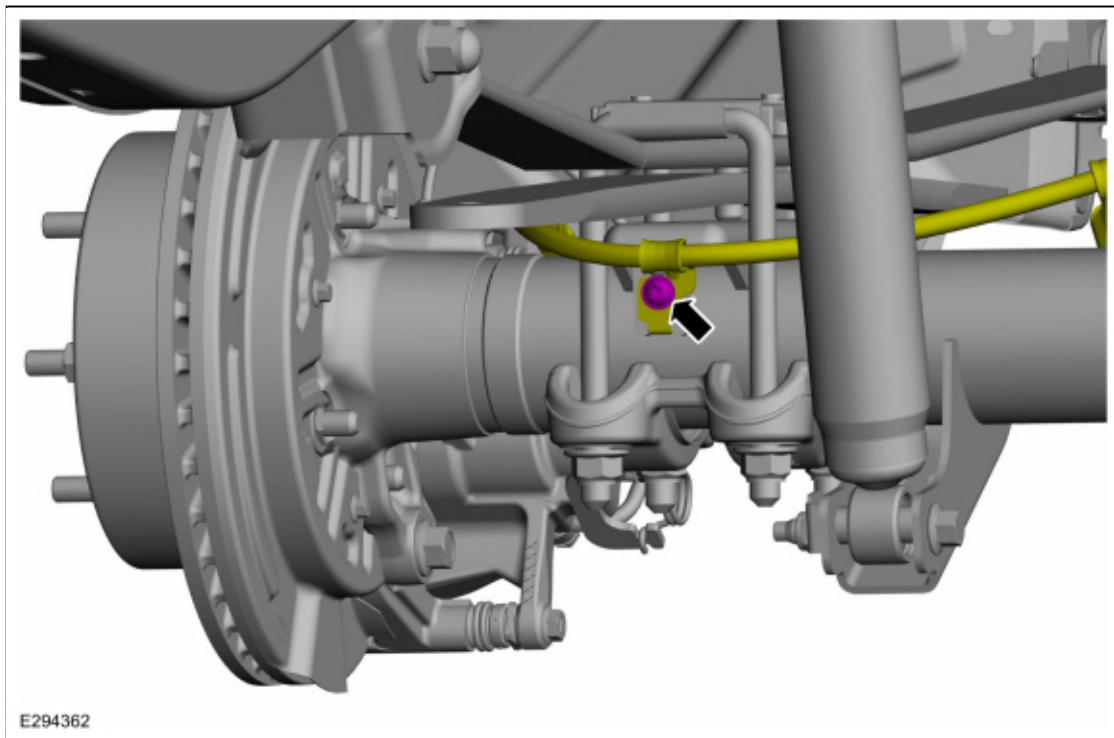


7. Remove the parking brake cable mounting bolt.
Torque: 17 lb.ft (23 Nm)

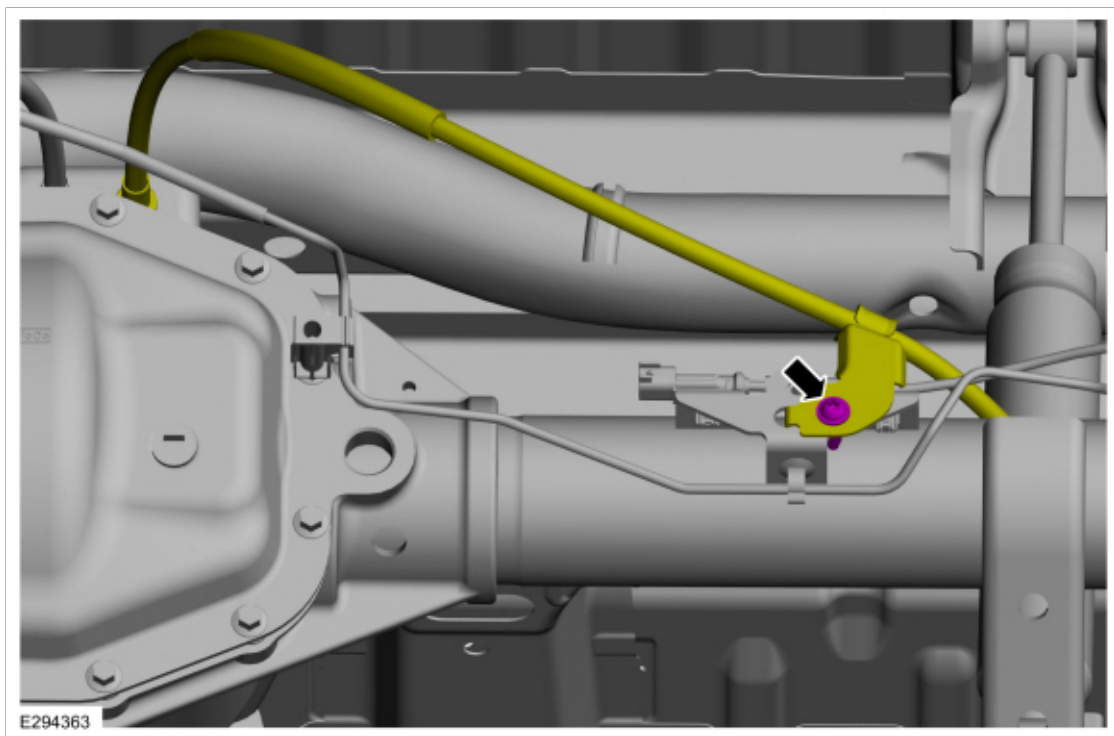

Both Sides

8. **NOTE:** LH cable shown, RH similar.

Remove the retainer and the rear parking brake cable.

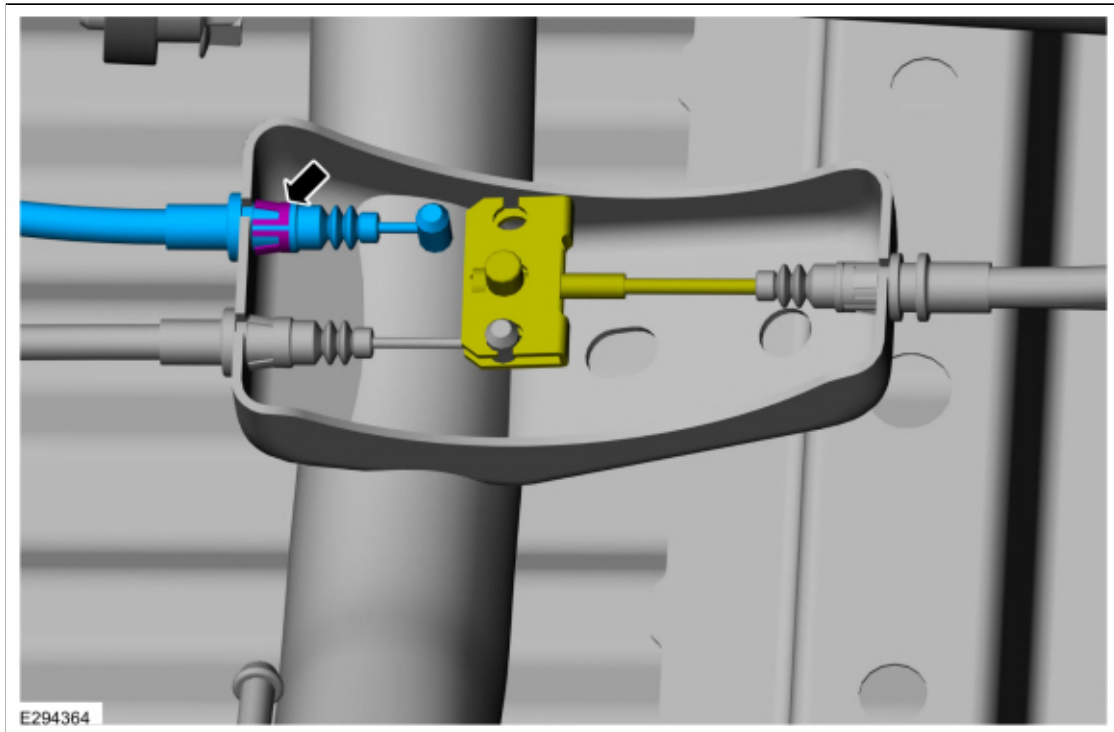**Installation**

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

