

Front Wheel Speed Sensor


Base Part Number: 2C204

Removal


NOTE: Removal steps in this procedure may contain installation details.

NOTE: LH shown, RH similar.


1. Disconnect the electrical connector.

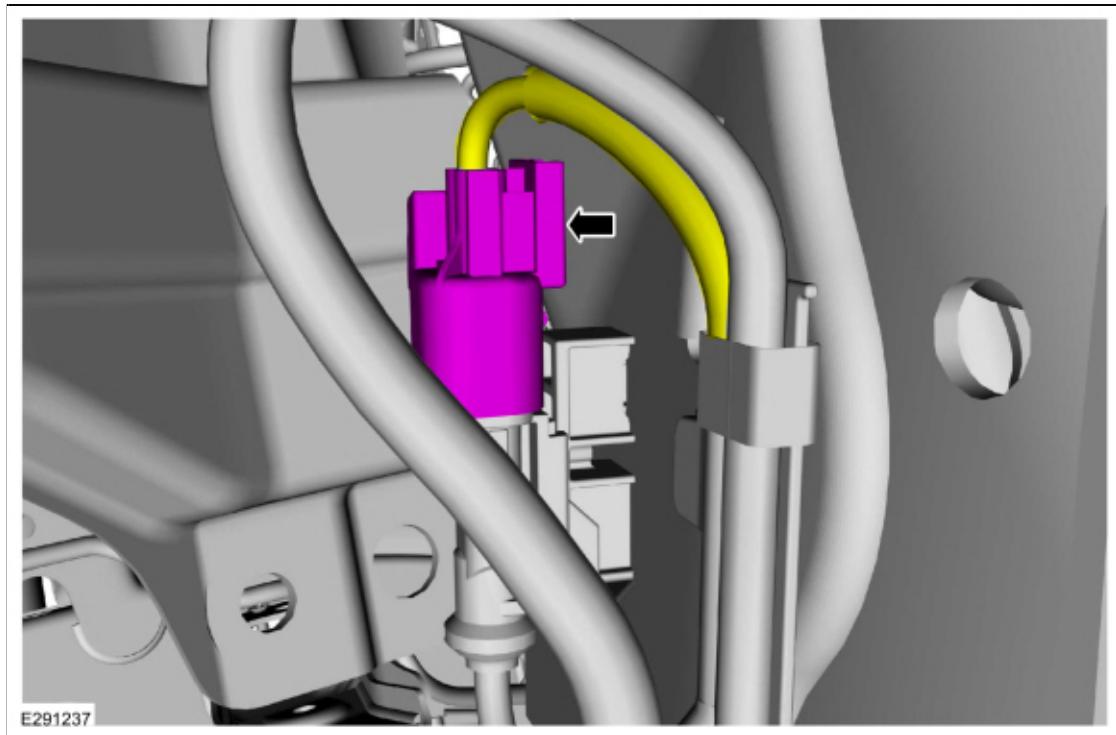


2. Detach the electrical connector bracket .

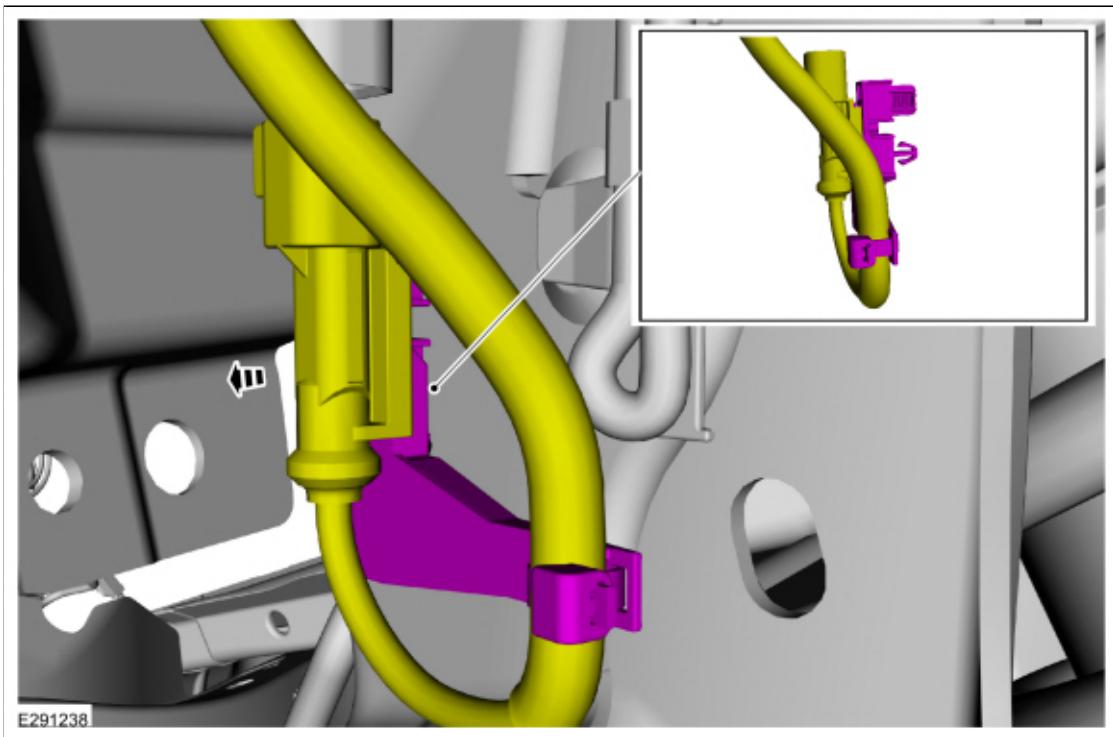


3. Detach the harness pin-type retainers and remove the harness routing bracket bolt.
Torque: 53 lb.in (6 Nm)

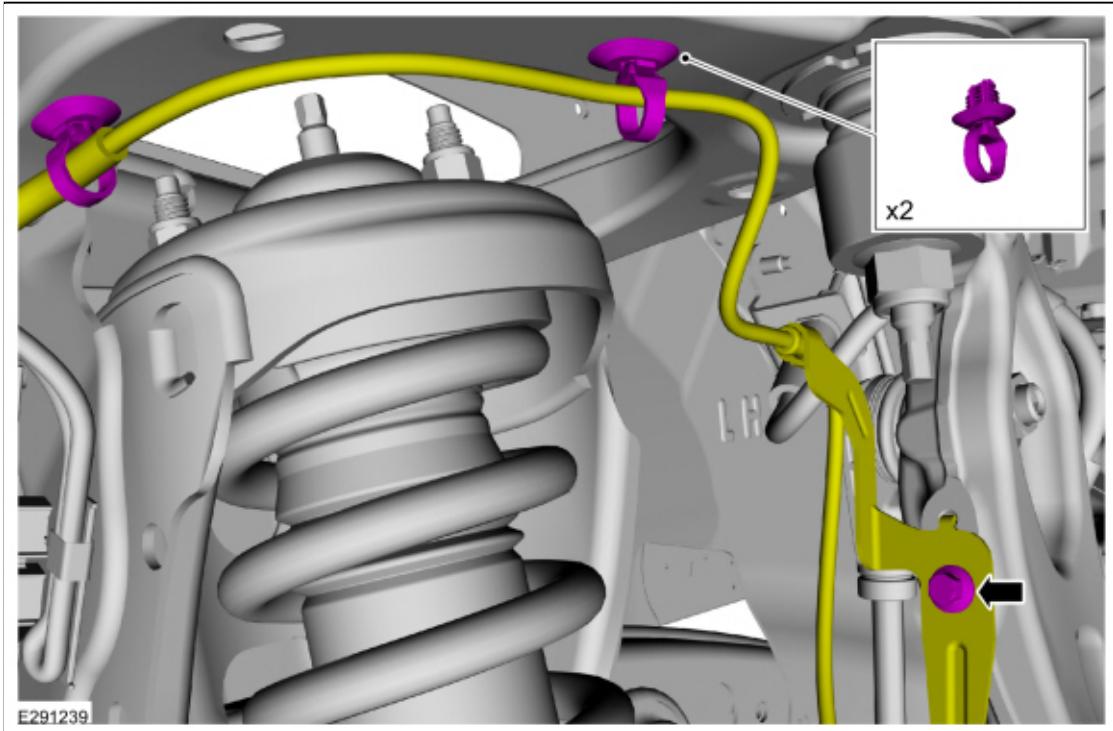

4. Using compressed air, clean the area surrounding the front wheel speed sensor.

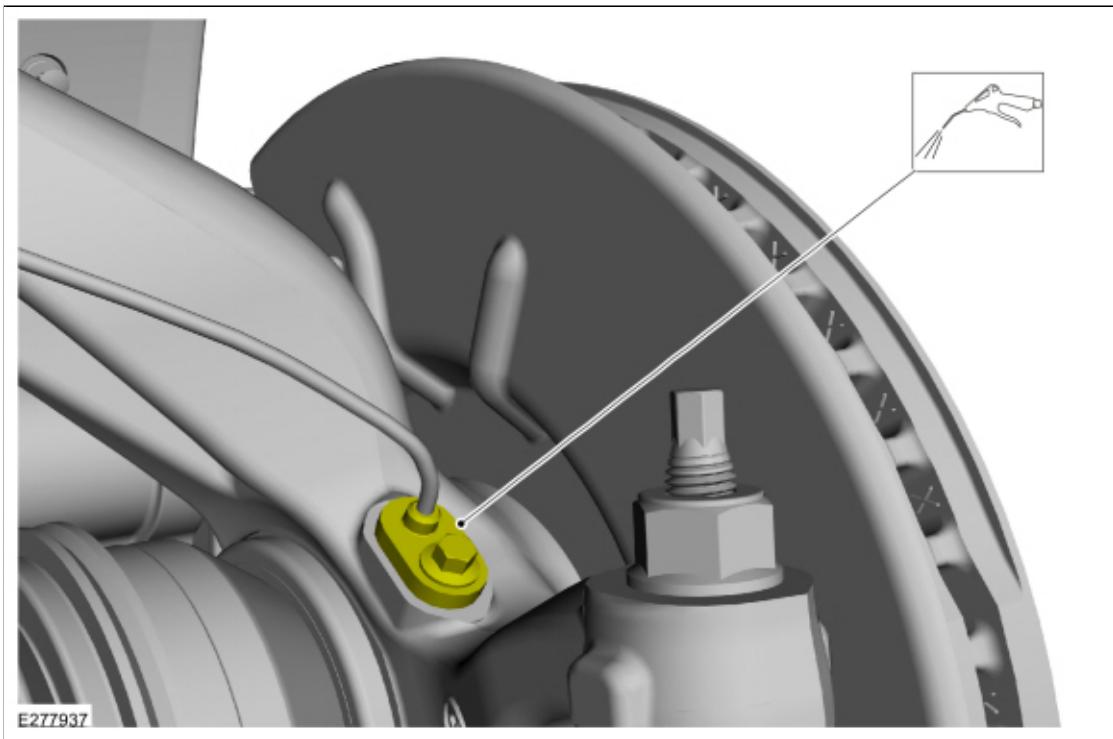


5. Remove the bolt and the front wheel speed sensor.
Torque: 53 lb.in (6 Nm)

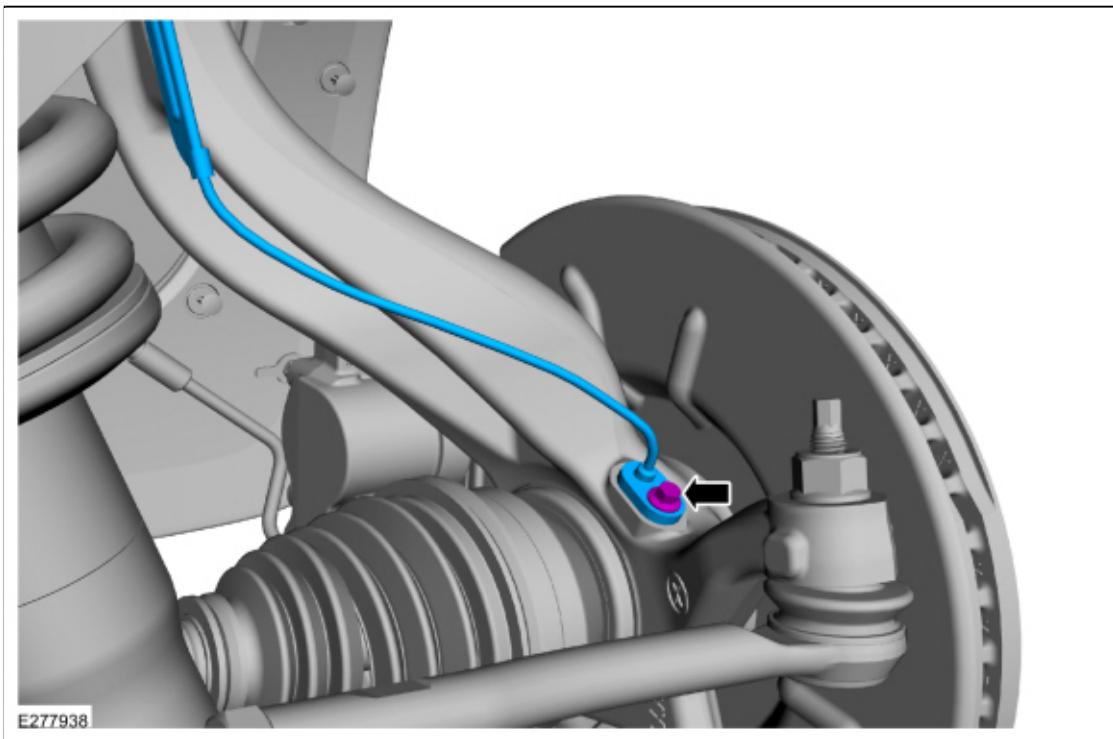

Installation

1. Before installing a new sensor, inspect the sensor housing to make sure the sensor cavity is clean and

free of foreign material.

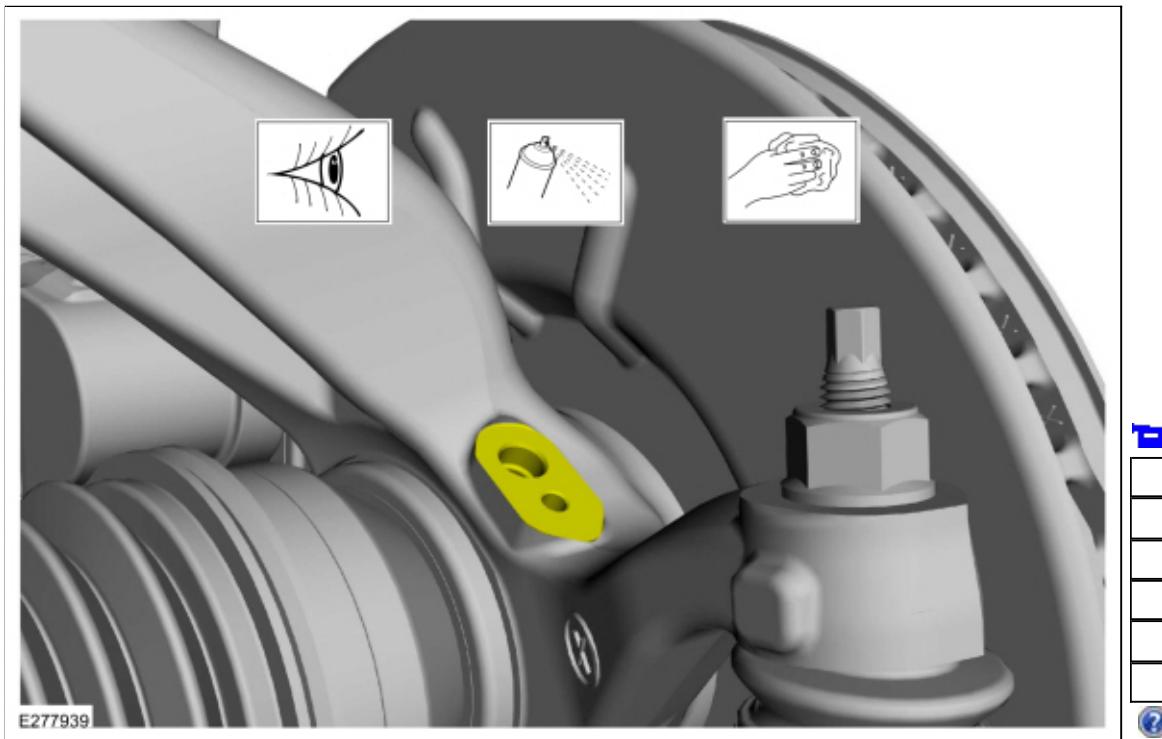

2. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

