

Rear Wheel Speed Sensor


Base Part Number: 2C190

Removal

NOTE: Removal steps in this procedure may contain installation details.


NOTE: LH shown, RH similar.

1. Disconnect the electrical connector and detach the connector retainer.

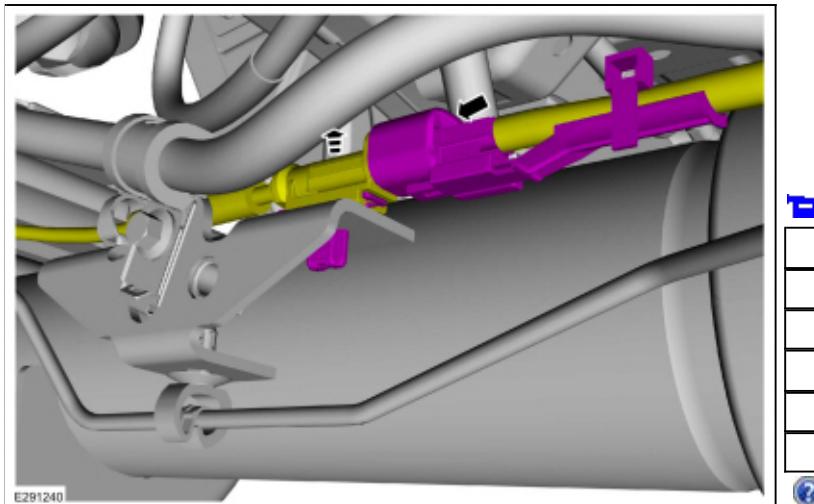


2. Detach the harness pin-type retainers.




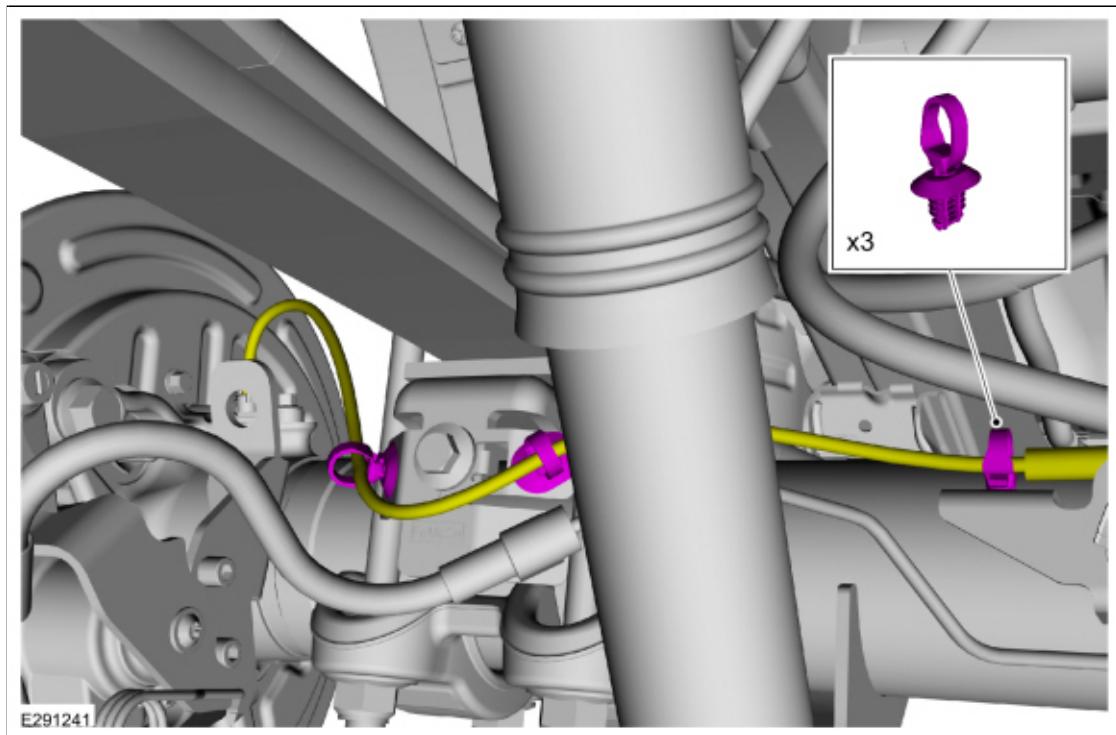

3. Using compressed air, clean the area surrounding the rear wheel speed sensor.

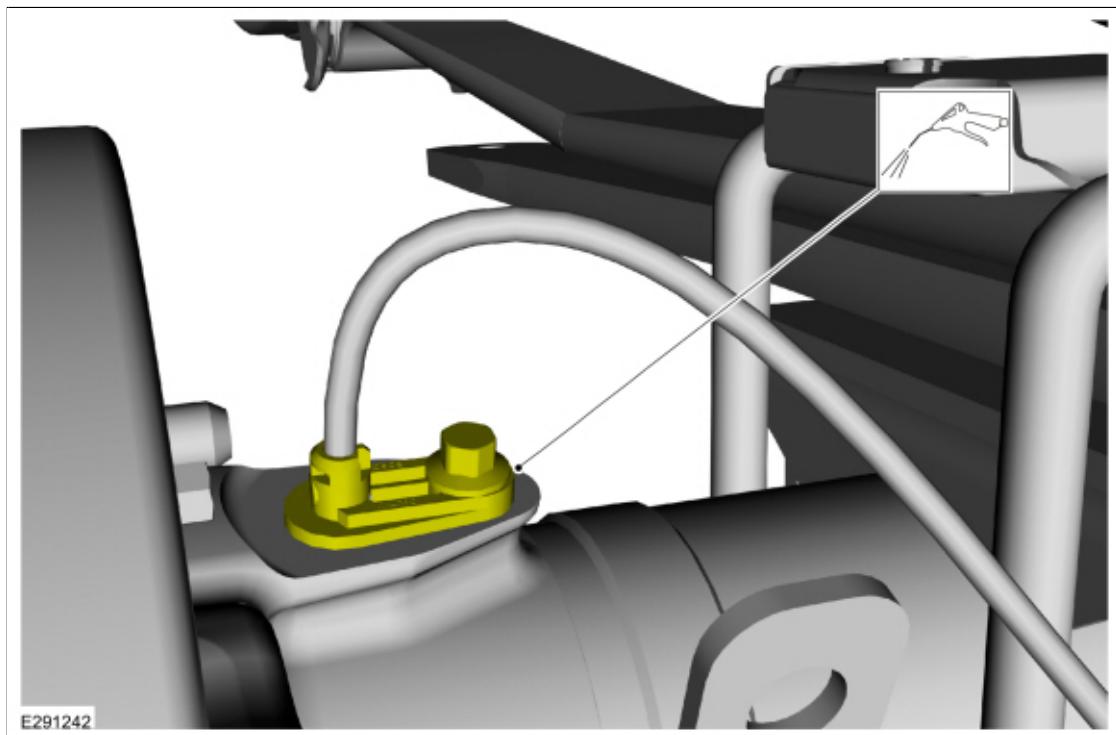


4. Remove the bolt and the wheel speed sensor.
Torque: 71 lb.in (8 Nm)

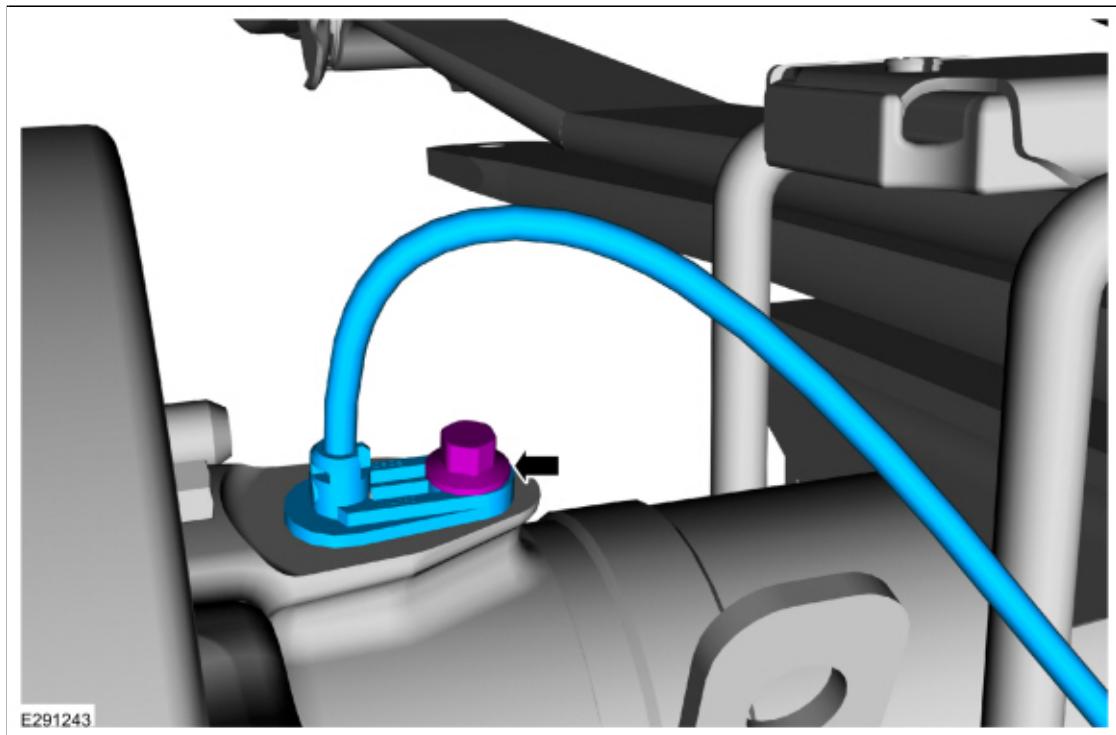

Installation

1. Before installing a new sensor, inspect the sensor housing to make sure the sensor cavity is clean and free of foreign material.

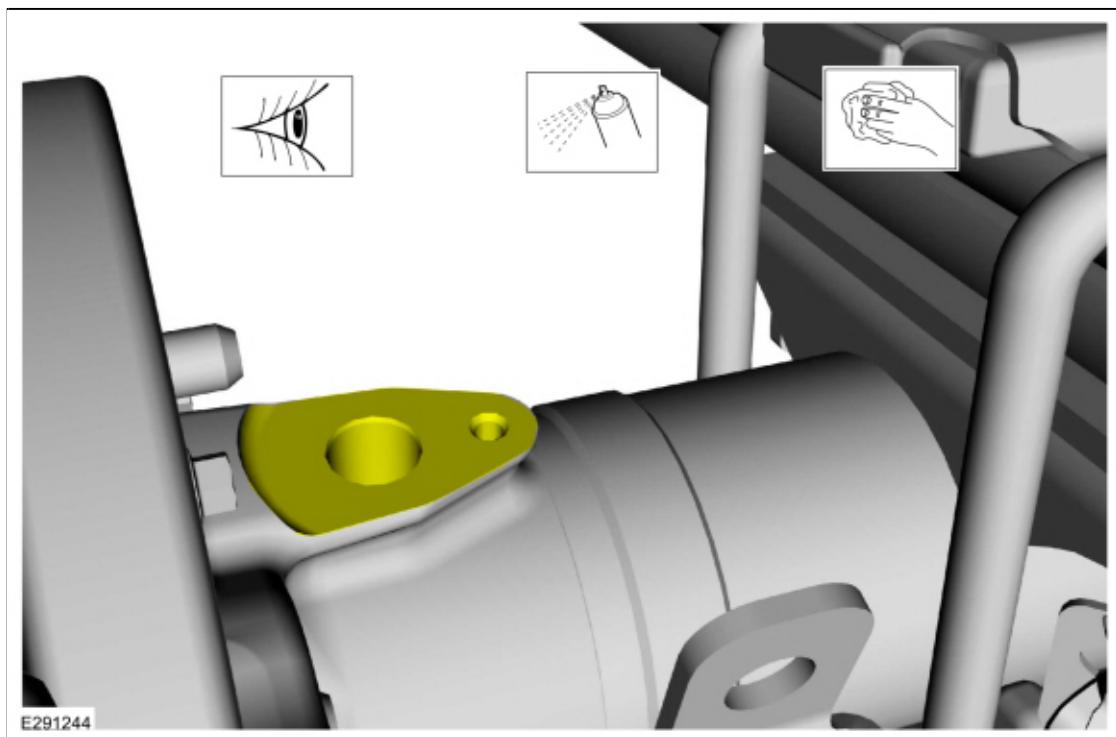

2. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
