

211-05 Steering Wheel and Column Electrical Components
Removal and Installation


2019 Ranger
Procedure revision date: 10/31/2018

Ignition Switch - Vehicles With: Keyless Entry and Push Button Start


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the steering column opening trim panel.

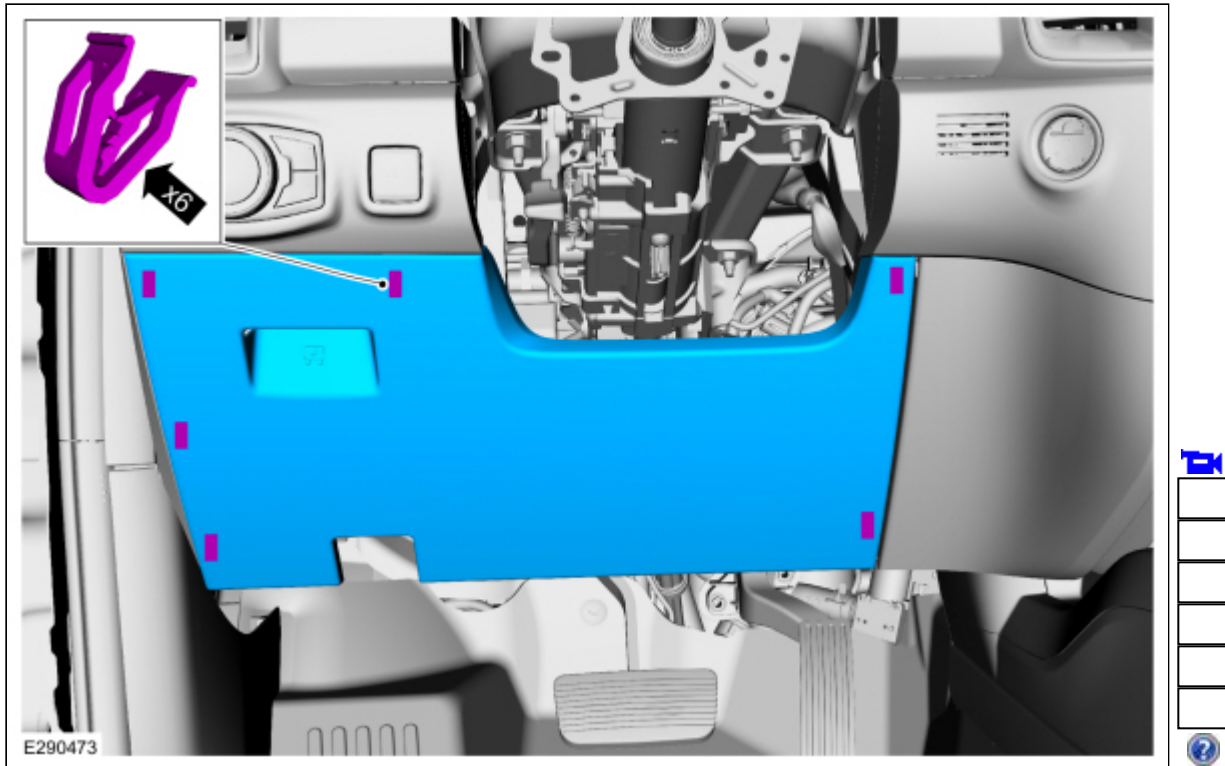

2. Remove the LH center stack trim panel.

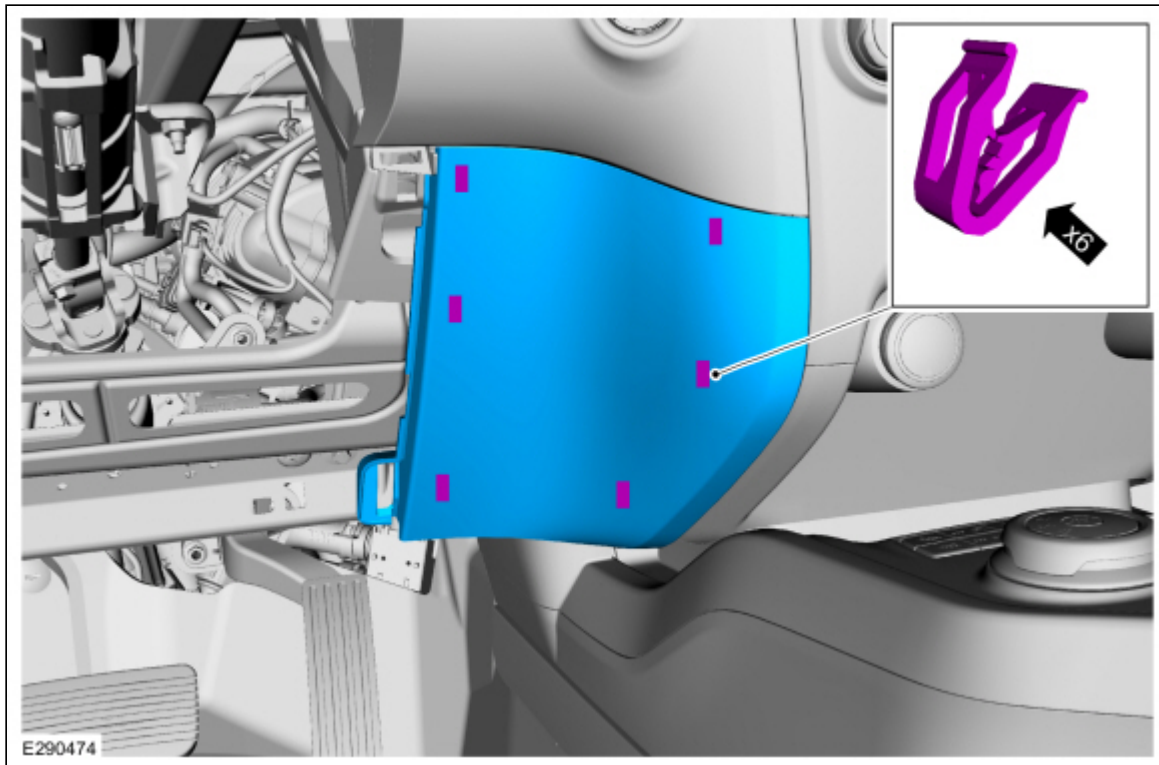


3. Remove the RH center stack trim panel.

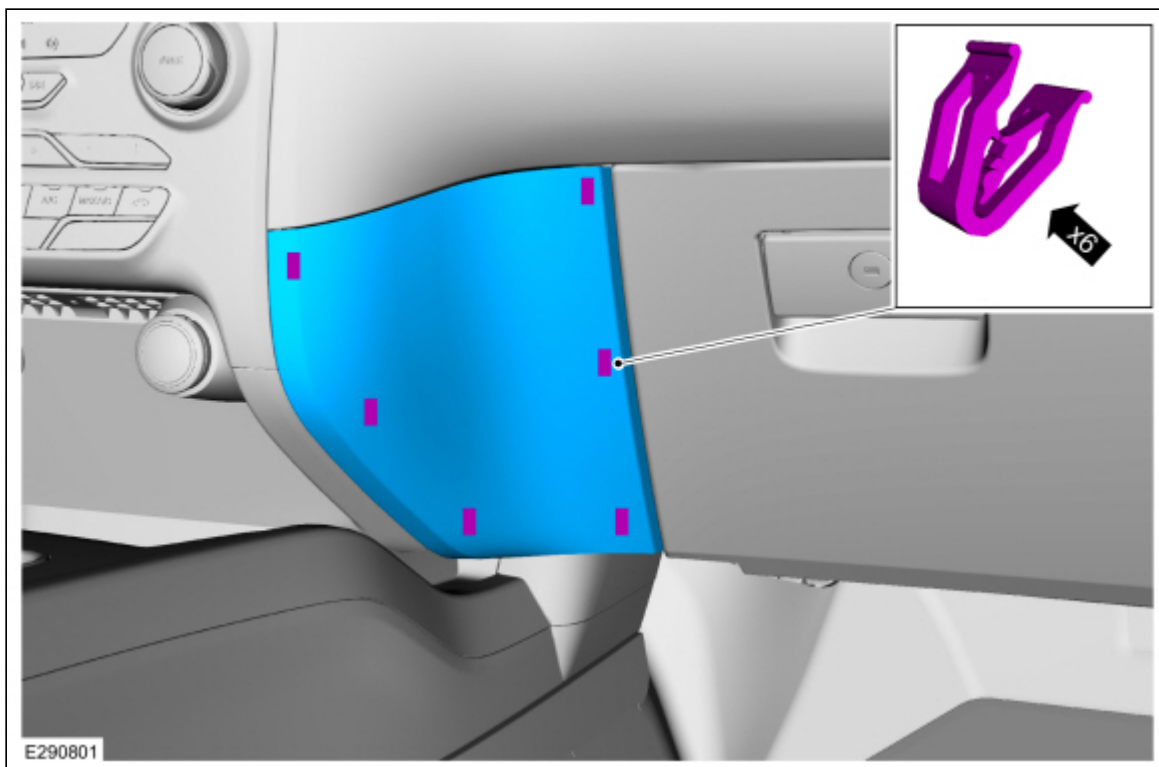


4. Remove the instrument panel center finish trim panel.



5. Disconnect the ignition switch electrical connector.

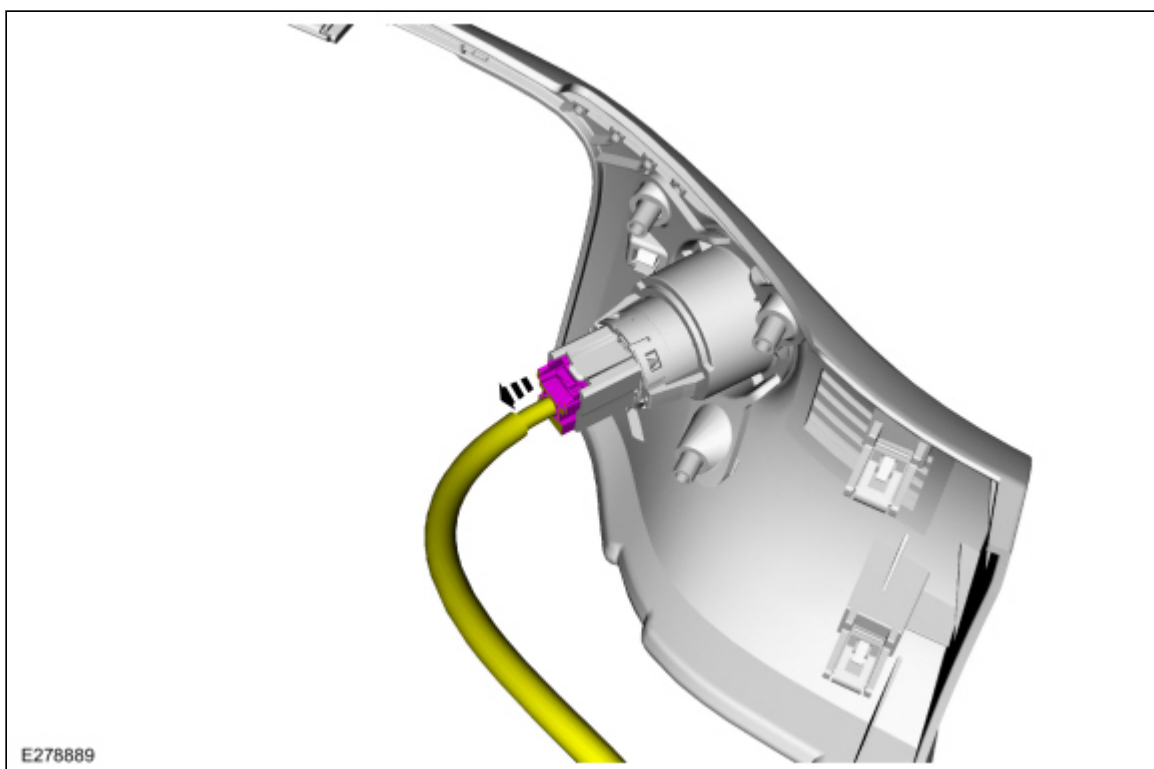

6. Release the ignition switch locking tabs and remove the ignition switch.

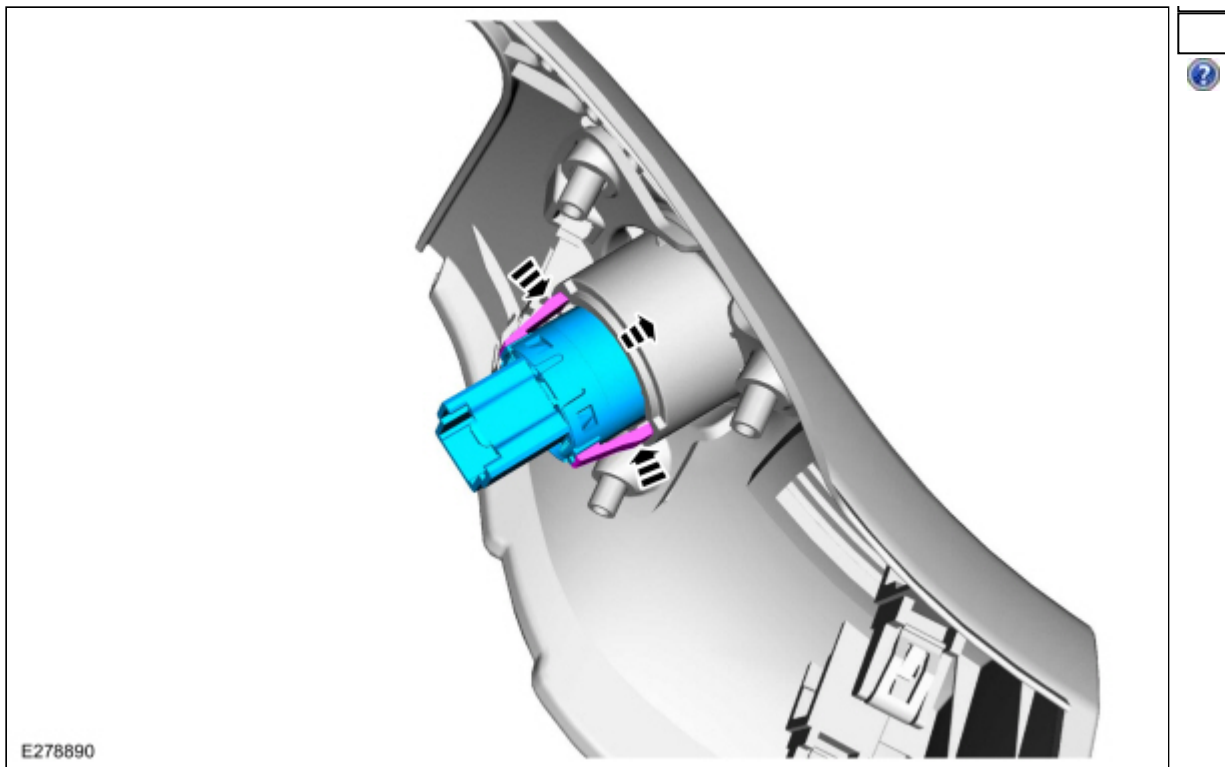

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company