

211-05 Steering Wheel and Column Electrical Components Removal and Installation


2019 Ranger
Procedure revision date: 10/31/2018

Ignition Switch

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. Remove the ignition switch.
 1. Disconnect the electrical connector.
 2. Release the tabs and remove the ignition switch.

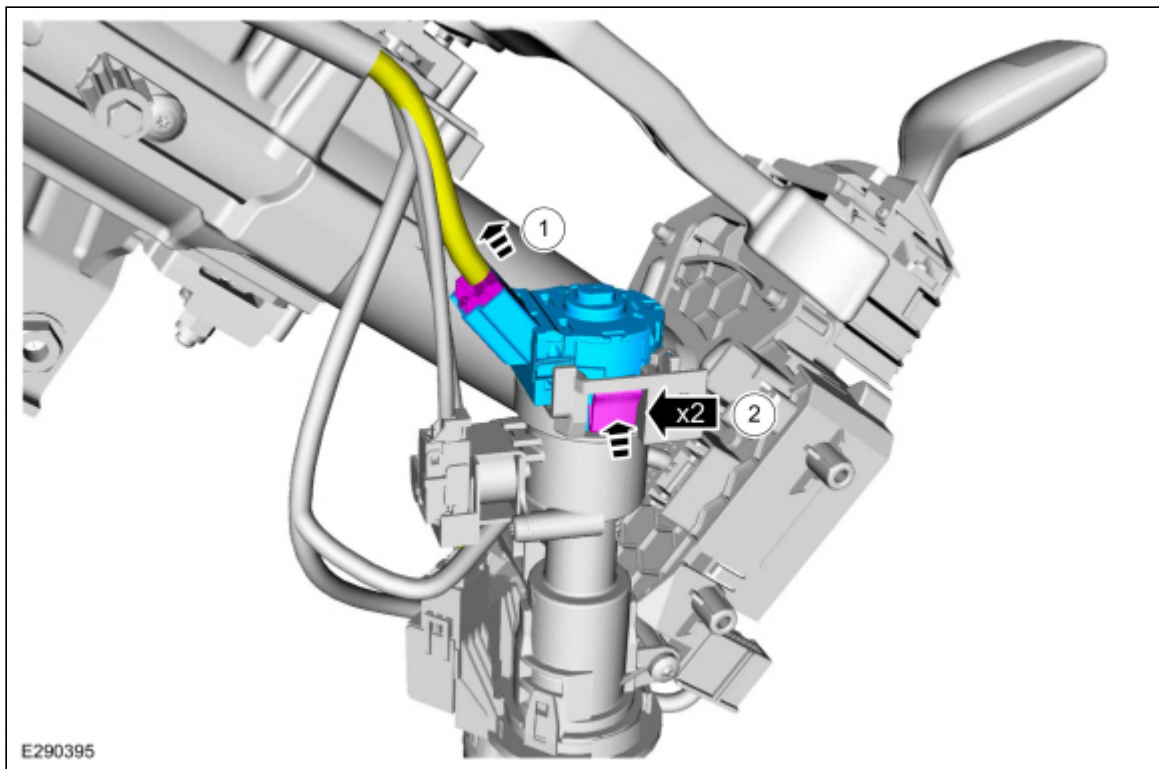

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

