

211-05 Steering Wheel and Column Electrical Components
Removal and Installation


2019 Ranger
Procedure revision date: 10/31/2018

Steering Column Control Module (SCCM)

Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the clockspring.
Refer to: [Clockspring](#) (501-20B Supplemental Restraint System, Removal and Installation).
2. Disconnect the SCCM electrical connector.

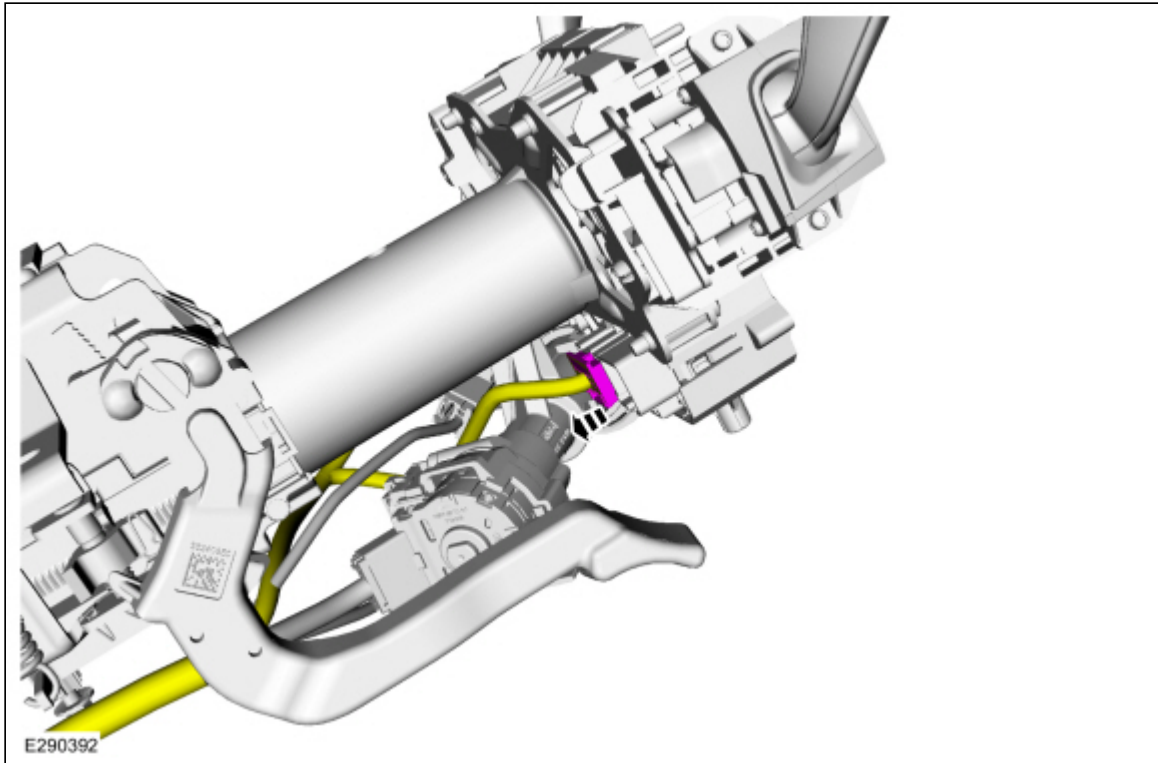


3. **NOTE:** Vehicles equipped with mechanical ignition switch.

Remove the ignition switch lock housing retainer.
Torque: 27 lb.in (3 Nm)



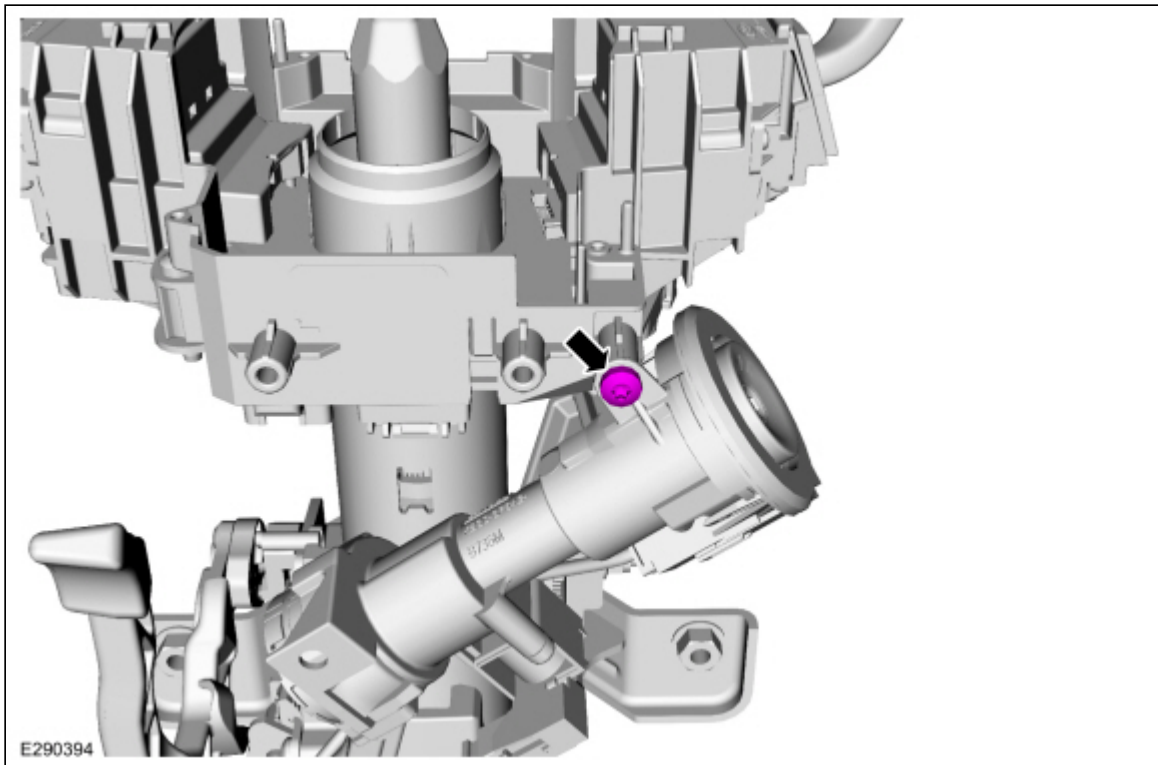

4. Remove the retainers and remove the SCCM.
Torque: 27 lb.in (3 Nm)

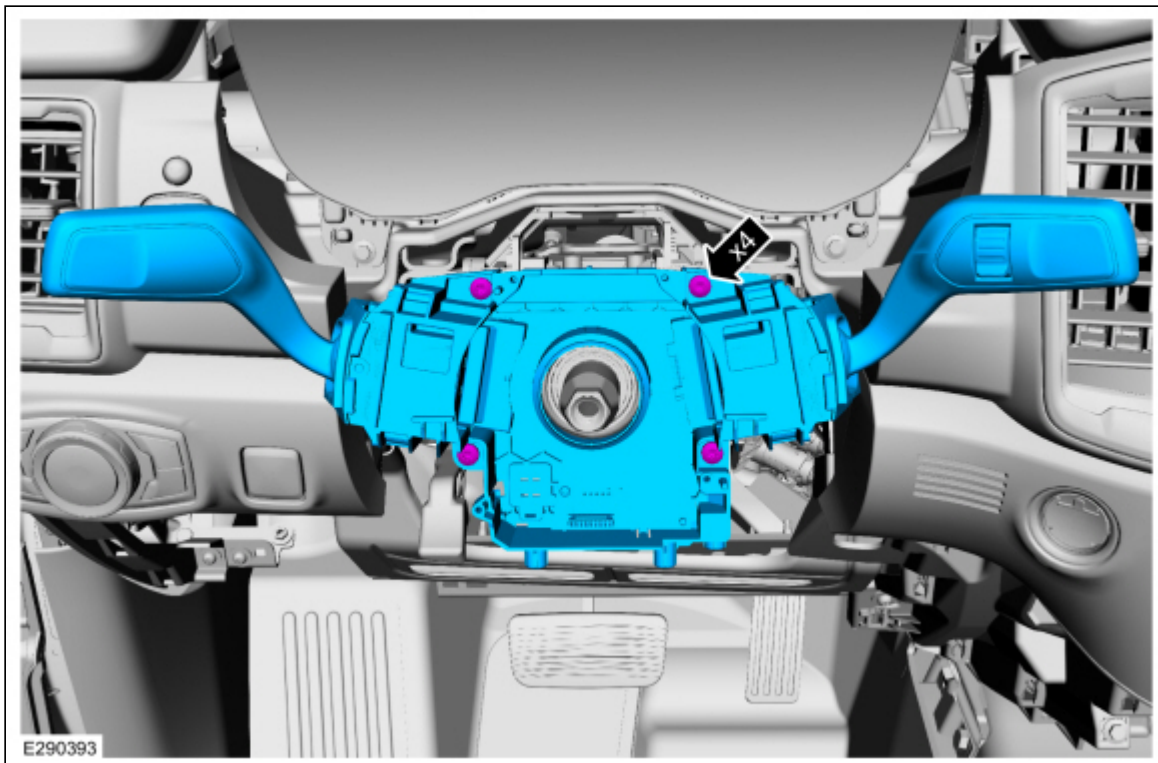

Installation

1. To install, reverse the removal procedure.

