

211-05 Steering Wheel and Column Electrical Components Removal and Installation

2019 Ranger
Procedure revision date: 10/31/2018


Steering Column Multifunction Switch RH

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering column shrouds.
Refer to: [Steering Column Shrouds](#) (501-05 Interior Trim and Ornamentation, Removal and Installation).
2. **NOTE:** Make sure the component terminals are not bent or damaged.

Remove the retainers and the RH steering column multifunction switch.
Torque: 27 lb.in (3 Nm)

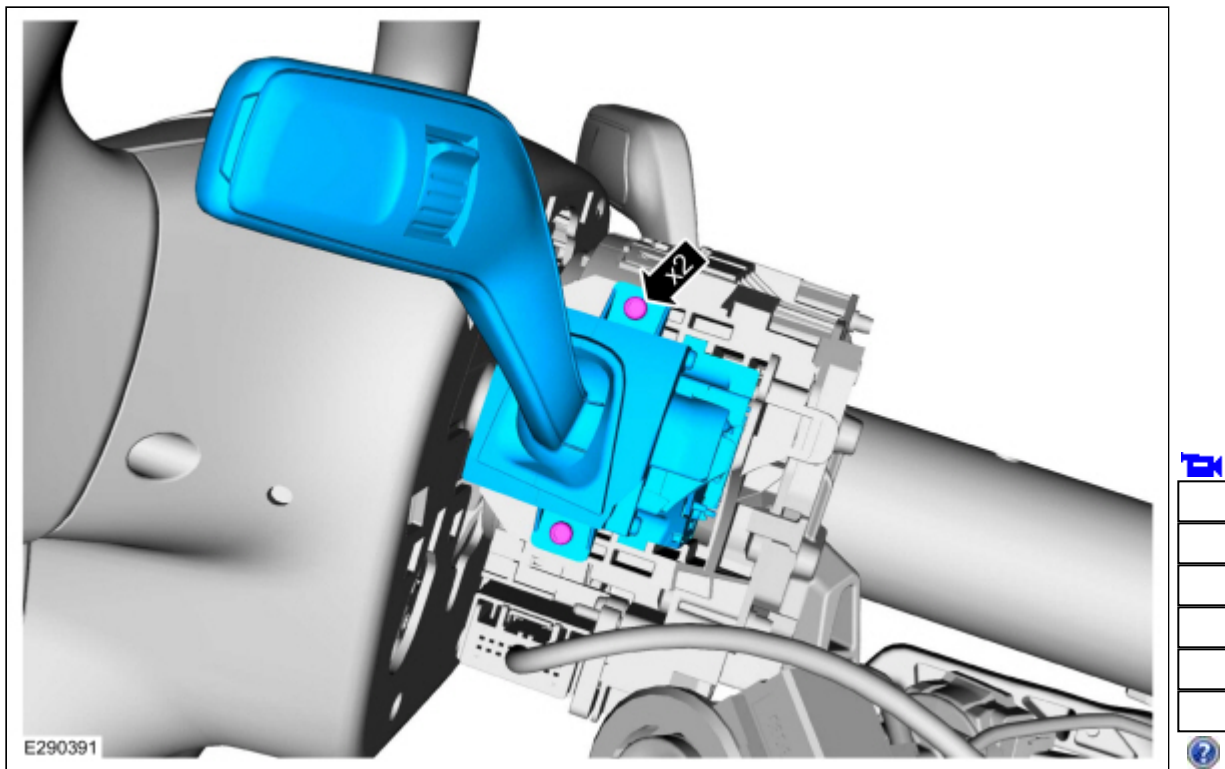

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

