

211-05 Steering Wheel and Column Electrical Components
Removal and Installation

2019 Ranger
Procedure revision date: 10/31/2018

Steering Wheel Multifunction Switch


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the steering wheel.
Refer to: [Steering Wheel](#) (211-04 Steering Column, Removal and Installation).
2. Remove the retainers and the steering wheel back cover.




3. On both sides.
Disconnect the electrical connector.

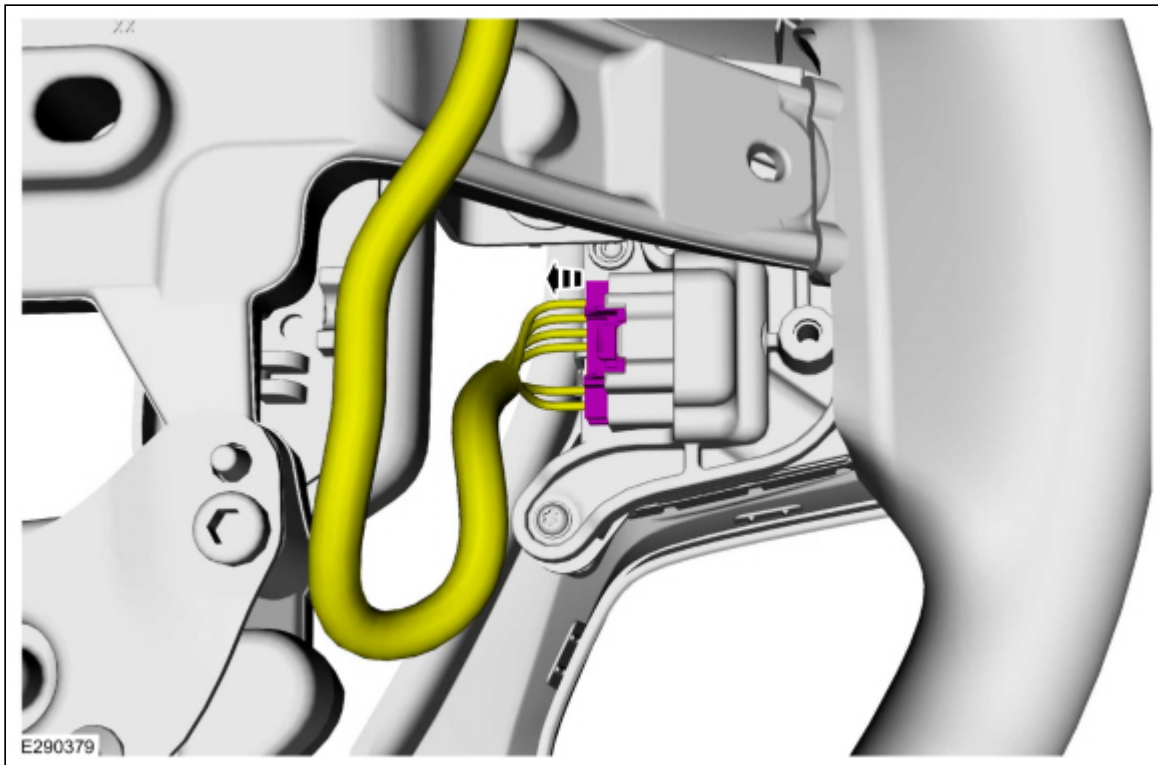

4. Remove the steering wheel bezel.



5. On both sides.
Remove the retainers and remove the steering wheel multifunction switch.

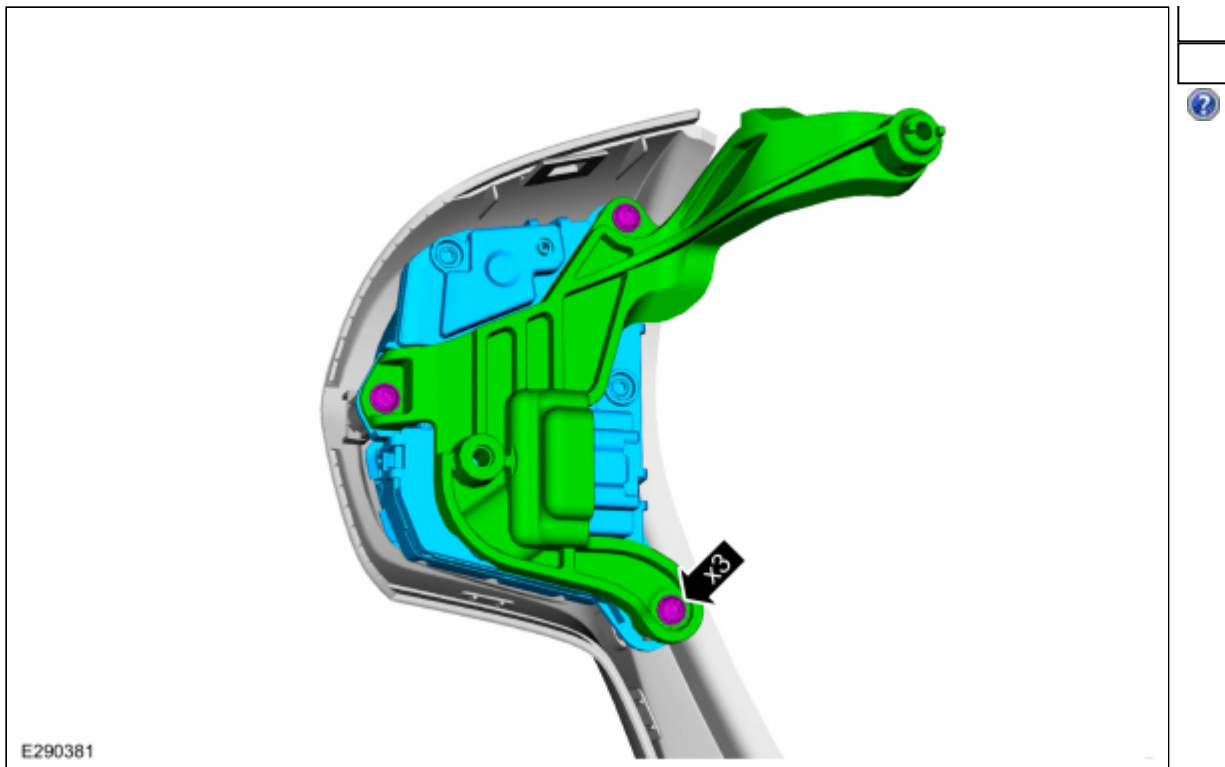

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company