


Valve Stem Diameter

Check

NOTE: Refer to the appropriate Section 303-01 for the specification.

- 1. Measure the diameter of each intake and exhaust valve stem at the points shown. Verify the diameter is within specification.

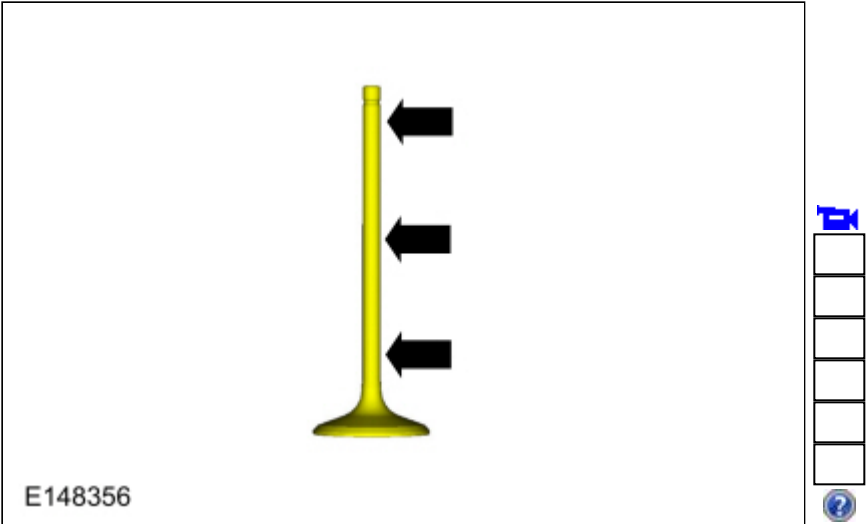

E148356