


Cooling Fan Upper Shroud


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.
 1. Remove the bolts and position the air cleaner inlet duct aside.
Torque: 22 lb.in (2.5 Nm)
 2. Remove the retainers and the upper radiator sight shield.

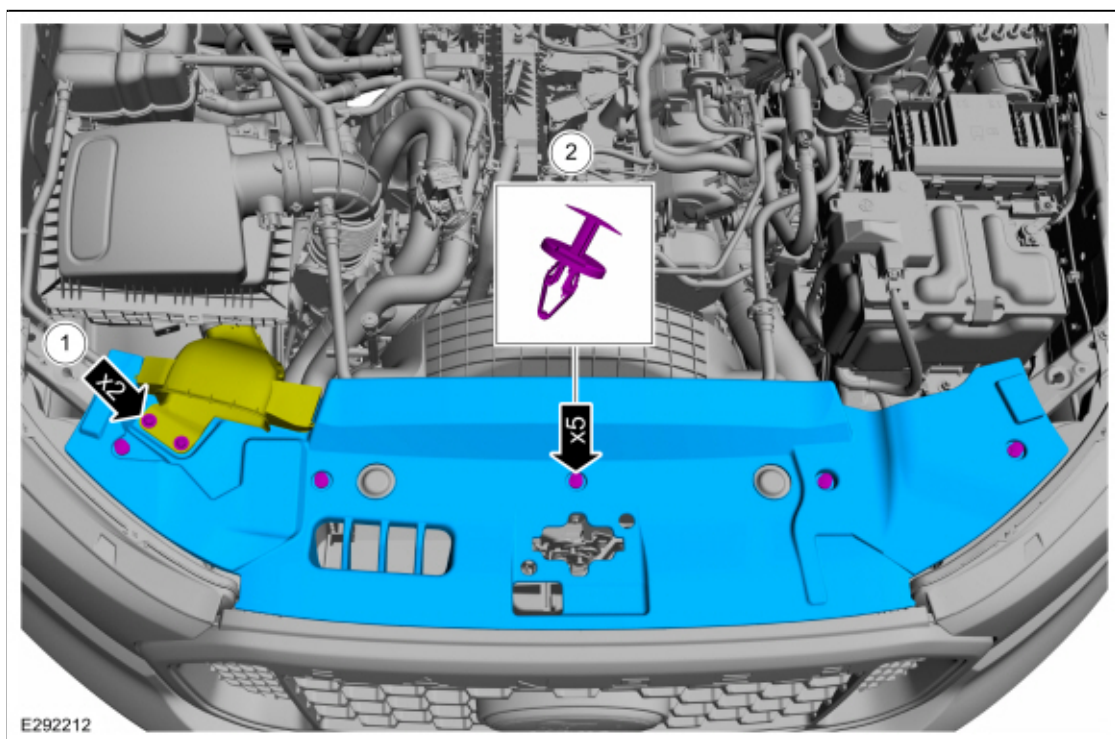

2.
 - Detach the PCV hose retainers.
 - Disconnect and remove the PCV hose.

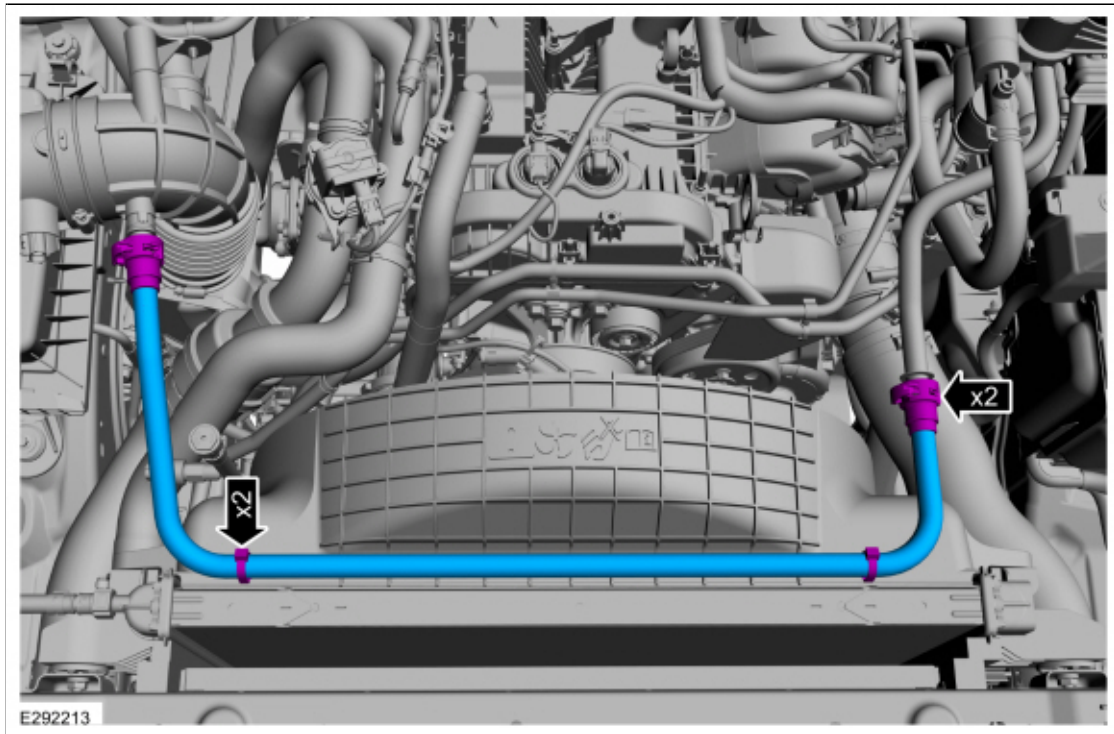


3. **NOTE:** Take extra care to not damage the radiator during disassembly and re-assembly.

- Detach the A/C line retainer.
- Remove the bolts and the upper cooling fan shroud.

Torque:

- Item 1: 71 lb.in (8 Nm)
- Item 2: 62 lb.in (7 Nm)



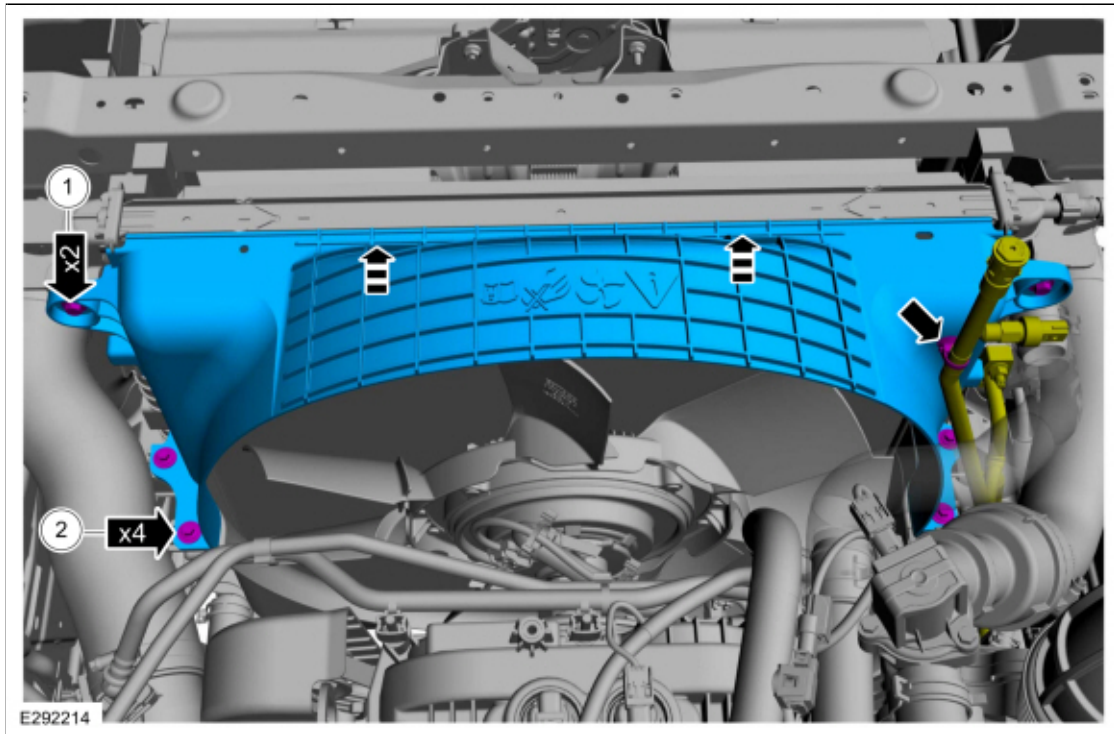

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

