


303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS)
Description and Operation

2019 Ranger
Procedure revision date: 12/5/2018

Fuel Charging and Controls - Component Location


2.3L EcoBoost

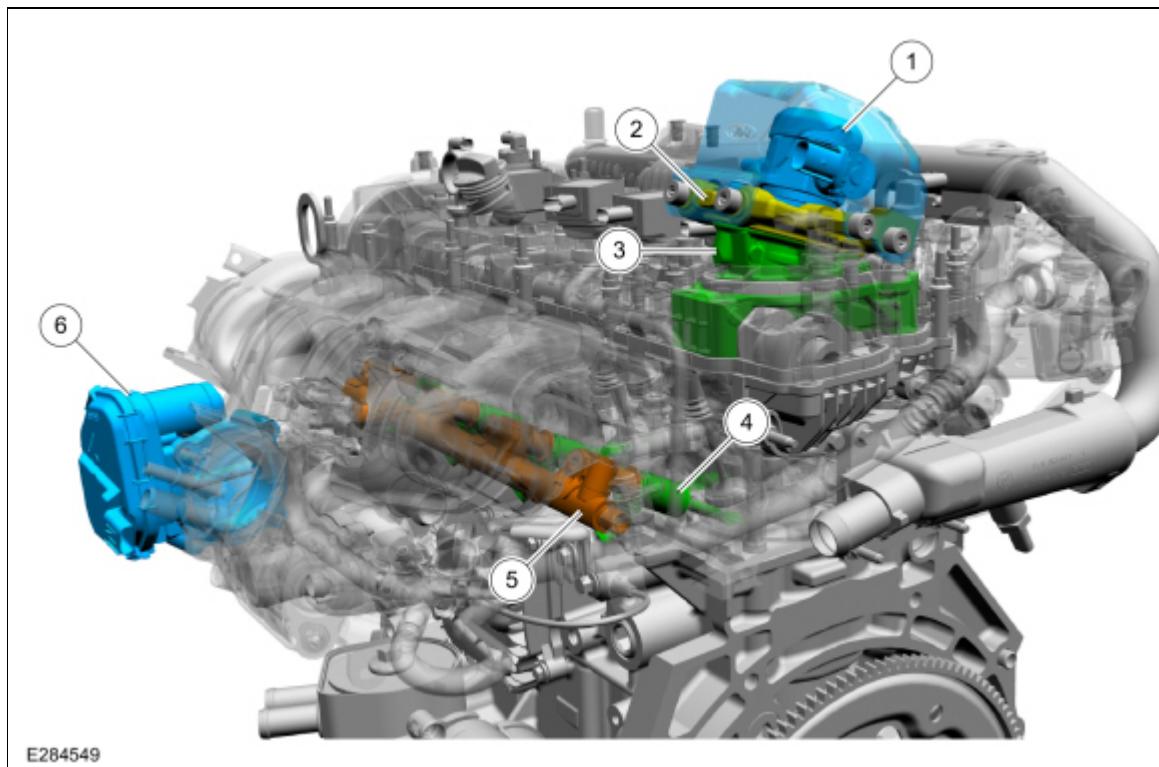

Item	Description
1	High-pressure fuel pump, Refer to: High-Pressure Fuel Pump (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2	High-pressure fuel pump mounting plate (removed with the high-pressure fuel pump), Refer to: High-Pressure Fuel Pump (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
3	High-pressure fuel pump drive unit, Refer to: High-Pressure Fuel Pump Drive Unit (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
4	Fuel injectors (removed with the fuel rail), Refer to: Fuel Rail (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
5	Fuel rail,

	Refer to: Fuel Rail (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
6	Throttle body, Refer to: Throttle Body (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).

Fuel Pump Driver Module

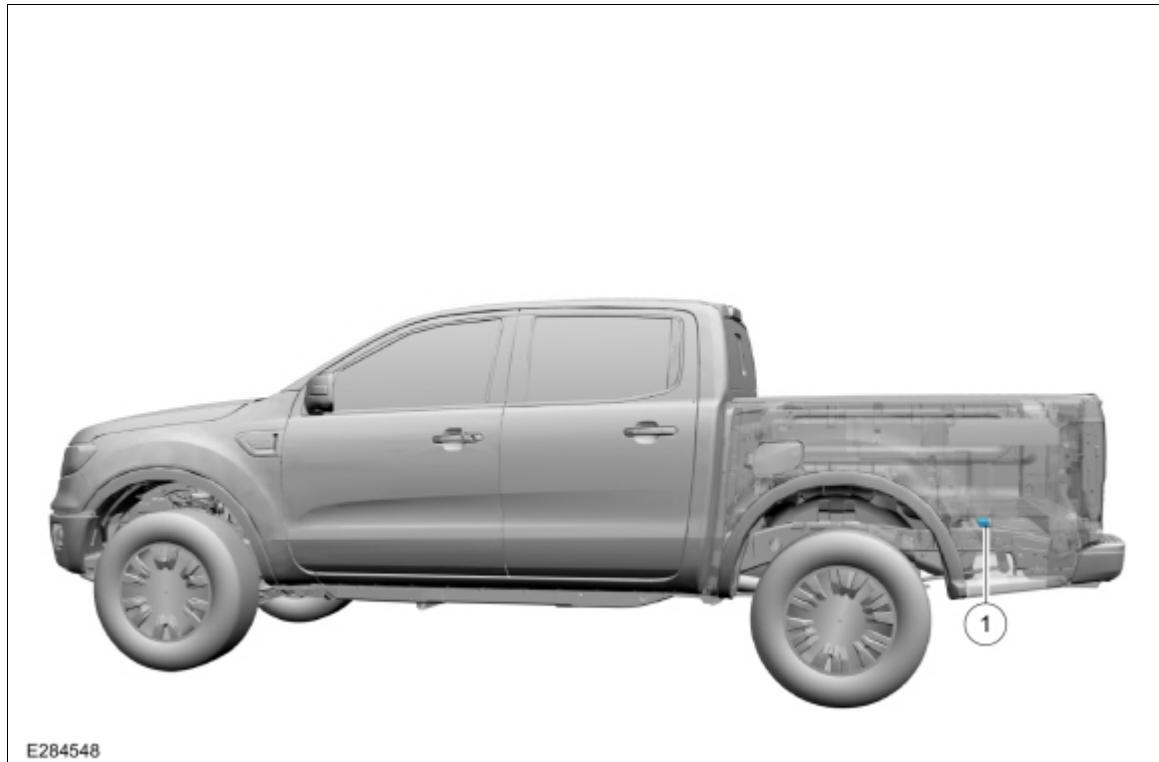

Item	Description
1	<p>Fuel pump driver module, Refer to: Fuel Pump Driver Module (FPDM) (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Removal and Installation).</p> <p>Comments: The fuel pump driver module is located on the rear of the frame crossmember above the spare tire.</p>

