

Fuel Pump Driver Module (FPDM)


Removal

1. **NOTE:** The fuel pump driver module is located on the rear of the frame crossmember above the spare tire.


For fuel pump driver module component location view,

Refer to: [Fuel Charging and Controls - Component Location](#) (303-04A Fuel Charging and Controls - 2.3L EcoBoost (201kW/273PS), Description and Operation).

2. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. Disconnect the fuel pump driver module electrical connector.

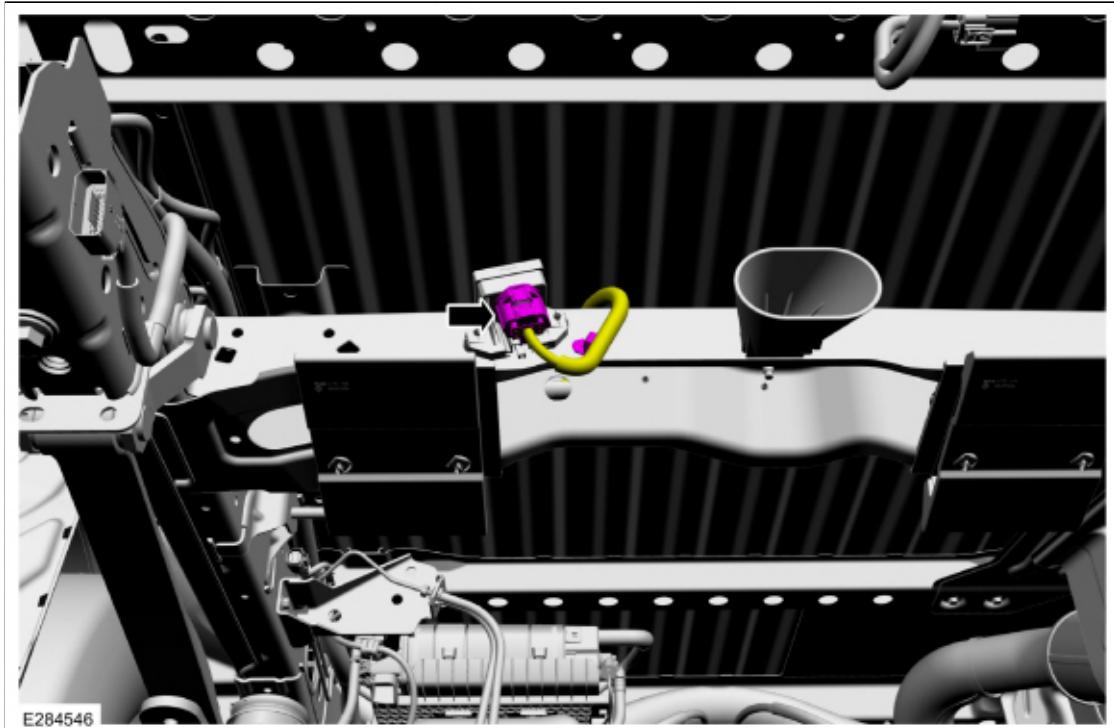


4. Remove the fuel pump driver module fasteners, then remove the fuel pump driver module.


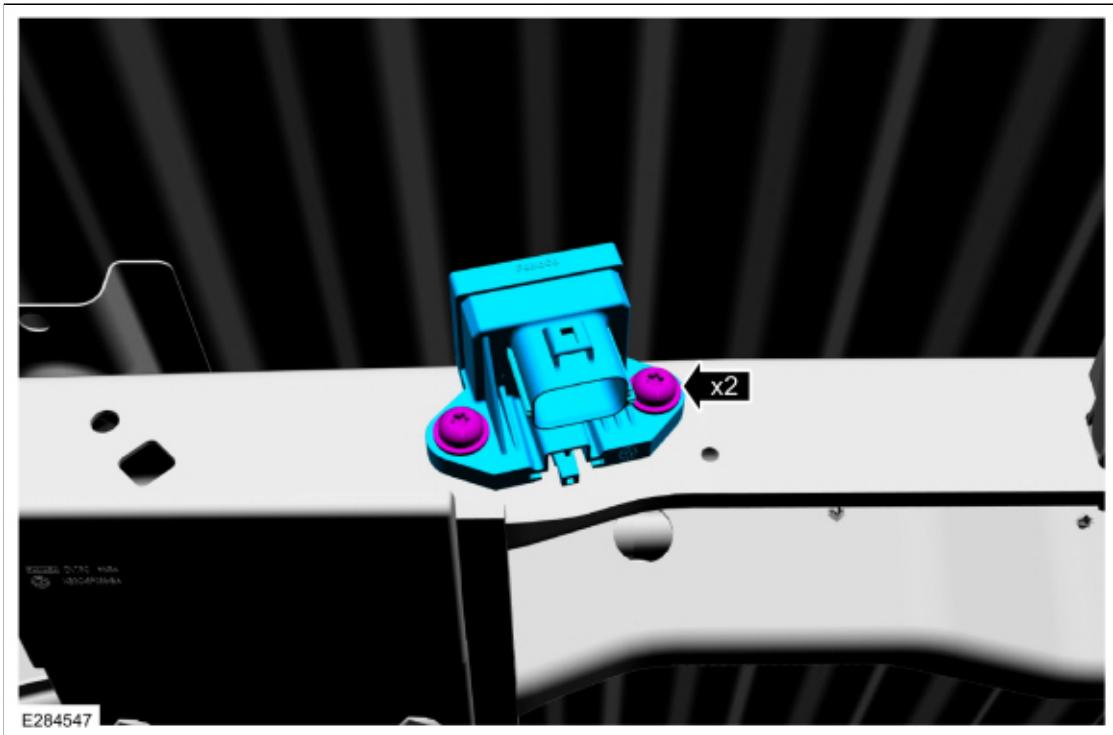


Installation

1. Install the fuel pump driver module, then install and tighten the fuel pump driver module fasteners.
Torque: 106 lb.in (12 Nm)

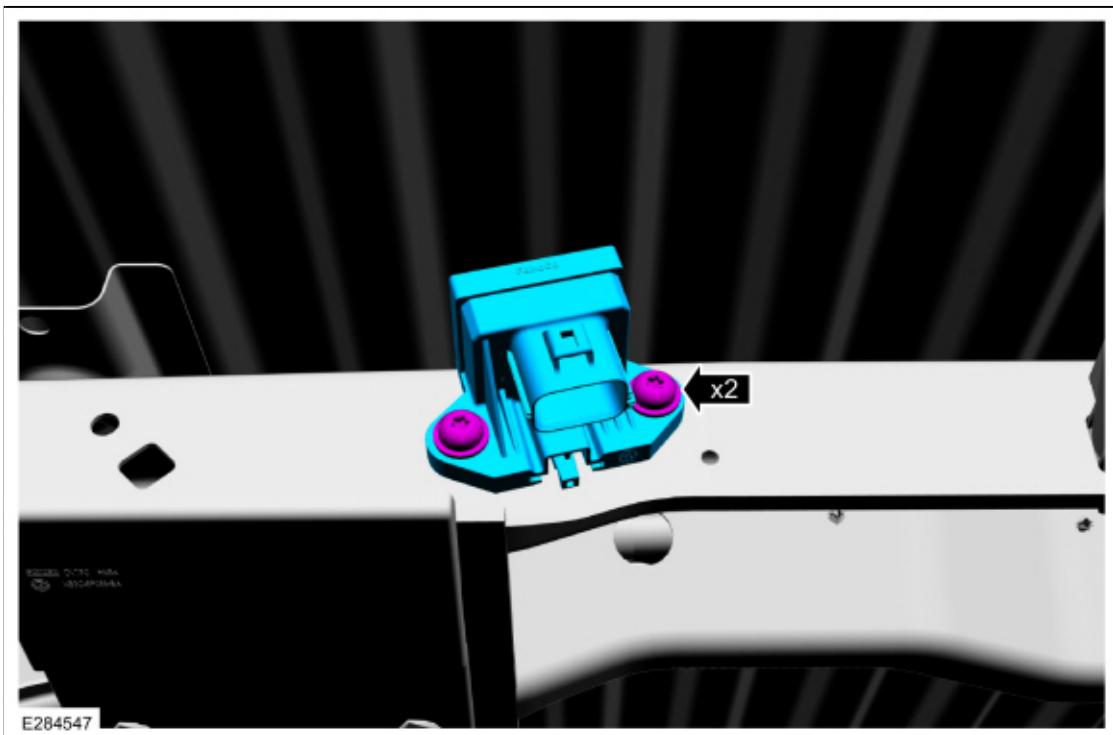

 2. Connect the fuel pump driver module electrical connector.

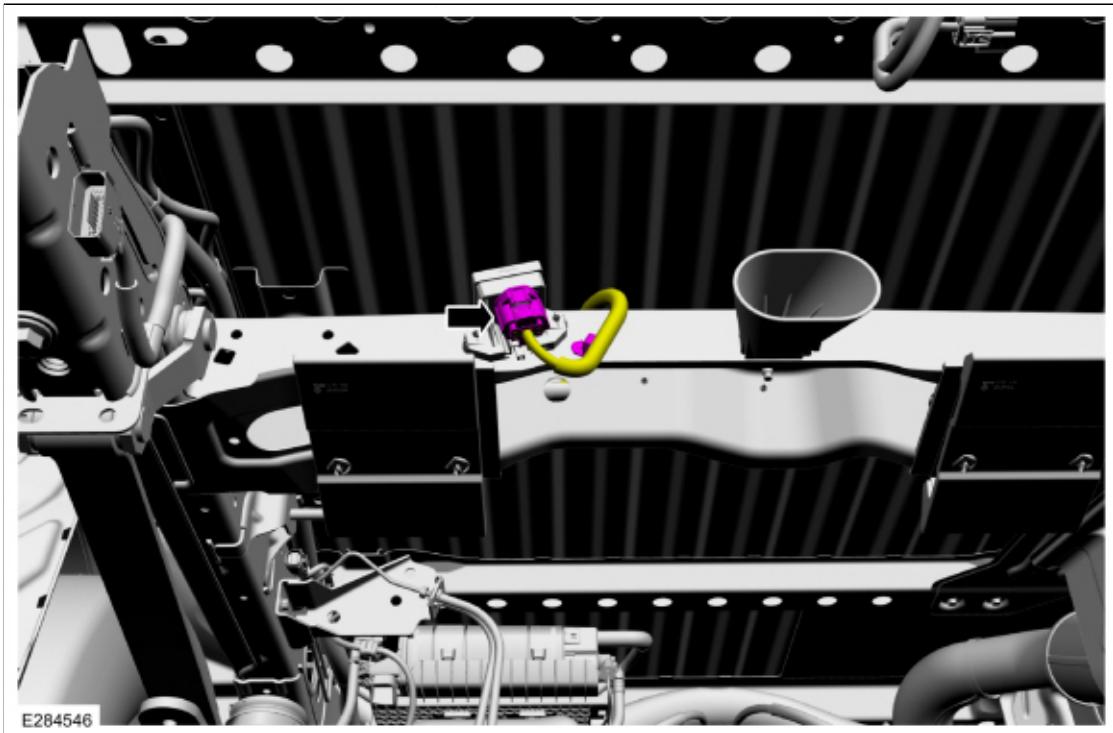

Copyright © 2019 Ford Motor Company