


High-Pressure Fuel Pump Drive Unit


Removal

1. Remove the valve cover.
Refer to: [Valve Cover](#) (303-01 Engine - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Remove the high-pressure fuel pump drive unit bolts, then remove the high-pressure fuel pump drive unit.

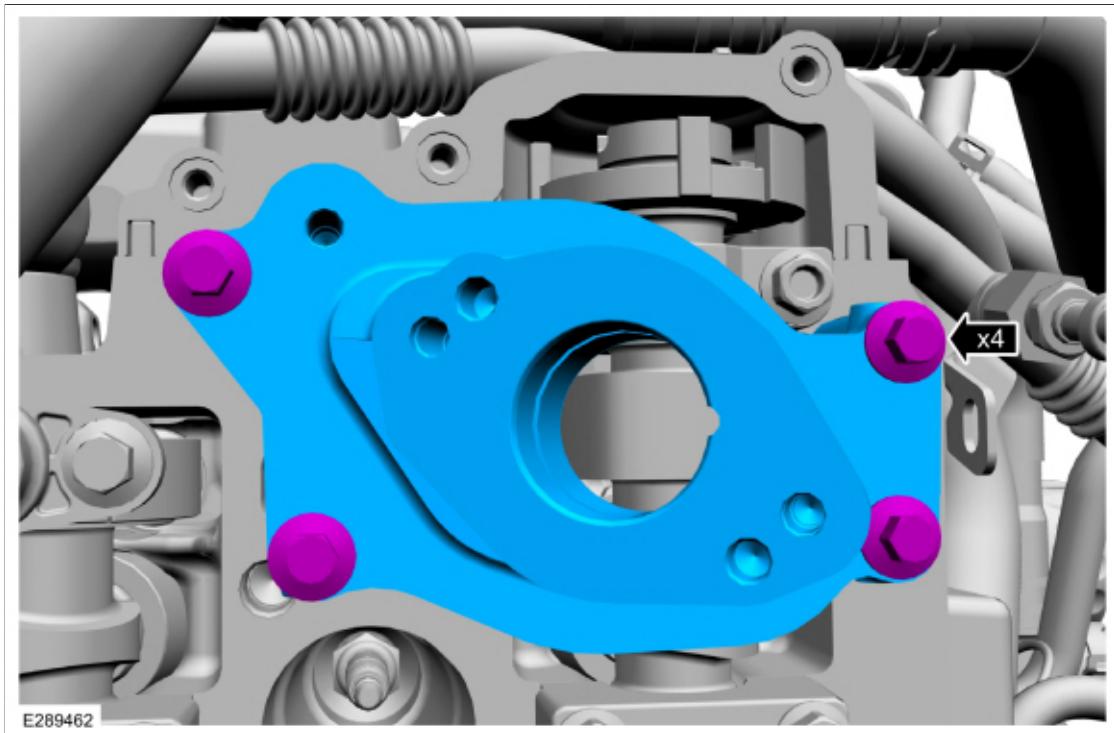

Installation

1. Make sure that the mating faces are clean and free of corrosion and foreign material. Install the high-pressure fuel pump drive unit, then install and tighten the high-pressure fuel pump drive unit bolts.
Torque: 97 lb.in (11.0 Nm)

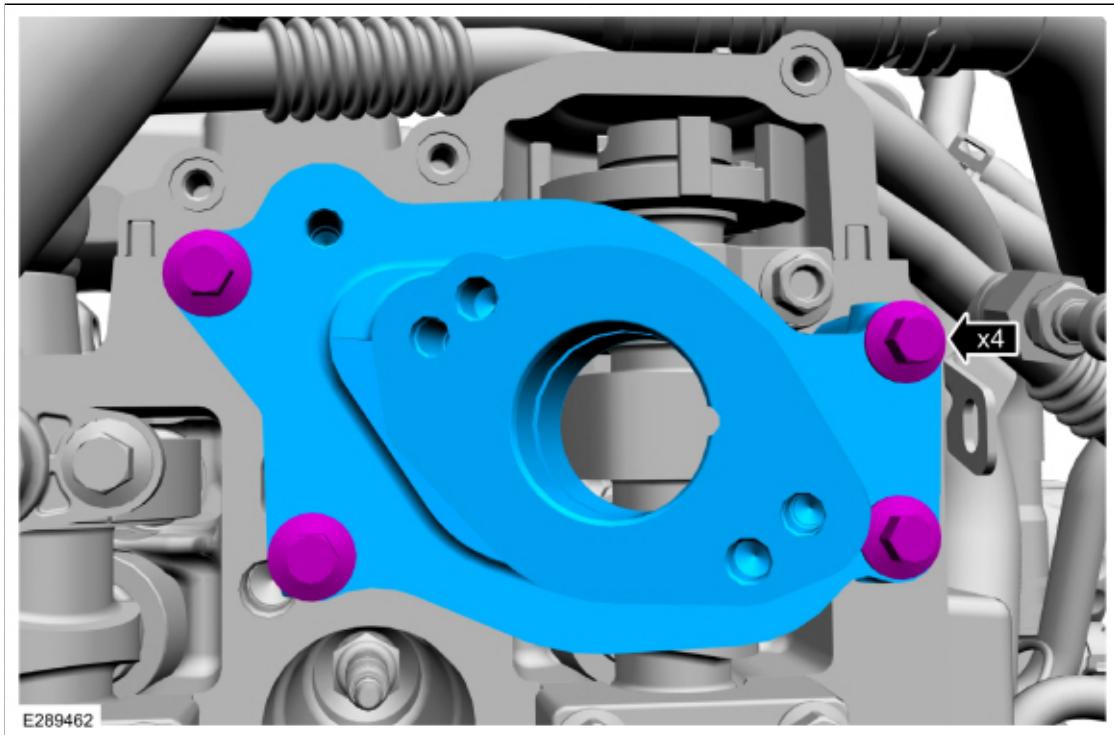

2. Install the valve cover.

Refer to: [Valve Cover](#) (303-01 Engine - 2.3L EcoBoost (201kW/273PS), Removal and Installation).

Copyright © 2019 Ford Motor Company

