


Air Conditioning (A/C) Compressor Belt Tensioner

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the A/C Compressor drive belt.
Refer to: [Air Conditioning \(A/C\) Compressor Belt](#) (303-05 Accessory Drive - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Remove the A/C compressor belt tensioner.
Torque: 35 lb.ft (47.5 Nm)

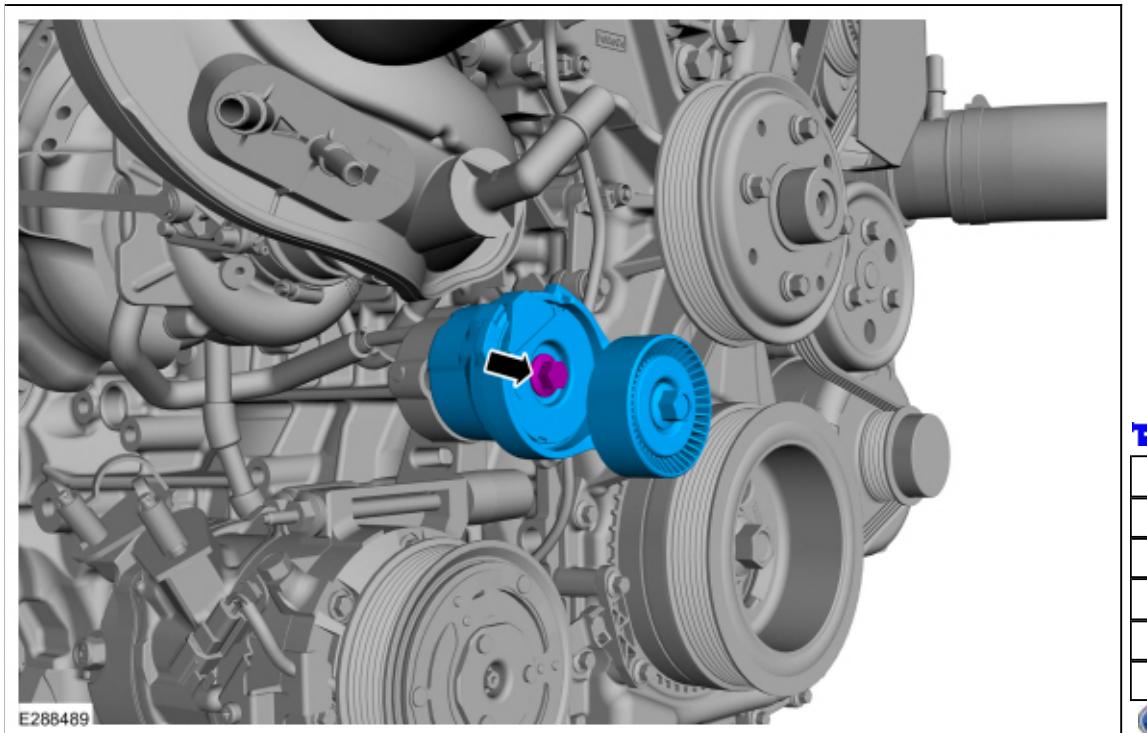

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

