


Air Conditioning (A/C) Compressor Belt

Removal


NOTICE: Under no circumstances should the accessory drive belt, tensioner or pulleys be lubricated as potential damage to the belt material and tensioner damping mechanism will occur. Do not apply any fluids or belt dressing to the accessory drive belt or pulleys.

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
2. With the vehicle in NEUTRAL, position it on a hoist.
 Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
3. Remove the cooling fan and shroud to get access A/C Compressor belt.
 Refer to: [Cooling Fan](#) (303-03 Engine Cooling - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
4. Rotate the A/C compressor belt tensioner clockwise and remove the A/C compressor belt, then release the A/C compressor belt tensioner.

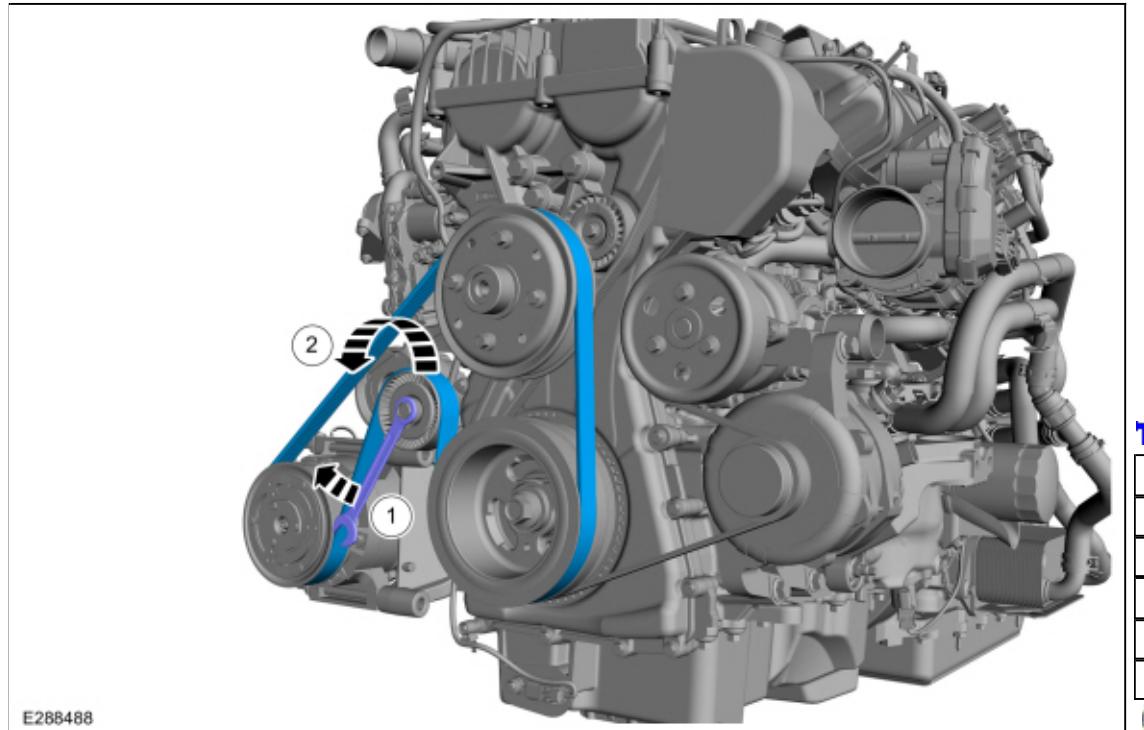

Installation

1. To install, reverse the removal procedure.
2. After installation, make sure the A/C compressor belt is correctly seated on all the pulleys.

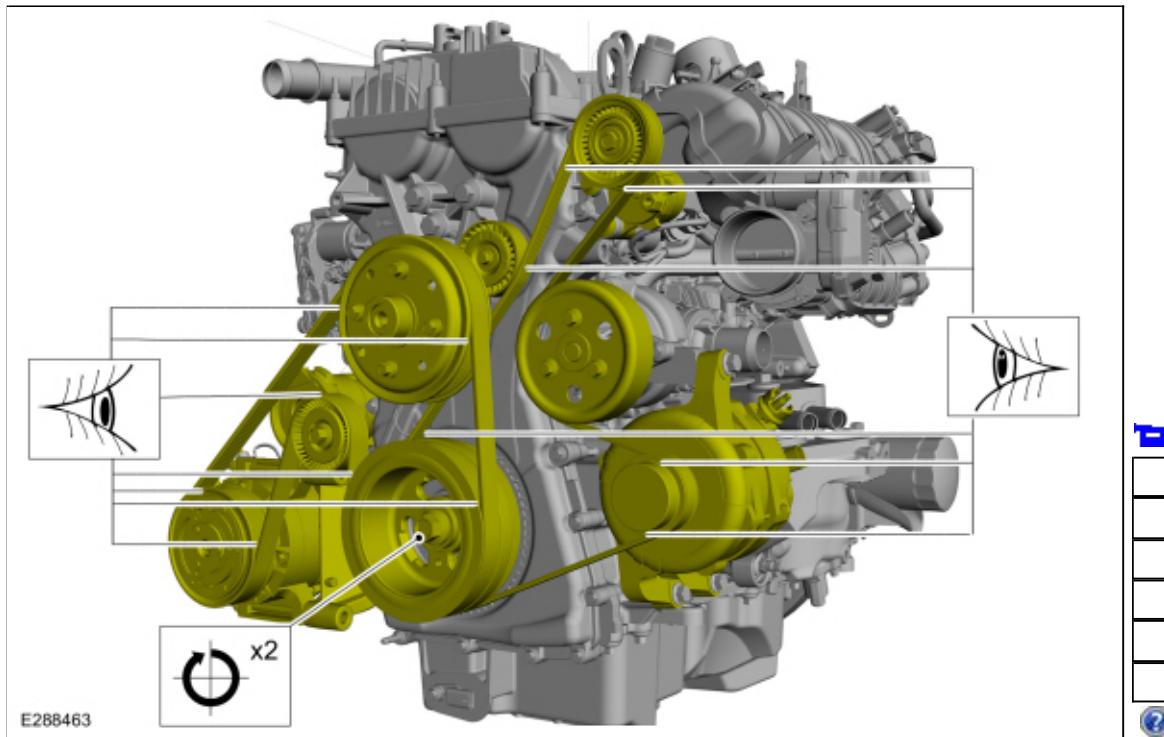

Copyright © 2019 Ford Motor Company