


Crankcase Vent Oil Separator


Removal

NOTE: Removal steps in this procedure may contain installation details.


1. Remove the intake manifold.
Refer to: [Intake Manifold](#) (303-01 Engine - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Disconnect the quick release coupling and remove the hose.
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).

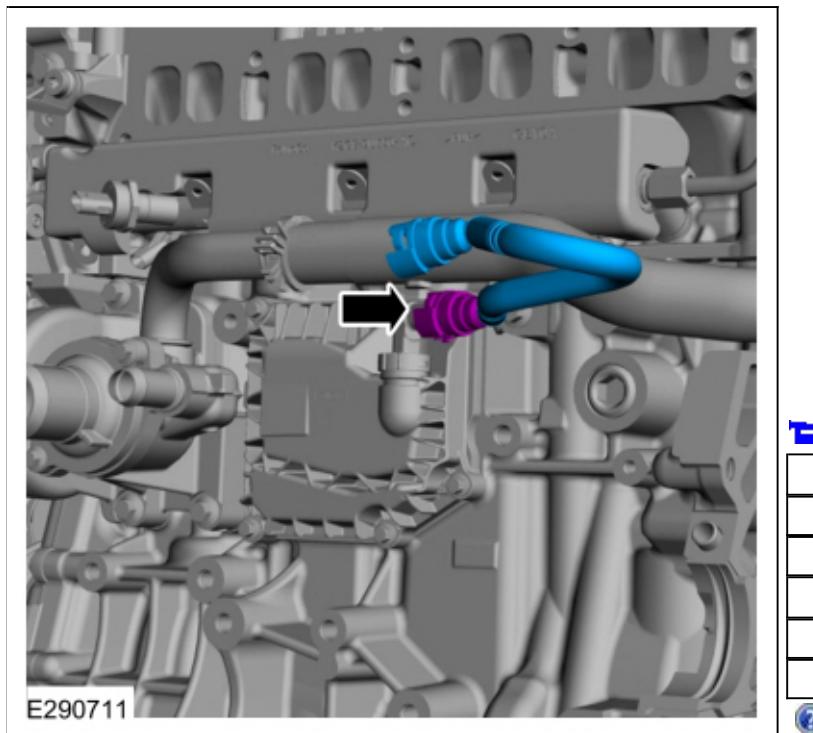

3. Inspect the crankcase vent oil separator gasket.

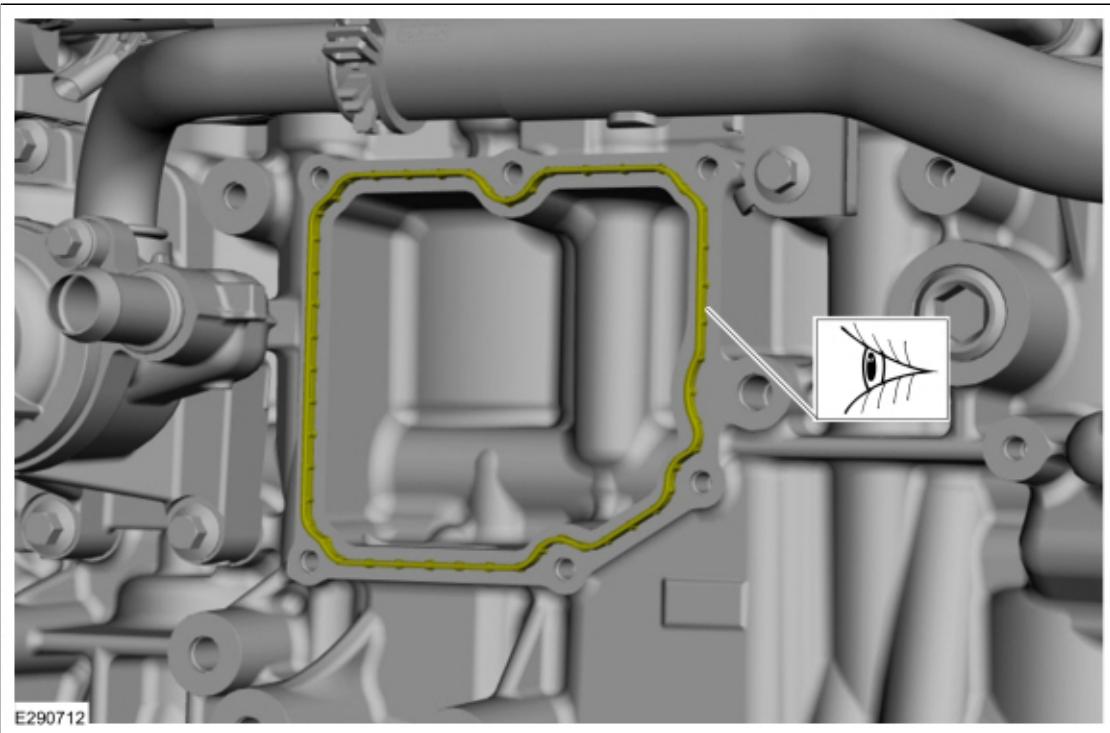


4. Remove the fasteners and crankcase vent oil separator.

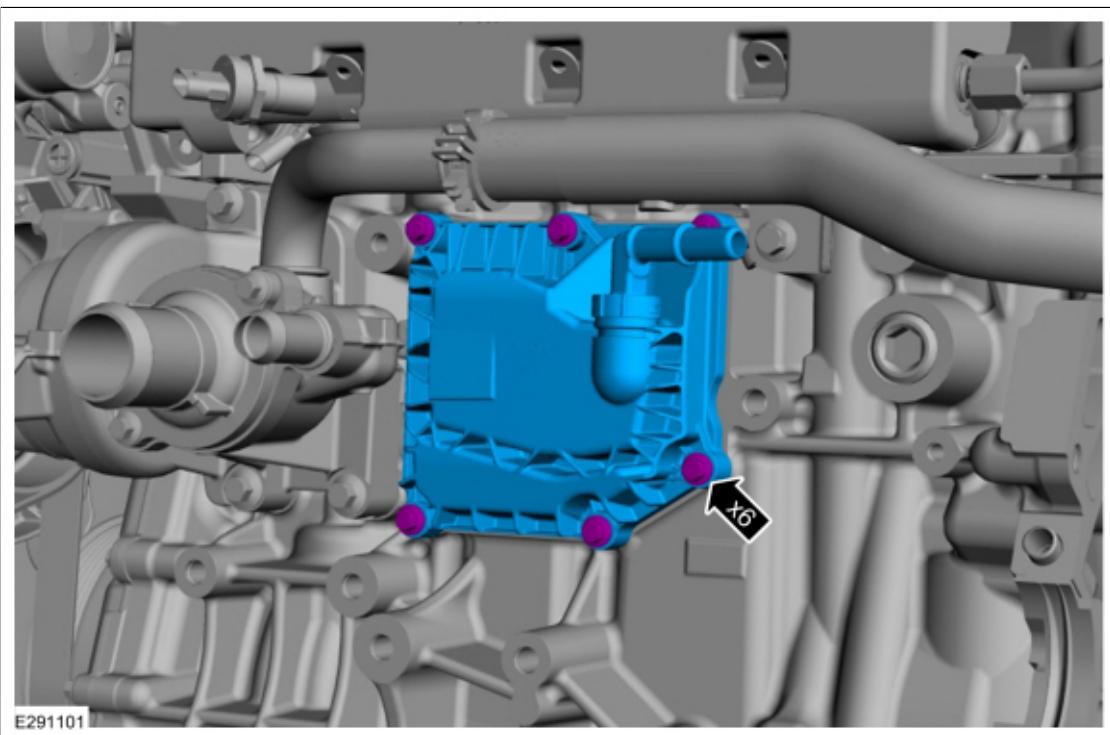

Installation

1. Install the crankcase vent oil separator and tighten in the sequence shown.
Torque: 97 lb.in (11 Nm)

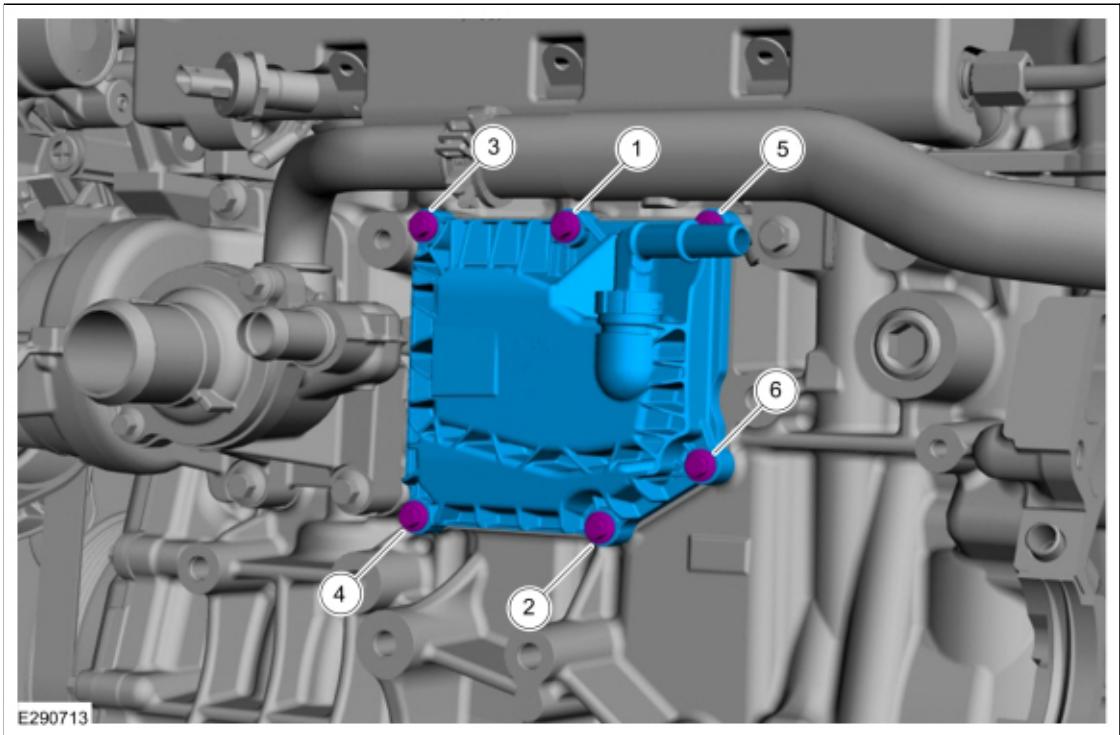

2. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

