


### Crankcase Ventilation Tube

#### Removal


**NOTE:** Removal steps in this procedure may contain installation details.

1. **NOTICE:** Do not pull the engine appearance cover forward or sideways to remove. Failure to press straight upward on the underside of the cover at the attachment points may result in damage to the cover or engine components.

- Remove the engine appearance cover nuts.
- Place your hand under the engine appearance cover at each grommet location and push straight up to release each grommet from the studs.
- After all of the grommets have been released from the studs, remove the appearance cover from the engine.

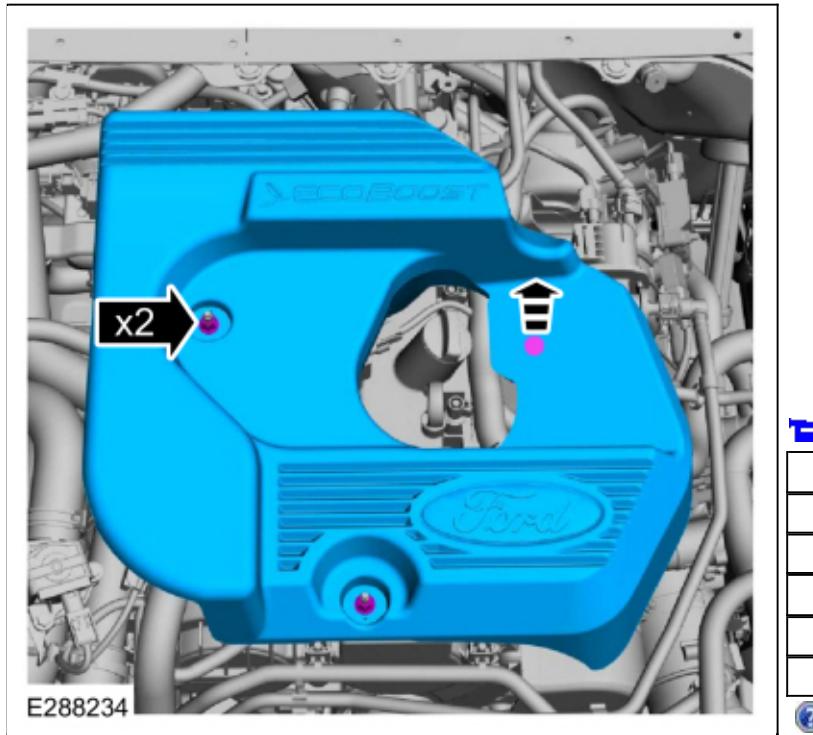


2. Disconnect the electrical connector.

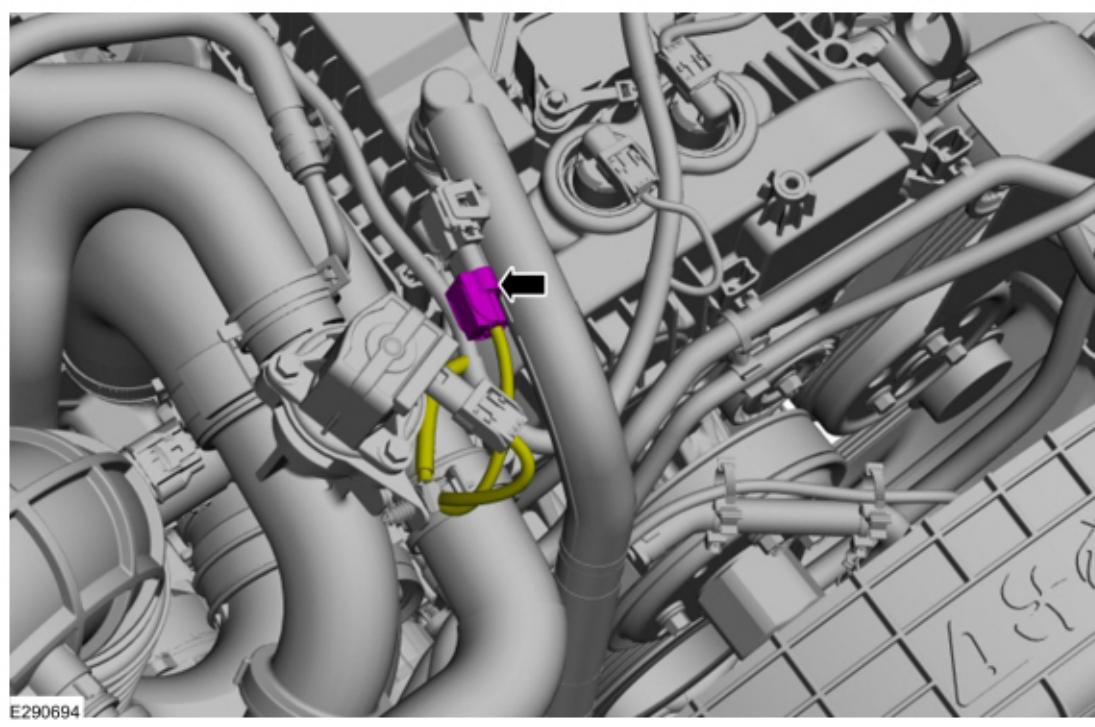

3. **NOTE:** The crankcase vent tube has permanent connectors. If it needs to be removed for any reason, the connectors must be cut to get the tube off. This tube will need to be replaced.

- Cut housing above the lock tab, on both ends.
- Remove and discard the crankcase vent tube.

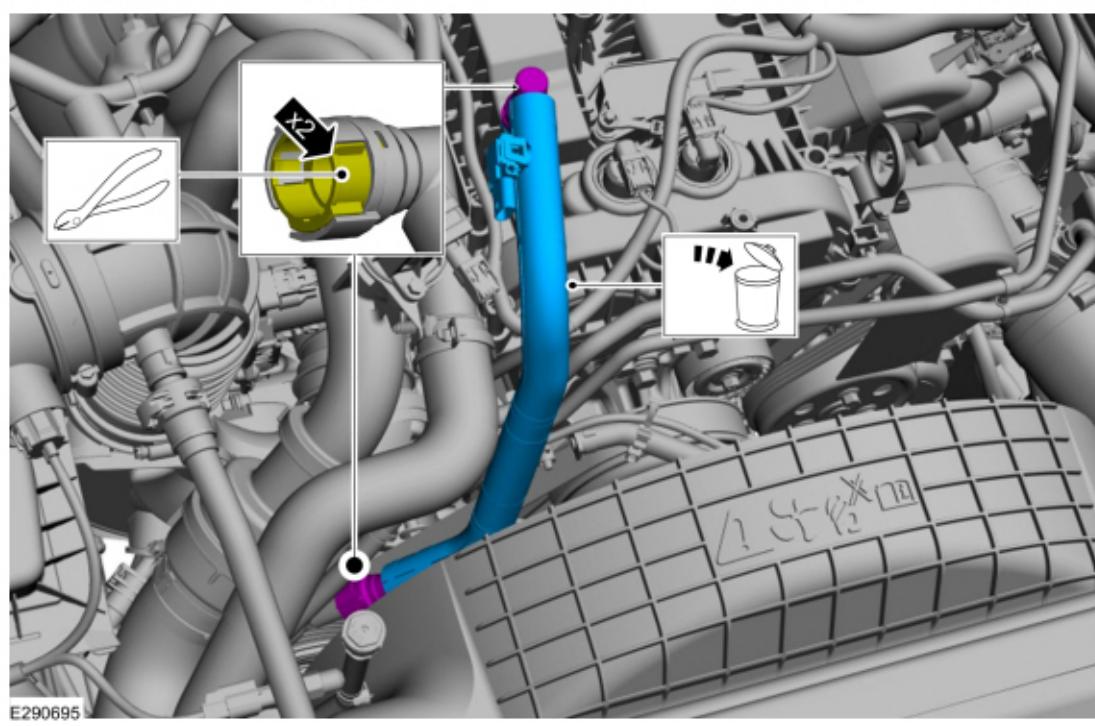

## Installation

1. **NOTE:** *The quick connects must be installed onto the tube ends along the centerline.*

To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

---