


Differential Pressure Feedback Exhaust Gas Recirculation (EGR) Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1.
 - Disconnect the electrical connector.
 - Loosen the clamps and position aside the differential pressure sensor hoses.

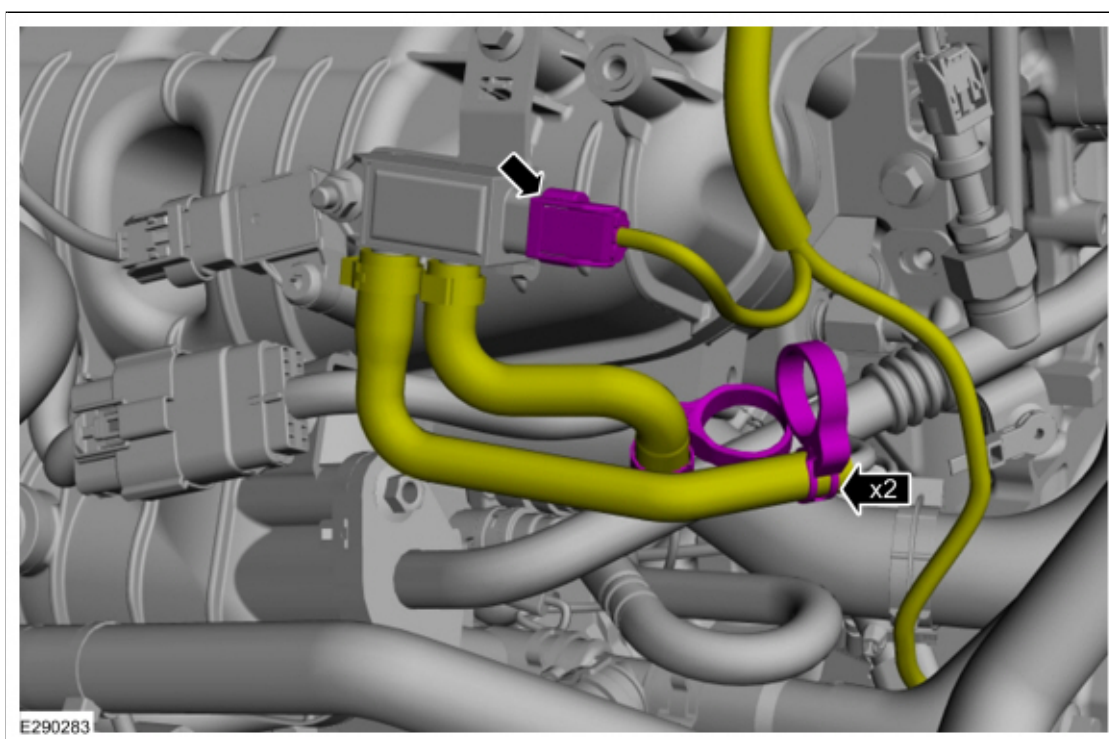

2. Remove the fastener and differential pressure feedback EGR sensor.
Torque: 97 lb.in (11 Nm)

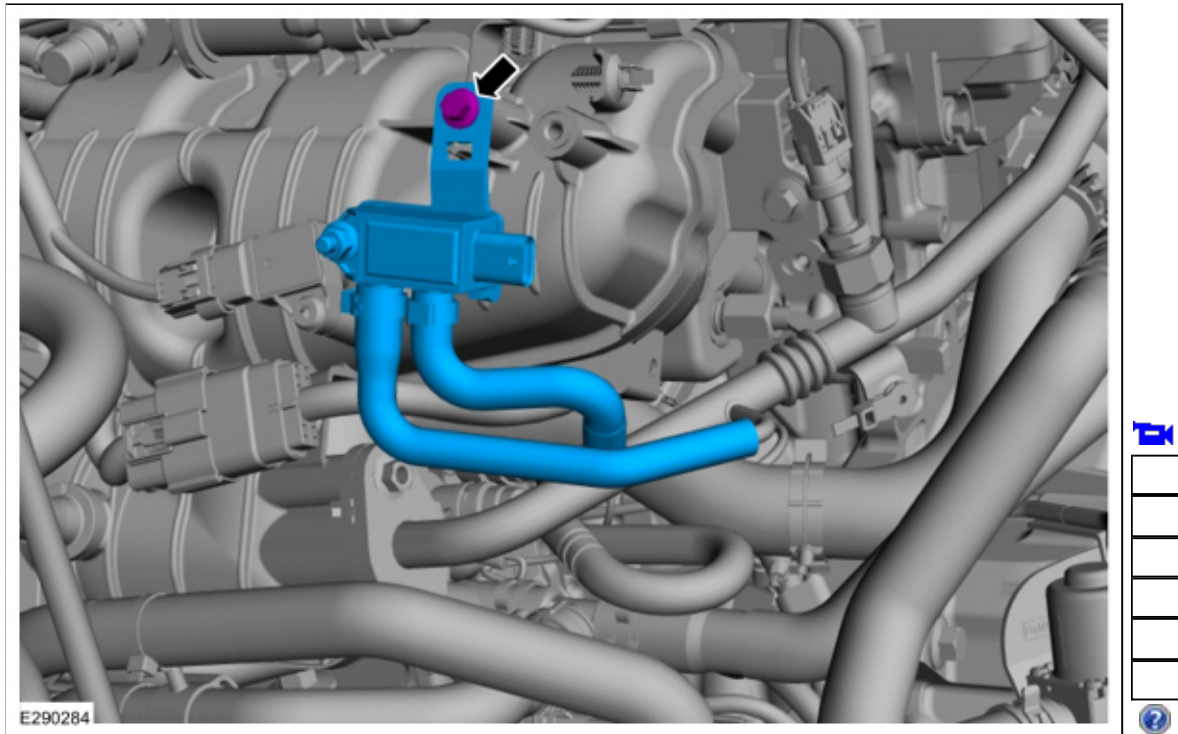

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

