


Exhaust Gas Recirculation (EGR) Back Pressure Sensor


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the air cleaner outlet pipe.
Refer to: [Air Cleaner Outlet Pipe](#) (303-12 Intake Air Distribution and Filtering - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2. Disconnect the electrical connector.

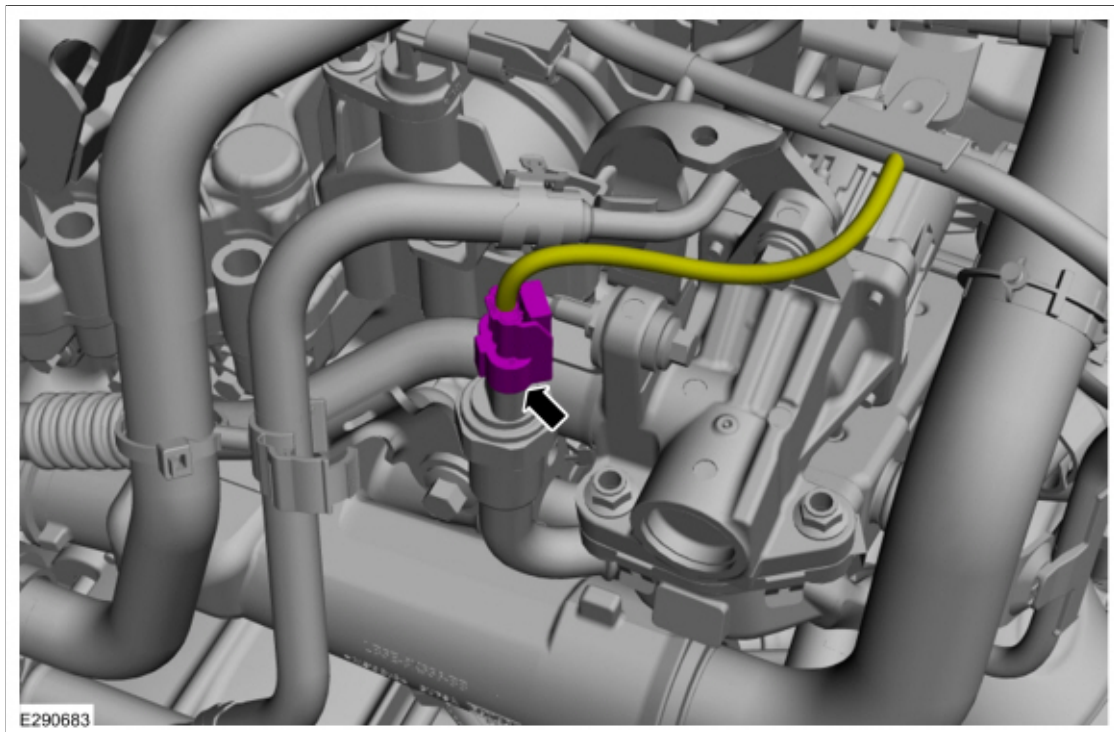

3. Remove the EGR back pressure sensor.
Torque: 97 lb.in (11 Nm)

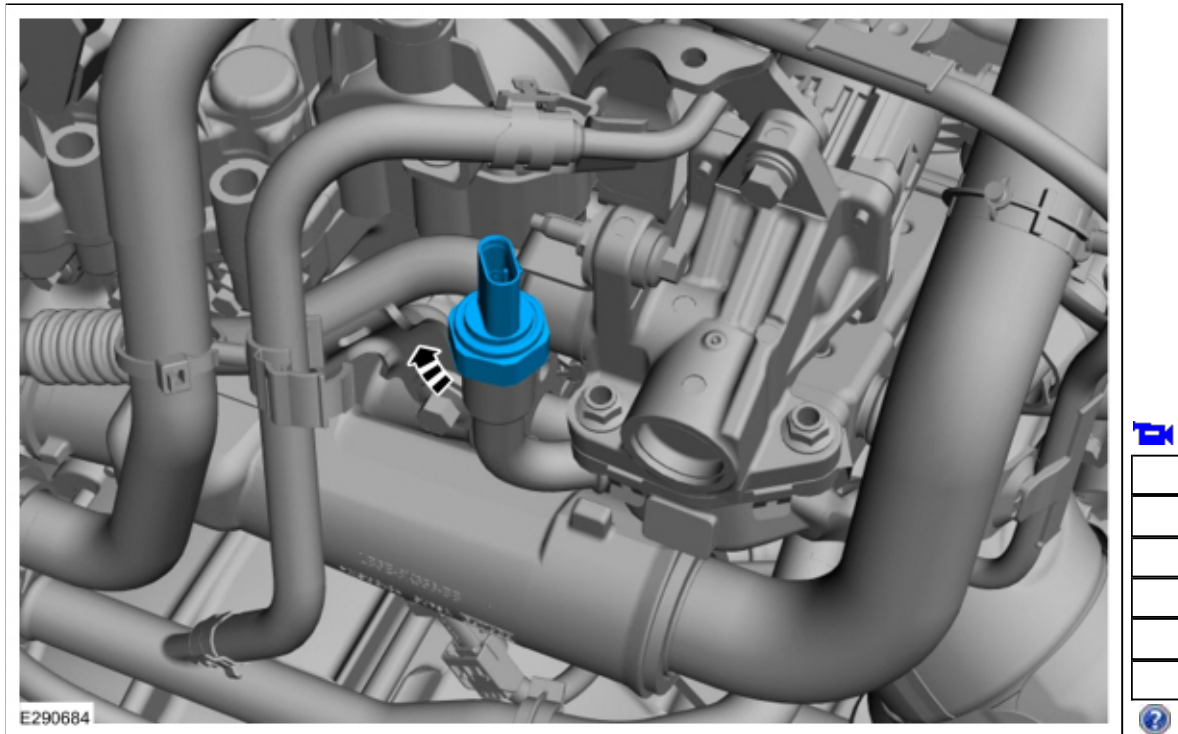

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

