


Exhaust Gas Recirculation (EGR) Coolant Outlet Temperature Sensor

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the EGR coolant outlet temperature sensor electrical connector.

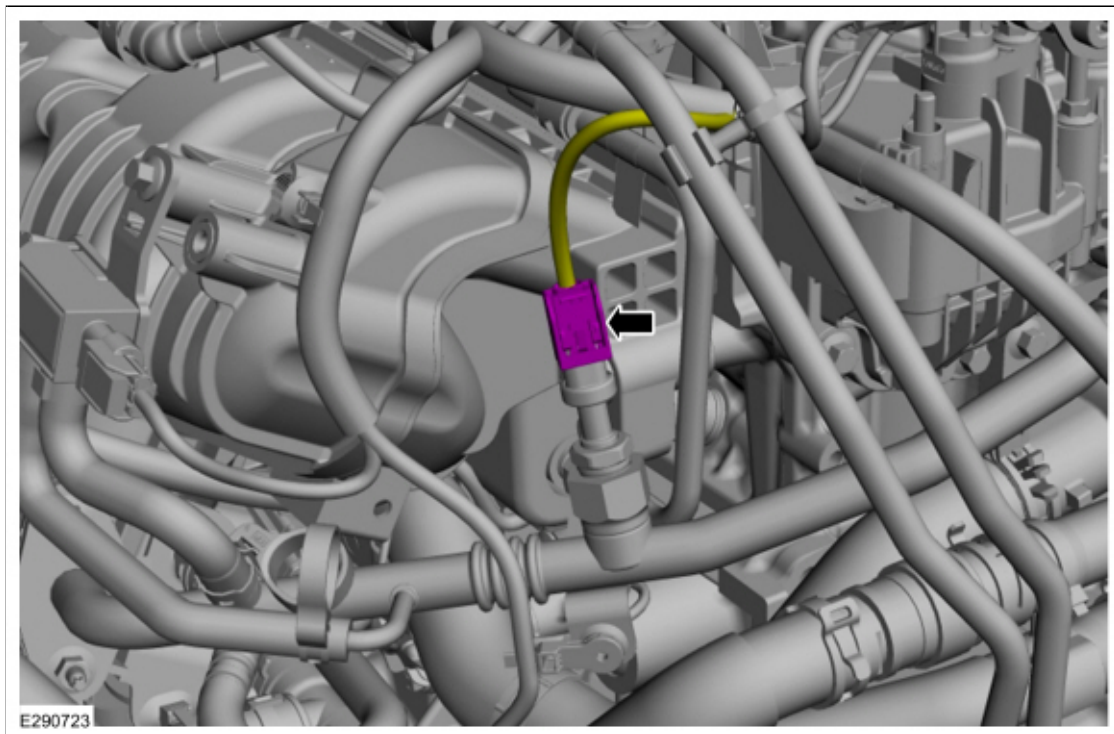


2. Remove the EGR coolant outlet temperature sensor.
Torque: 133 lb.in (15 Nm)



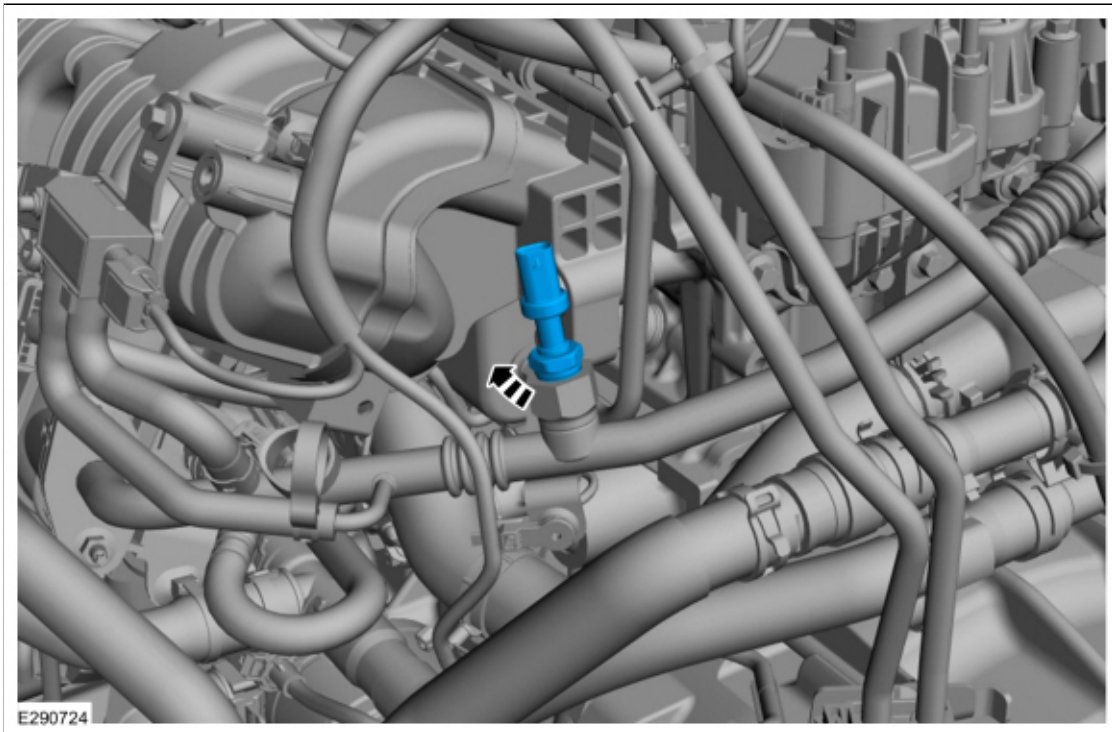

Installation

1.
 - Lubricate the o-ring seal with clean engine oil.
 - Replace the o-ring if necessary.

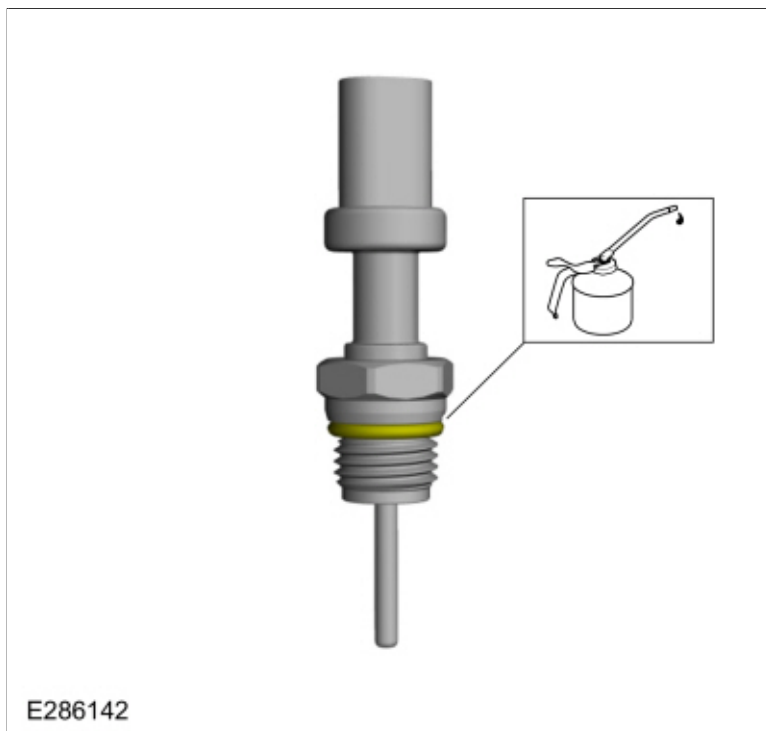

2. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
