

Evaporative Emission Canister Purge Valve

Base Part Number: 9D289

Removal


WARNING: Do not smoke, carry lighted tobacco or have an open flame of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.

WARNING: Do not carry personal electronic devices such as cell phones, pagers or audio equipment of any type when working on or near any fuel-related component. Highly flammable mixtures may be present and may be ignited. Failure to follow these instructions may result in serious personal injury.


NOTE: Removal steps in this procedure may contain installation details.

1. Remove the fasteners and the air intake duct.

Torque: 42 lb.in (4.8 Nm)

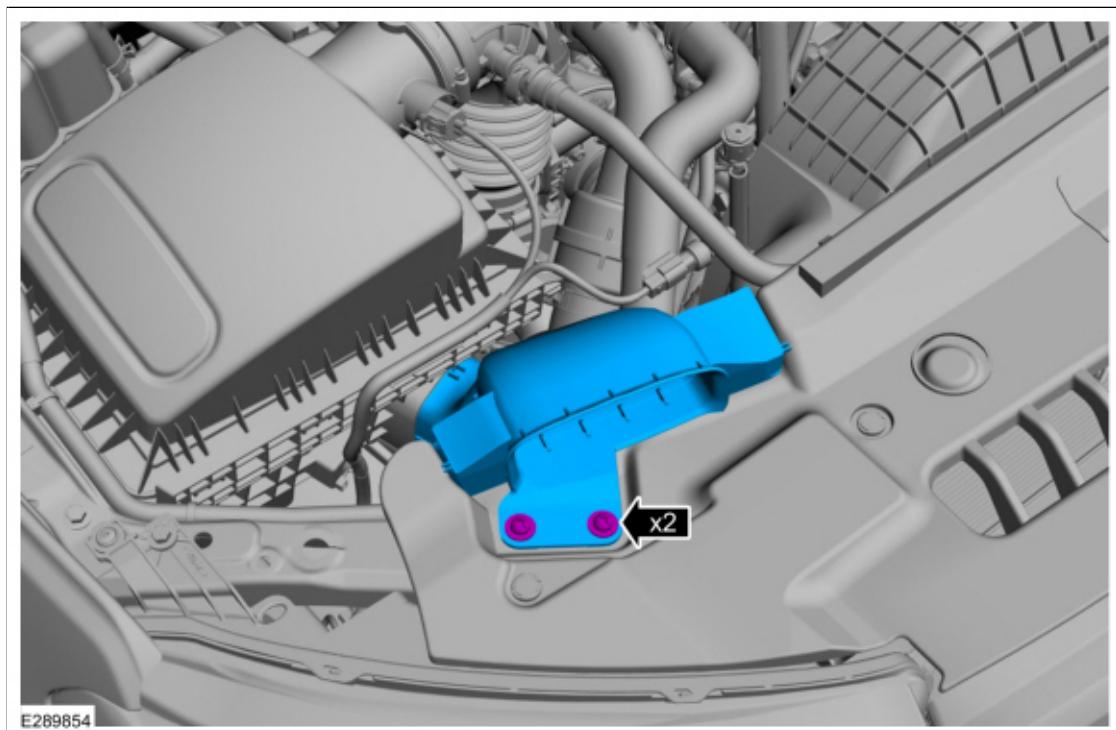


2. Disconnect the quick connect coupling and position aside the CAC intake pipe.
 Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).

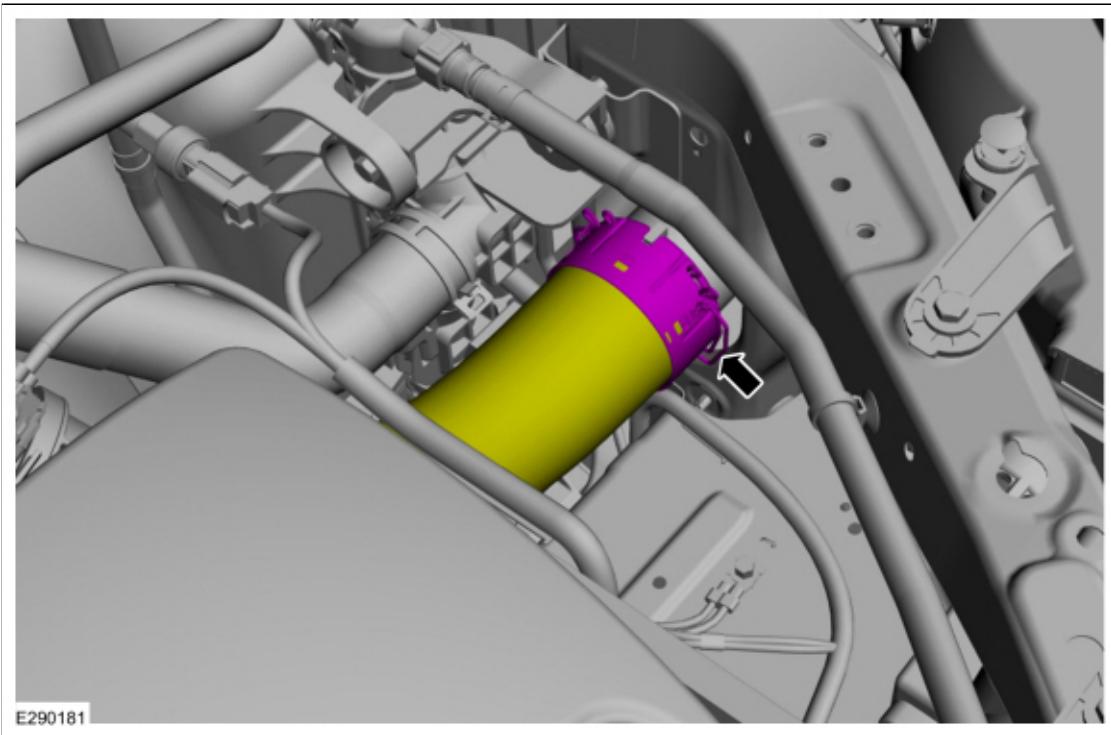


3. Disconnect the quick connect couplings.


Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).



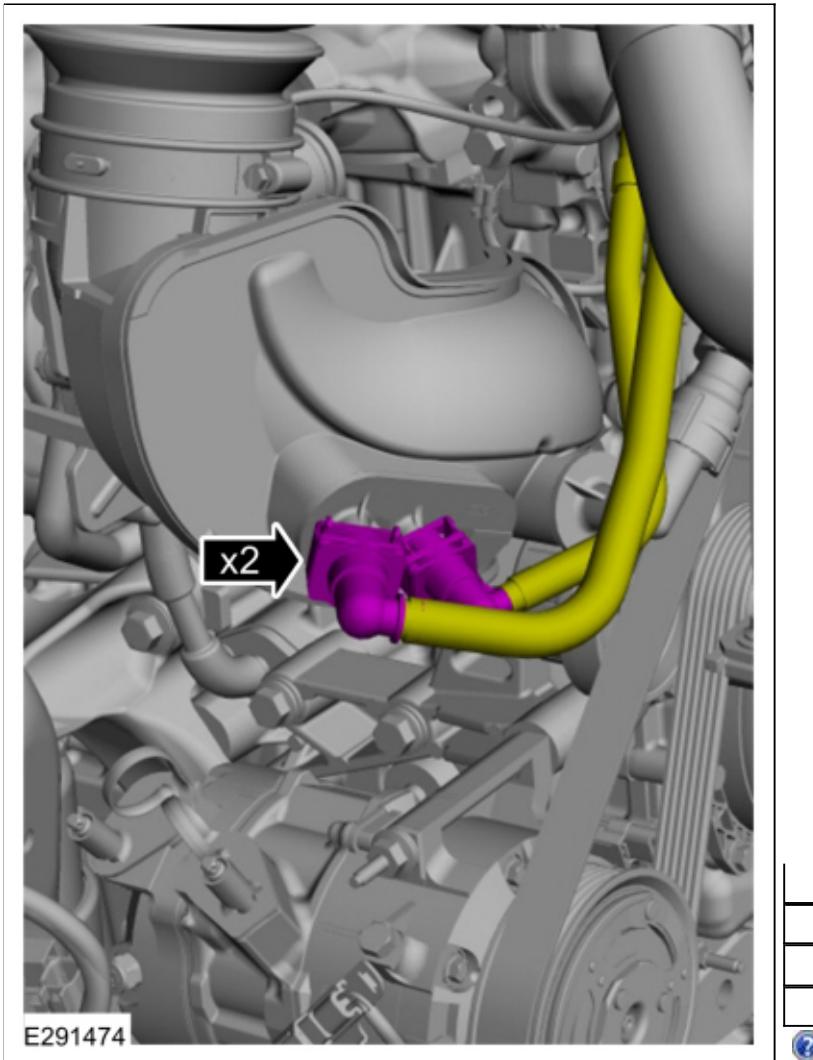

 
4. Disconnect the quick connect coupling and detach the wiring harness straps.
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).



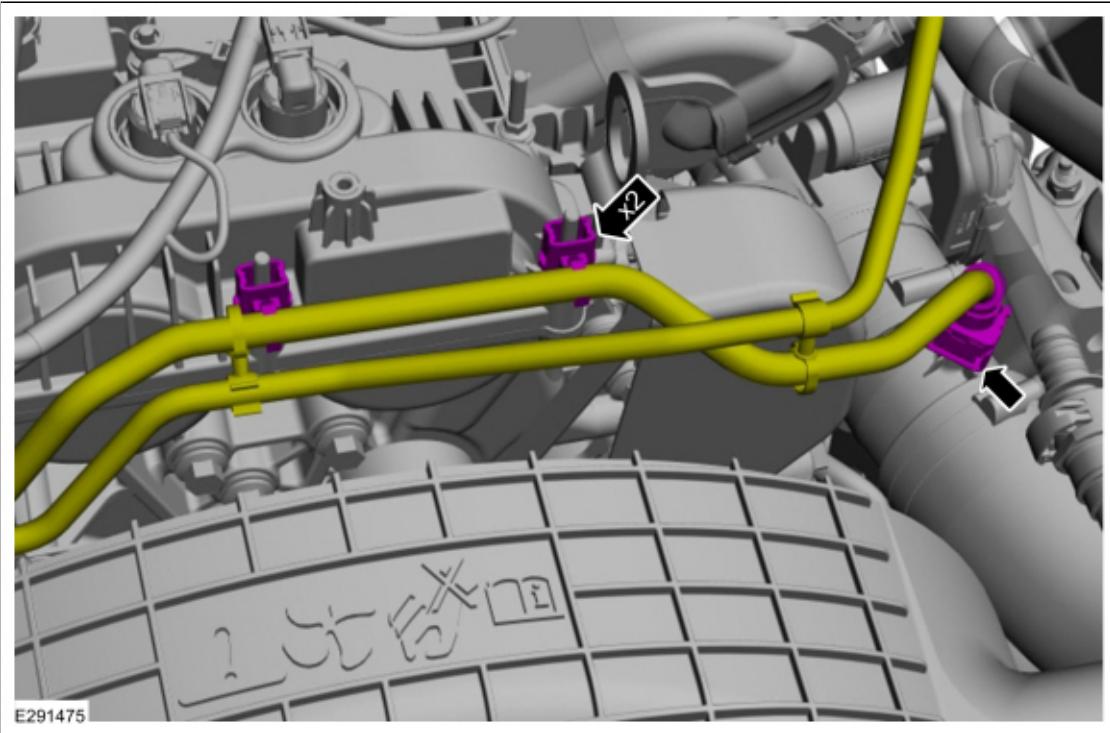

5.

- Disconnect the electrical connector.
- Disconnect the quick connect couplings.
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).
- Remove the EVAP purge valve.

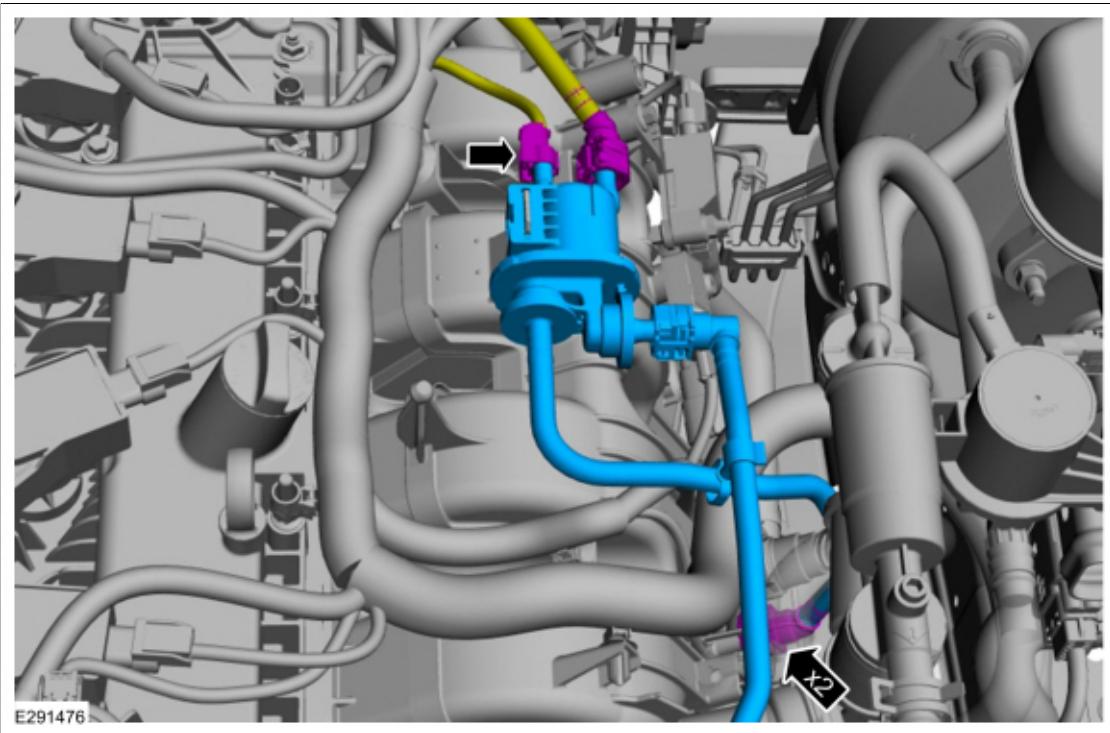

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company
