


Fuel Vapor Vent Valve

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Remove the fuel tank.
Refer to: [Fuel Tank](#) (310-01 Fuel Tank and Lines - 2.3L EcoBoost (201kW/273PS), Removal and Installation).
2.
 - Disconnect the electrical connector.
 - Disconnect the quick connect couplings.
Refer to: [Quick Release Coupling](#) (310-00 Fuel System - General Information - 2.3L EcoBoost (201kW/273PS), General Procedures).
 - Detach the clip and remove the fuel vapor vent valve.

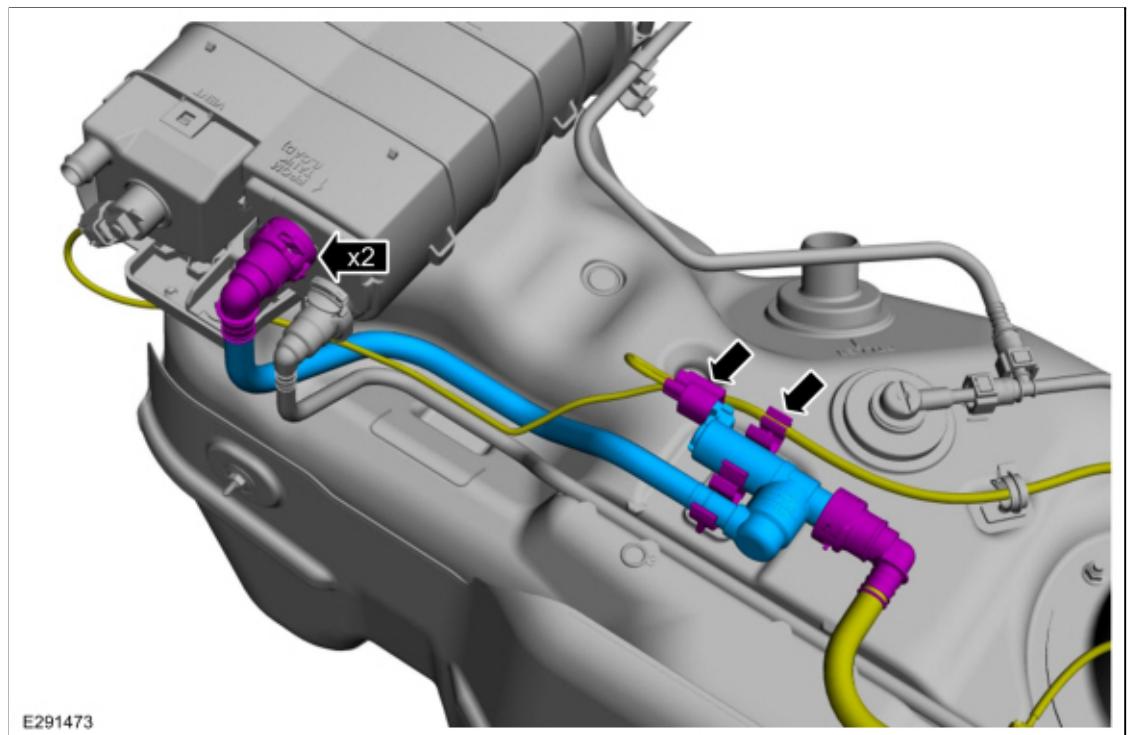

Installation

1. To install, reverse the removal procedure.

