


Intake Air Temperature (IAT) Sensor

Base Part Number: 9E607/12A697


Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Disconnect the IAT electrical connector.

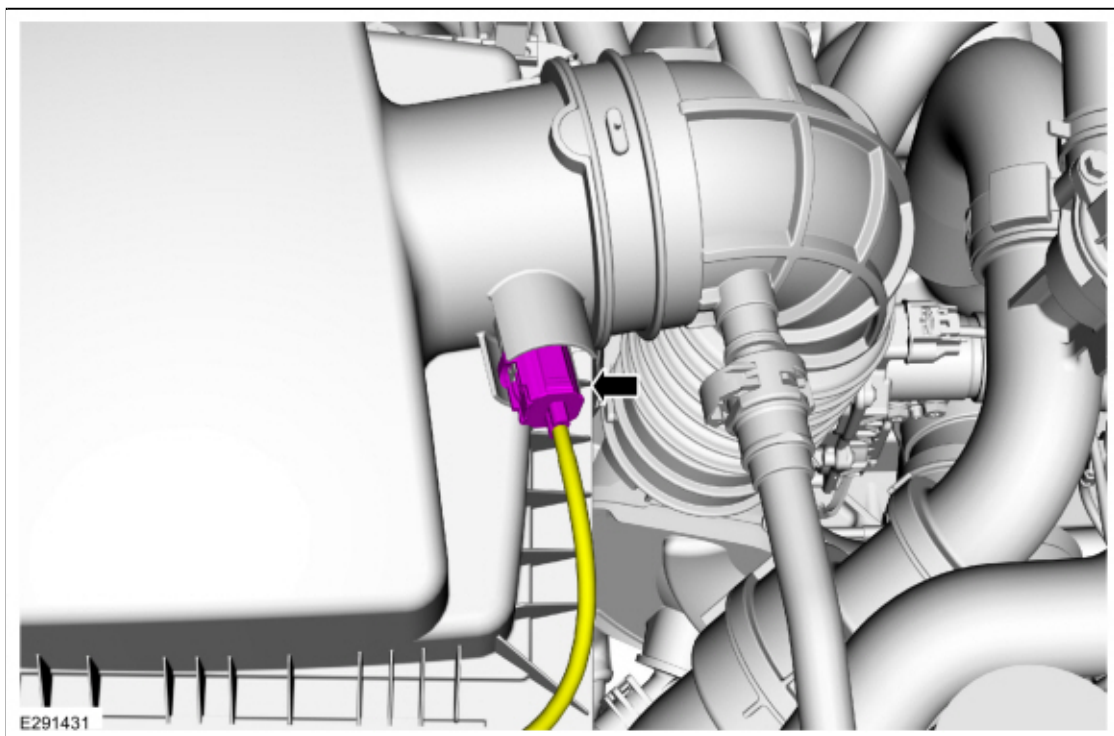

2. Remove the IAT sensor.

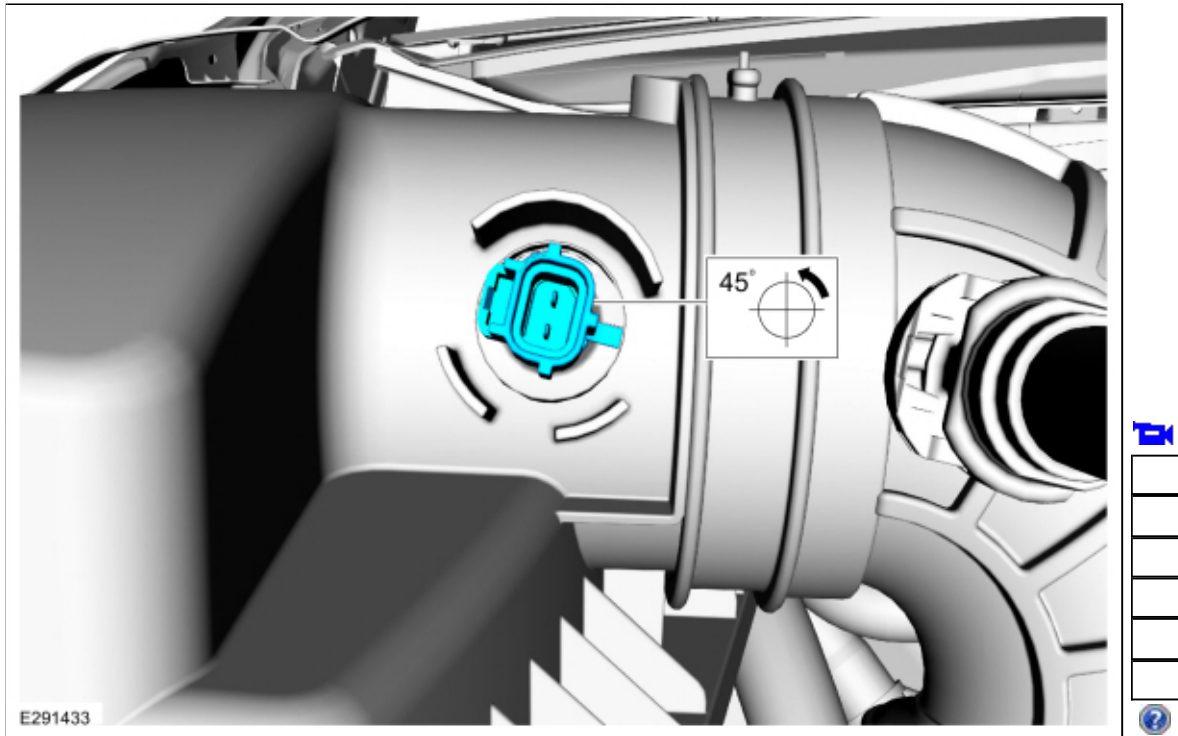

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

