

307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80

2019 Ranger

Diagnosis and Testing

Procedure revision date: 05/17/2018

F Clutch

Principles of Operation

Symptom Chart

F Clutch

For F clutch operation,

REFER to: [F Clutch](#) (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Description and Operation).

F Clutch

Condition	Possible Sources	Action
F clutch does not apply	<p><u>SSF</u> is mechanically stuck OFF</p>	<p>INSTALL a new solenoid.</p> <p>REFER to: Shift Solenoids (SS) (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>
	<p>F Clutch regulator valve stuck OFF</p>	<p>DISASSEMBLE, CLEAN and INSPECT the regulator valve. If bore or valve is damaged, INSTALL a new main control valve body.</p> <p>REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>PERFORM the Transmission Strategy Download,</p> <p>REFER to: Transmission Strategy Download (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).</p>
	<p>F CL CONTR, hydraulic circuit blocked/leaking</p>	<p>DISASSEMBLE and INSPECT the main control valve body and separator plate passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>

		<p>Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>
	F clutch hub	<p>INSPECT components wear and damage. CLEAN and/or INSTALL new components as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
	F clutch friction plates	<p>INSPECT components wear and damage. CLEAN and/or INSTALL new components as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
	F clutch piston seals	<p>INSPECT components wear and damage. CLEAN and/or INSTALL new components as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
F clutch always applied	<u>SSF</u> mechanically stuck	<p>INSTALL a new solenoid.</p> <p>REFER to: Shift Solenoids (SS) (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>
	F Clutch regulator valve or CL F latch valve stuck ON	<p>DISASSEMBLE, CLEAN and INSPECT the regulator valve. If bore or valve is damaged, INSTALL a new main control valve body.</p> <p>REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>PERFORM the Transmission Strategy Download,</p> <p>REFER to: Transmission Strategy Download (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).</p>
	F CL CONTR, hydraulic circuit cross leaks	<p>DISASSEMBLE and INSPECT the main control valve body and separator plate passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-</p>

		Speed Automatic Transmission - 10R80, Removal and Installation).
	F clutch hub, clutch and planetary carrier, No.4 ring gear	INSPECT components wear and damage. CLEAN and/or INSTALL new components necessary. REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).
	F clutch friction plates	INSPECT components wear and damage. CLEAN and/or INSTALL new components necessary. REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).
	F clutch piston seals	INSPECT components wear and damage. CLEAN and/or INSTALL new components necessary. REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).
F clutch delayed/soft/slipping apply	Incorrect transmission strategy programmed into <u>PCM</u> / <u>TCM</u> .	PERFORM the Transmission Strategy Download, REFER to: Transmission Strategy Download (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).
	Low line pressure	PERFORM the line pressure test. REFER to: Special Testing Procedures (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Diagnosis and Testing).
	<u>SSF</u> mechanically sticking	INSTALL a new solenoid. REFER to: Shift Solenoids (SS) (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).
	F Clutch regulator valve sticking	DISASSEMBLE, CLEAN and INSPECT the valves. If bore or valve is damaged, INSTALL a new main control valve body. REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation). REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation). REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation). PERFORM the Transmission Strategy Download, REFER to: Transmission Strategy Download (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).
	F CL CONTR, hydraulic circuits blocked/leaking	DISASSEMBLE and INSPECT the main control valve body and separator plate passages for debris/blockage. CLEAN as necessary. REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).

		<p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>
	F clutch friction plates	<p>DISASSEMBLE and INSPECT the transmission passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
	F clutch piston seals	<p>DISASSEMBLE and INSPECT the transmission passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
F clutch harsh apply	Incorrect transmission strategy programmed into <u>PCM/ TCM</u> .	<p>PERFORM the Transmission Strategy Download,</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
	High line pressure	<p>PERFORM line pressure test.</p> <p>REFER to: Special Testing Procedures (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Diagnosis and Testing).</p>
	<u>SSF</u> mechanically sticking	<p>INSTALL a new solenoid.</p> <p>REFER to: Shift Solenoids (SS) (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>
	F Clutch regulator valve sticking	<p>DISASSEMBLE, CLEAN and INSPECT the valves. If bore or valve is damaged, INSTALL a new main control valve body.</p> <p>REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>PERFORM the Transmission Strategy Download,</p> <p>REFER to: Transmission Strategy Download (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, General Procedures).</p>
	F CL CONTR hydraulic circuit blocked/leaking	<p>DISASSEMBLE and INSPECT the main control valve body and separator plate passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Main Control Valve Body (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>

	<p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p> <p>REFER to: Main Control Valve Body - Vehicles With: Auto-Start-Stop (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Removal and Installation).</p>
F clutch friction plates	<p>DISASSEMBLE and INSPECT the transmission passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>
F clutch piston return springs	<p>DISASSEMBLE and INSPECT the transmission passages for debris/blockage. CLEAN as necessary.</p> <p>REFER to: Transmission (307-01 Automatic Transmission - 10-Speed Automatic Transmission - 10R80, Overhaul).</p>

Copyright © 2019 Ford Motor Company
