

Selector Shaft Seal


Base Part Number: 7F337

Special Tool(s) / General Equipment

	<p>307-549 Installer, Shift Shaft Fluid Seal TKIT-2005D1-F1</p>
E270043	

Removal

1. With the vehicle in NEUTRAL, position it on a hoist.
 Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. If equipped, remove the bolts, release the retainer and remove the splash shield.


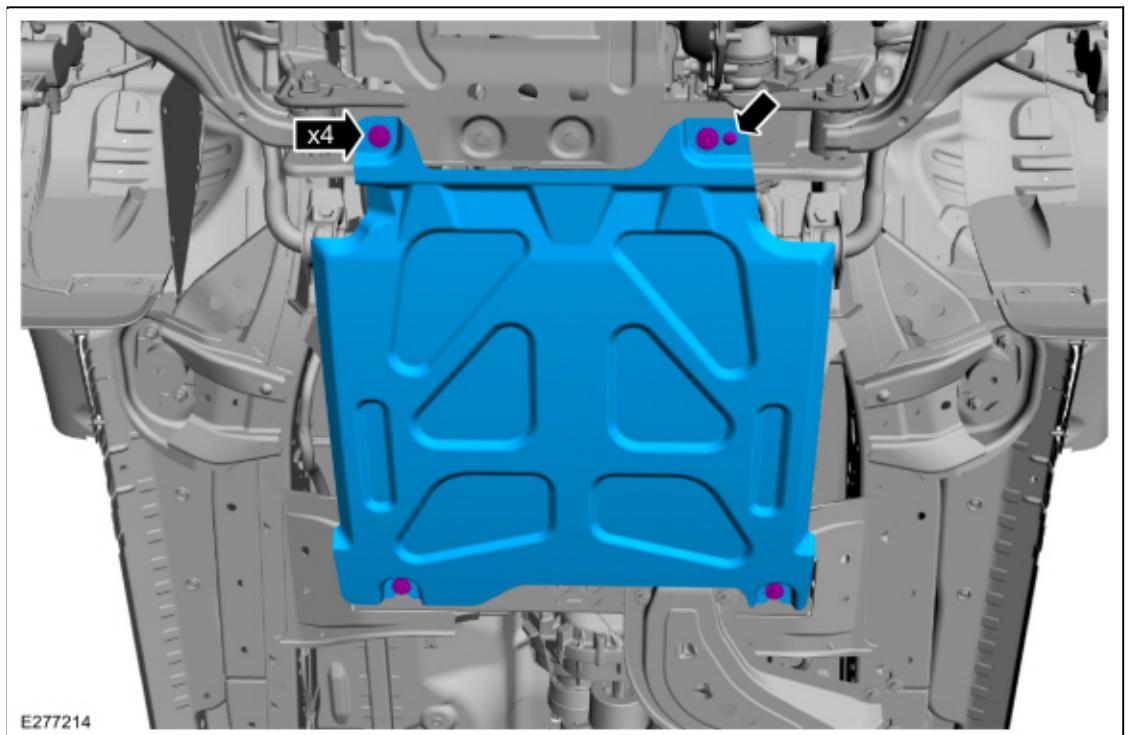



Four-Wheel Drive (4WD) vehicles

3. Remove the front driveshaft assembly.
 Refer to: [Front Driveshaft](#) (205-01 Driveshaft, Removal and Installation).


All vehicles**4. NOTICE: Take extra care when handling selector lever cable.**

 Disconnect the selector lever cable from the manual control lever.

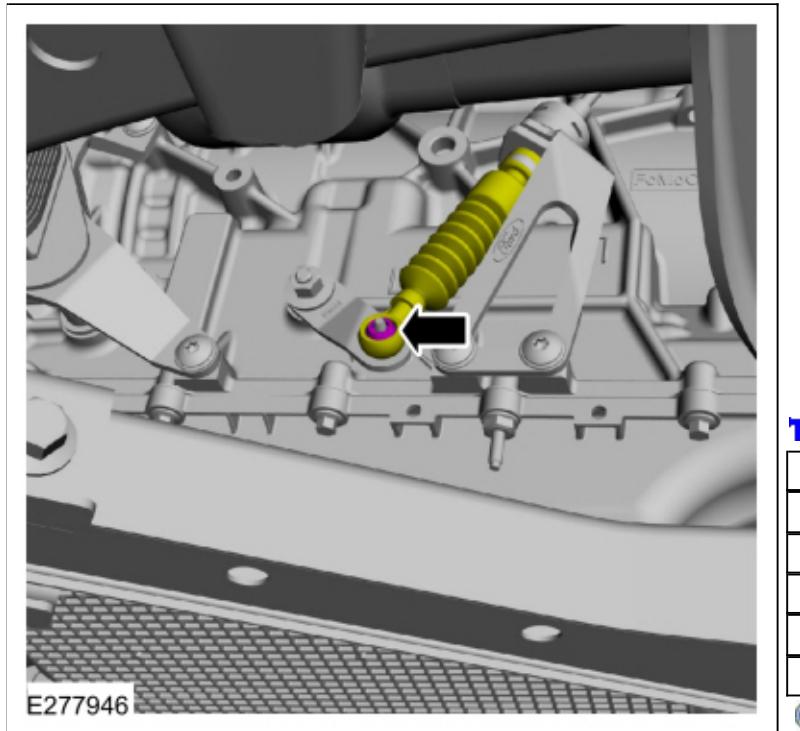**5. Remove the nut and the manual control lever.**

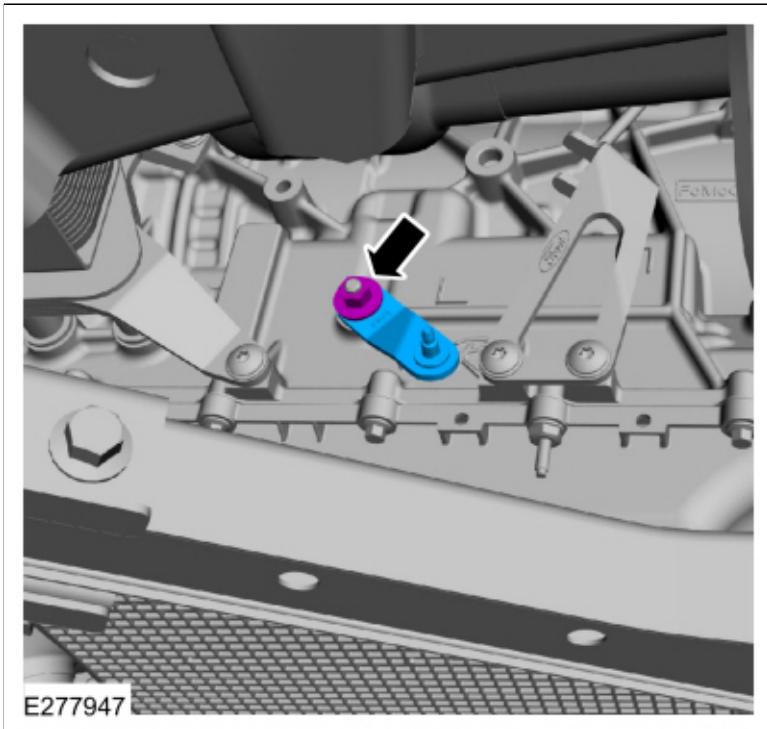


6. Remove and discard the selector shaft seal (7F337).

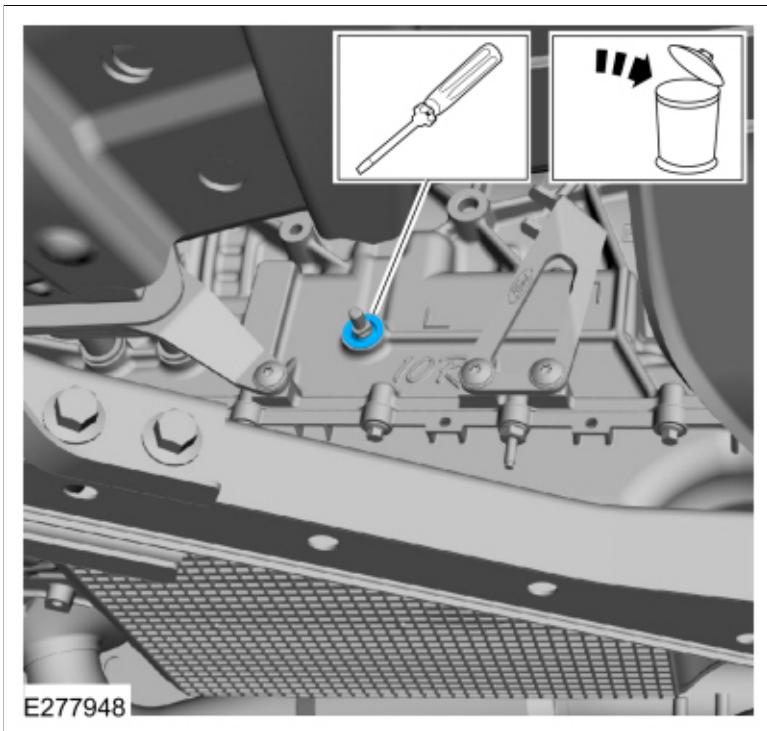


Installation


1. Slide the selector shaft seal onto the manual shaft.

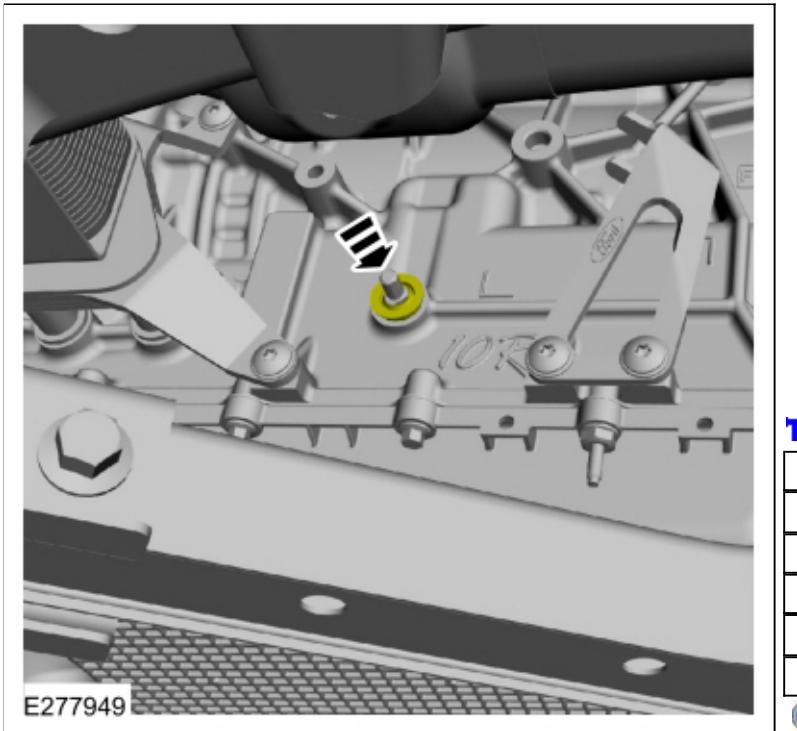

- Using the special tool, install the selector shaft seal.
Use Special Service Tool: [307-549 Installer, Shift Shaft Fluid Seal](#).

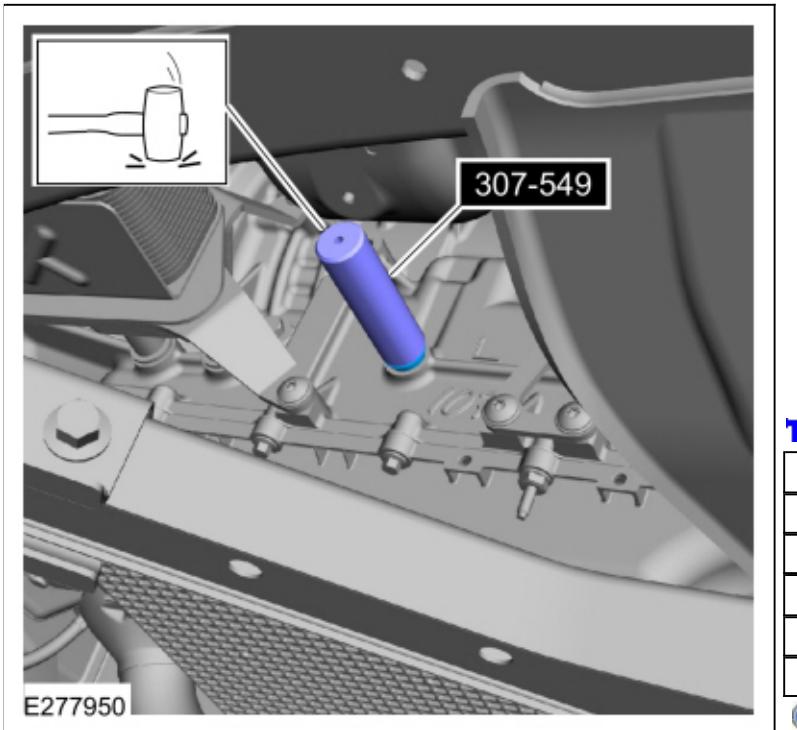


- Install the manual control lever and nut.
Torque: 106 lb.in (12 Nm)

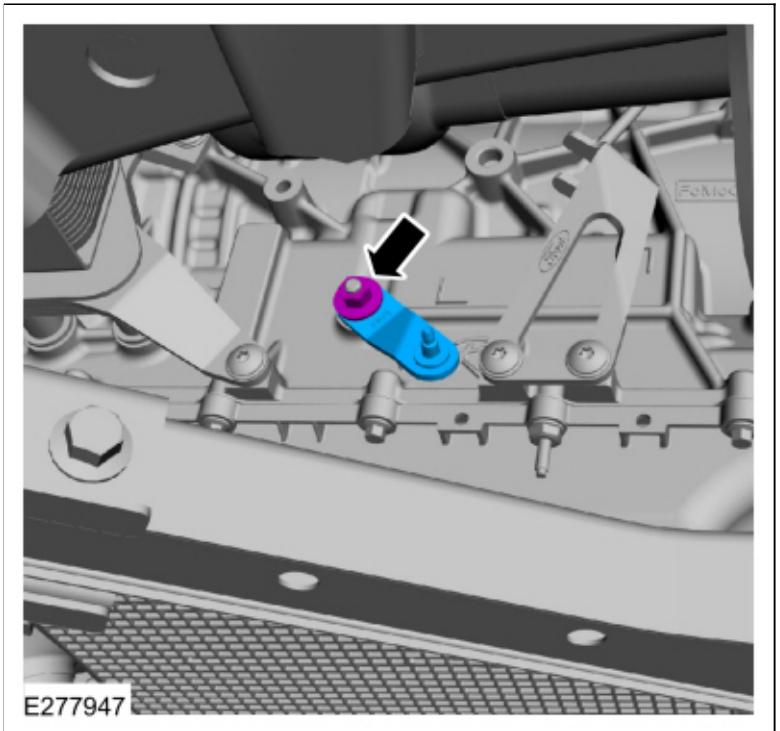

4. NOTICE: Take extra care when handling selector lever cable.

Connect the selector lever cable to the manual control lever.

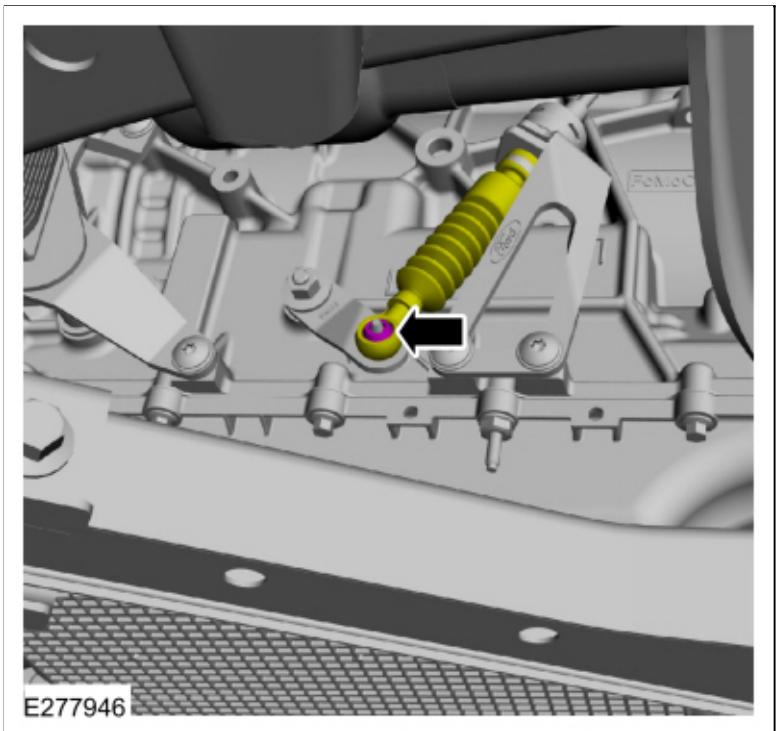


Four-Wheel Drive (4WD) vehicles

5. Install the front driveshaft assembly.
Refer to: [Front Driveshaft](#) (205-01 Driveshaft, Removal and Installation).

All vehicles

6. If equipped, install the splash shield, bolts and the retainer.
Torque: 22 lb.ft (30 Nm)

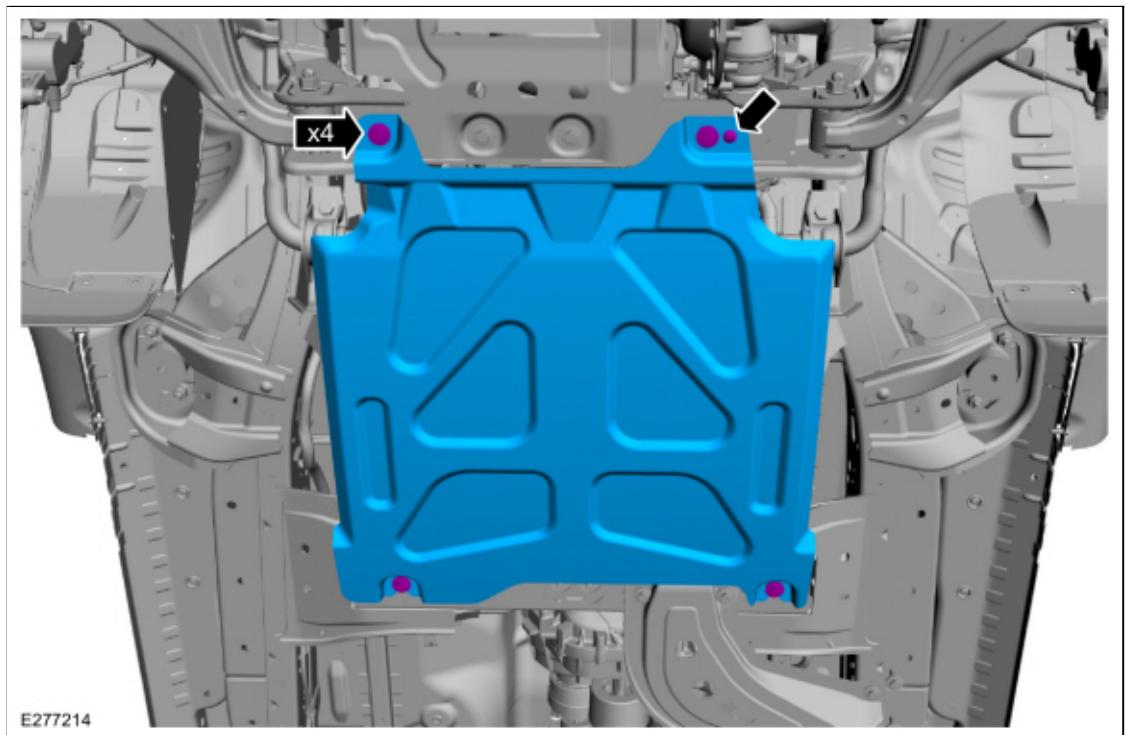

7. Adjust the selector lever cable.
Refer to: [Selector Lever Cable Adjustment](#) (307-05 Automatic Transmission External Controls, General Procedures).

Copyright © 2019 Ford Motor Company

