

Horn

Base Part Number: 13801

DTC Chart(s)

DTC Chart: Horn

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.
REFER to
REFER to: [Horn - System Operation and Component Description](#) (413-06 Horn, Description and Operation).

Body Control Module (BCM) DTC Chart

DTC	Description	Actions
B1323:11	Horn Switch: Signal Short to Ground	GO to Pinpoint Test B
B1323:23	Horn Switch: Signal Stuck Low	GO to Pinpoint Test B
B1C55:11	Horn Relay: Circuit Short to Ground	GO to Pinpoint Test B
B1C55:12	Horn Relay: Circuit Short to Battery	GO to Pinpoint Test A
B1C55:13	Horn Relay: Circuit Open	GO to Pinpoint Test A
B1C55:14	Horn Relay: Circuit Short to Ground or Open	<ul style="list-style-type: none">• If the horn is inoperative, GO to Pinpoint Test A• If the horn is always on, GO to Pinpoint Test B
B1C55:19	Horn Relay: Circuit Current Above Threshold	GO to Pinpoint Test A

Symptom Chart(s)

Symptom Chart: Horn

Diagnostics in this manual assume a certain skill level and knowledge of Ford-specific diagnostic practices.
REFER to
REFER to: [Diagnostic Methods](#) (100-00 General Information, Description and Operation).

Symptom Chart

Condition	Possible Sources	Actions
The horn is inoperative	Refer to the pinpoint test	GO to Pinpoint Test A
The horn is always on	Refer to the pinpoint test	GO to Pinpoint Test B

Pinpoint Tests

► [PINPOINT TEST A : THE HORN IS INOPERATIVE](#)

► [PINPOINT TEST B : THE HORN IS ALWAYS ON](#)

Copyright © 2019 Ford Motor Company
