

Seatbelt Minder Deactivating/Activating

Preparation

1. Apply the parking brake.
2. Place the transmission selector lever in P (Park) - vehicles with automatic transmission or the neutral position - vehicles with manual transmission.
3. Turn the ignition switch to the OFF position.
4. Close all the vehicle doors from the inside of the vehicle.

Deactivating/Activating

NOTE: Deactivation of the belt minder may also be carried out using IDS. Follow the instructions on the screen.

NOTE: The belt minder can be turned off independently for the driver and the front passenger by performing the following procedure.

1. **Unbuckle** the driver's safety belt.
2. **Unbuckle** the front passenger's safety belt.
3. Turn the ignition switch to the ON position (do not start the engine).
4. **Wait until the safety belt warning indicator turns off.**
5. **NOTE:** This step must be completed within 30 seconds or the procedure must be repeated.
Buckle then unbuckle the safety belt four times, ending with the safety belt unbuckled. Release the red unbuckle switch **completely** every cycle.
6. The safety belt warning indicator flashes momentarily to confirm the belt minder status change.
7. Turn the ignition switch to the OFF position. The deactivation/activation procedure is now complete.

