

Parking Assist Control Module (PAM)

Removal

NOTE: Removal steps in this procedure may contain installation details.

1. Refer to: [Body Control Module \(BCM\)](#) (419-10 Multifunction Electronic Modules, Removal and Installation).
Refer to: [Body Control Module \(BCM\)](#) (419-10 Multifunction Electronic Modules, Removal and Installation).

Installation

1. To install, reverse the removal procedure.