


### Rear Parking Aid Sensor

#### Removal

**NOTE:** This procedure can be used for all locations of the component.

1. Remove the rear bumper cover.  
Refer to: [Rear Bumper](#) (501-19 Bumpers, Removal and Installation).
2. Remove the rear park aid sensor.
  1. Disconnect the rear park aid sensor electrical connector.
  2. Release the tabs.
  3. Remove the park aid sensor from the bracket.

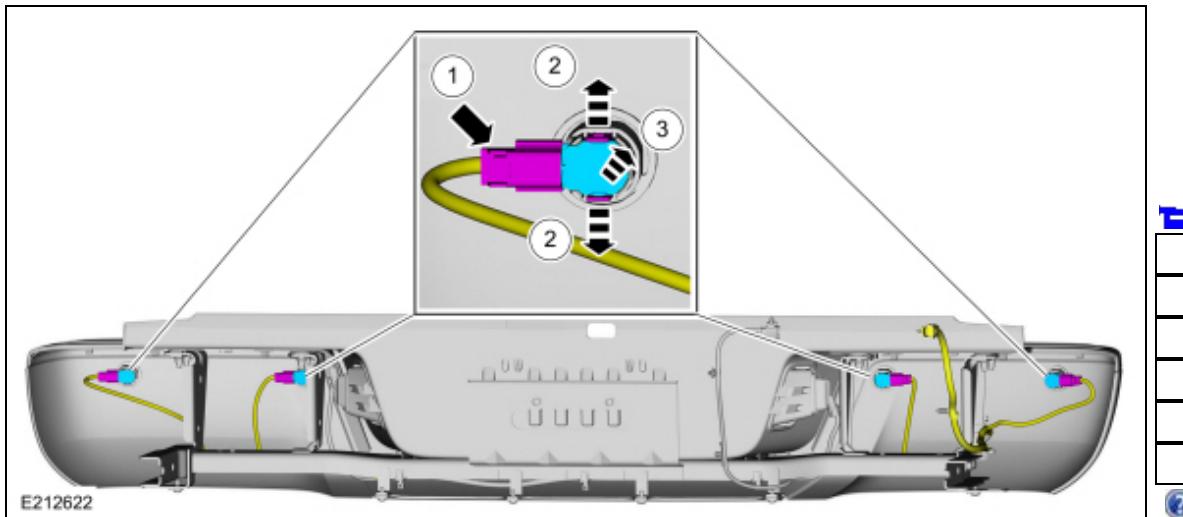

#### Installation

1. To install, reverse the removal procedure.
2. Carry out the azimuth and elevation system checks.  
Refer to: [Azimuth System Check](#) (413-13A Parking Aid, General Procedures).  
Refer to: [Elevation System Check](#) (413-13A Parking Aid, General Procedures).
3. If any sensor fails the system checks, diagnose the sensor fault.  
Refer to: [Parking Aid](#) (413-13A Parking Aid, Diagnosis and Testing).

