


Rear Parking Aid Camera


Removal

NOTE: Removal steps in this procedure may contain installation details.



1.

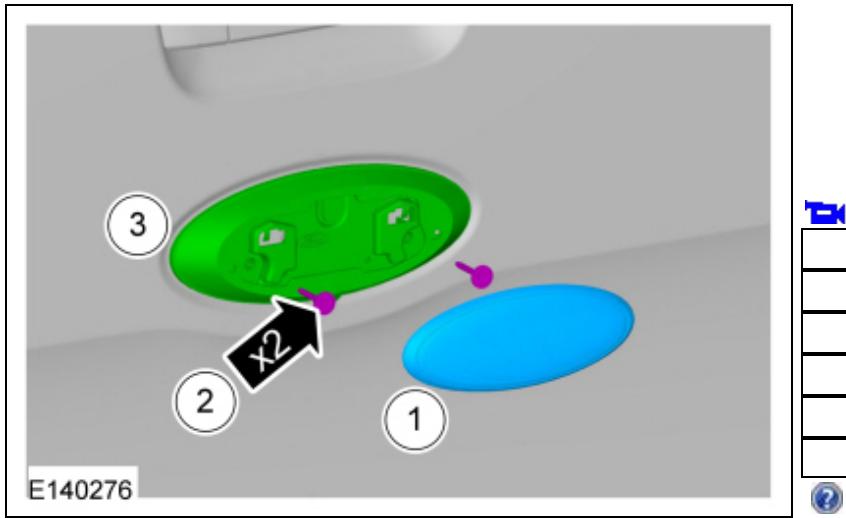



2. Remove the screws and the rear view camera bracket.

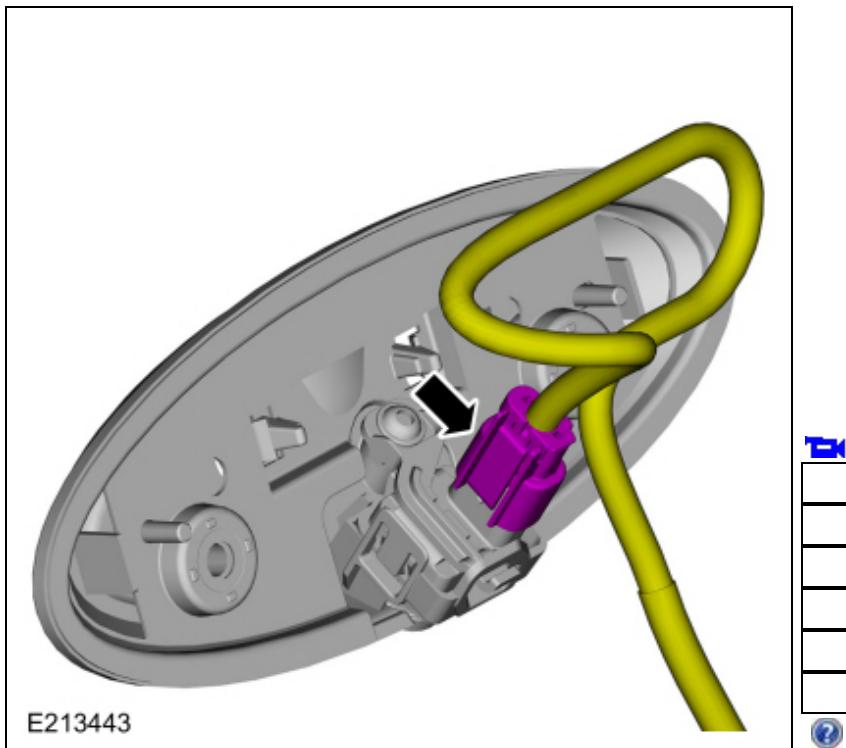

 3. Remove the screws and the rear view camera bracket.

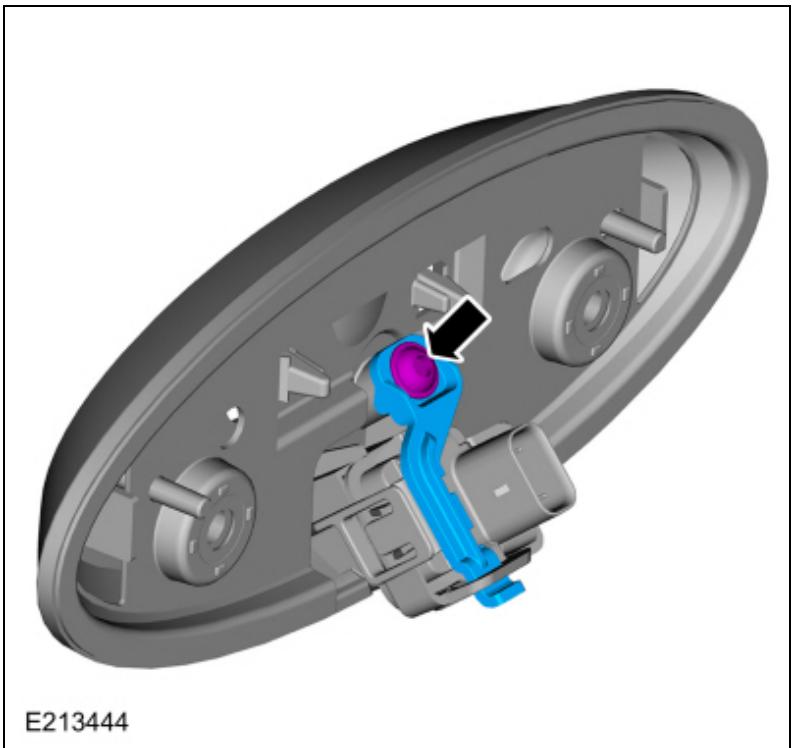

 4. Disconnect and remove the rear view camera.

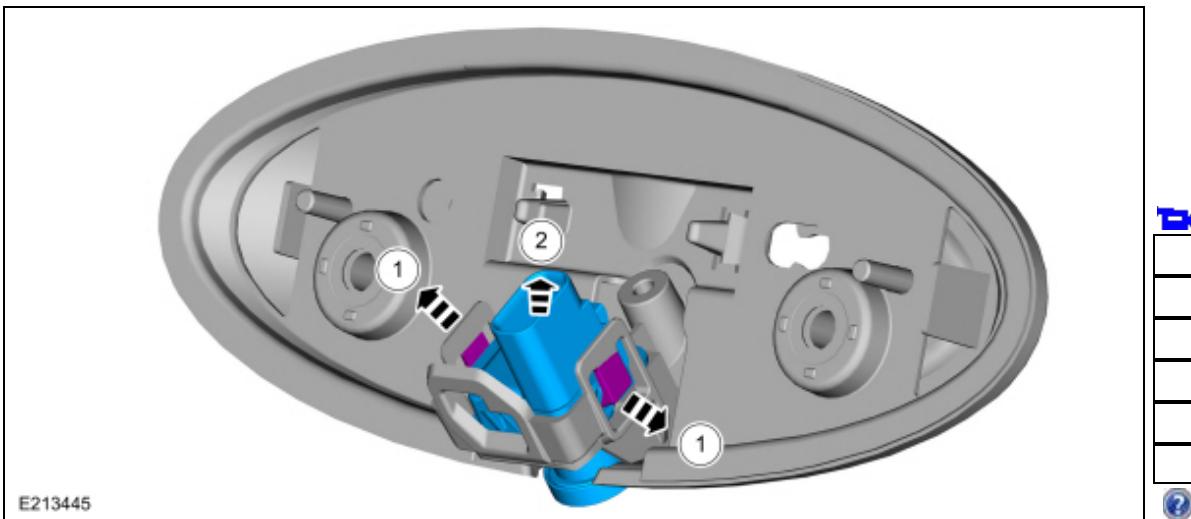

Installation

1. To install, reverse the removal procedure.
2. Follow the instructions on the scan tool to configure the rear view camera.

