

Battery Cables - 2.3L EcoBoost (201kW/273PS)

Base Part Number: 14B060


Removal

NOTE: This procedure provides information about routing, retaining points and connectors of the cable. It does not include the steps for removing components to gain access to the cable.


1. With the vehicle in NEUTRAL, position it on a hoist.
Refer to: [Jacking and Lifting](#) (100-02 Jacking and Lifting, Description and Operation).
2. Disconnect the battery.
Refer to: [Battery Disconnect and Connect](#) (414-01 Battery, Mounting and Cables, General Procedures).

Negative Battery Cable

3.
 1. Torque: 177 lb.in (20 Nm)
 2. Torque: 177 lb.in (20 Nm)
 3. Torque: 106 lb.in (12 Nm)
 4. Torque: 48 lb.in (5.4 Nm)

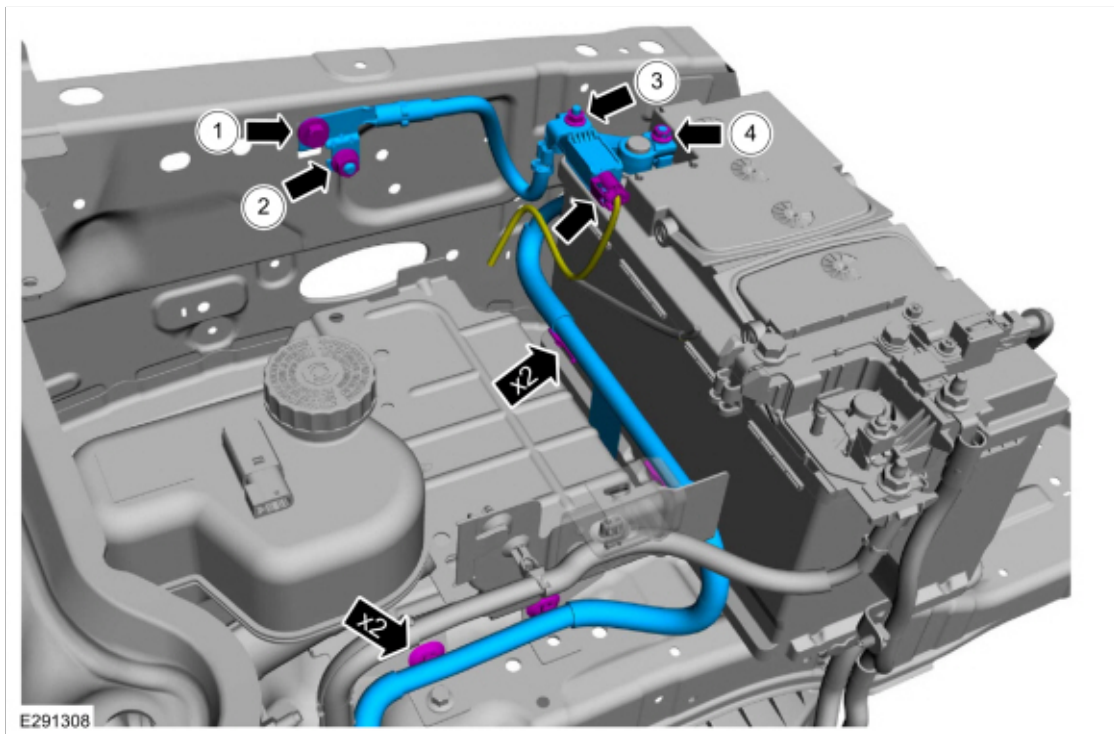


4.
 1. Torque: 30 lb.ft (40 Nm)
 2. Torque: 177 lb.in (20 Nm)

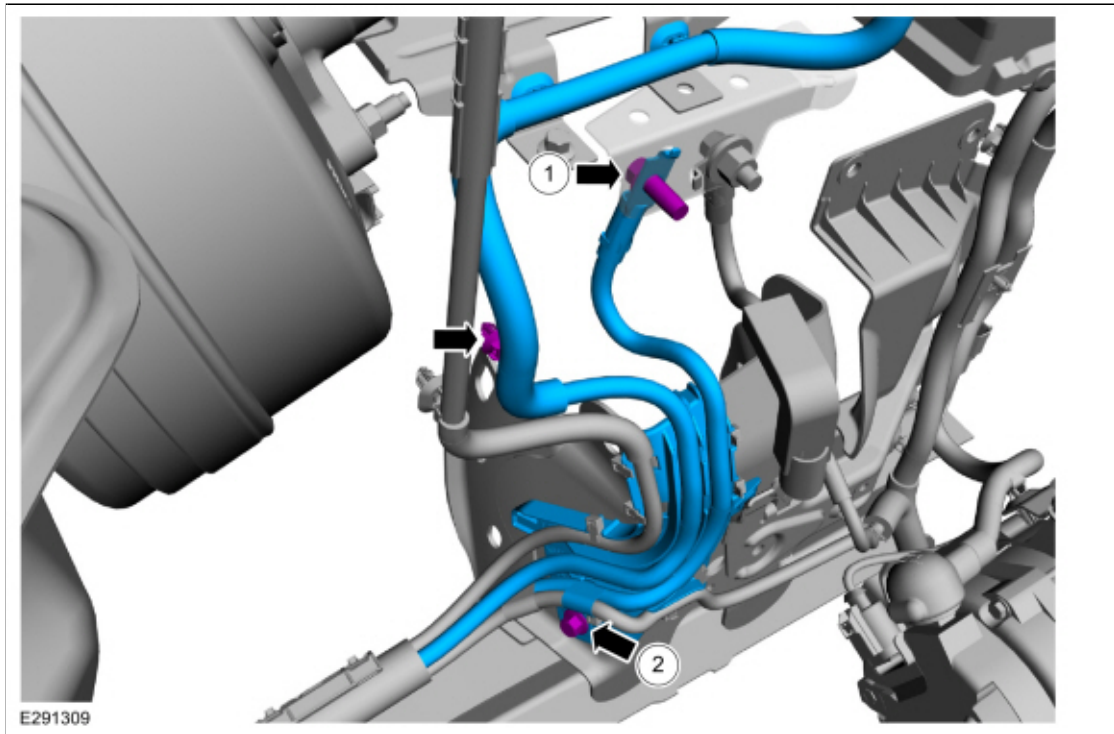

5.


1. Torque: 177 lb.in (20 Nm)
2. Torque: 93 lb.in (10.5 Nm)
3. Torque: 133 lb.in (15 Nm)

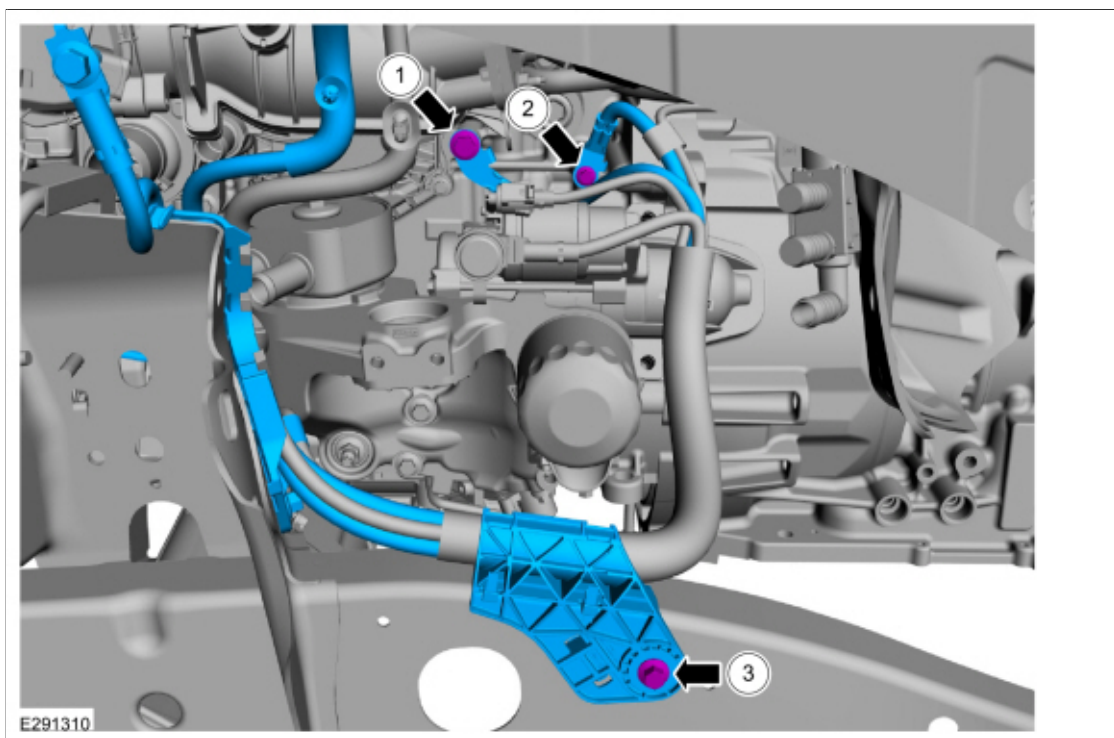


Positive Battery Cable to Generator

6.

1. Torque: 48 lb.in (5.4 Nm)
2. Torque: 119 lb.in (13.5 Nm)

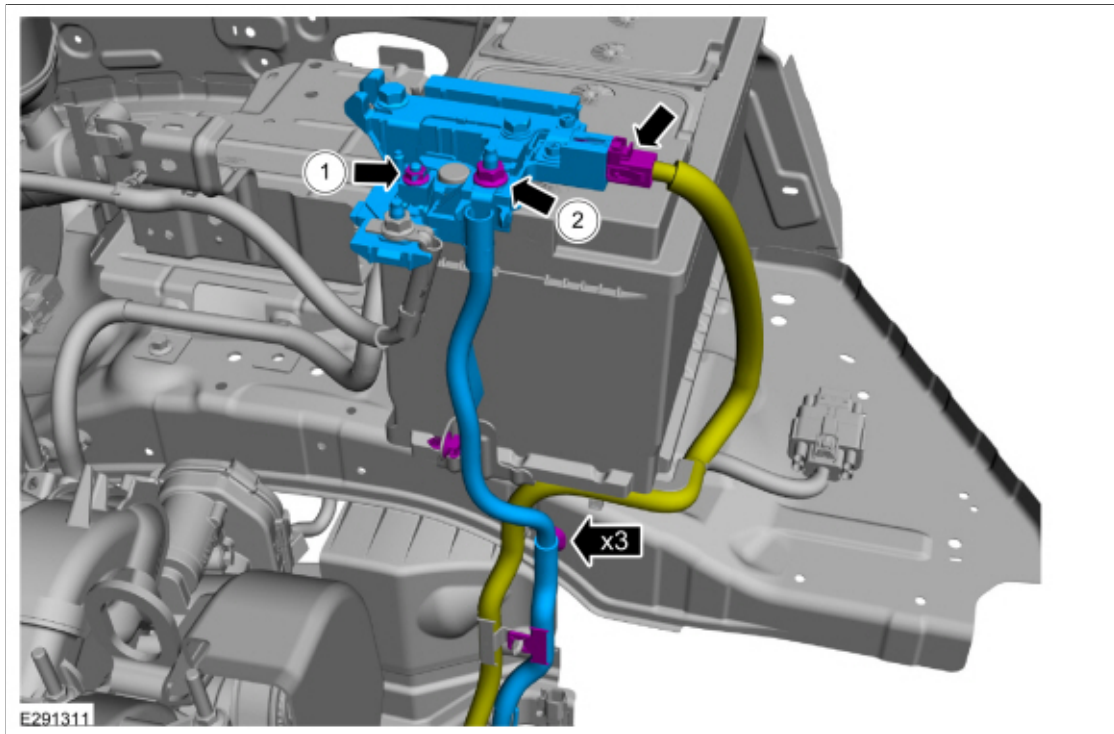


7. Torque: 133 lb.in (15 Nm)

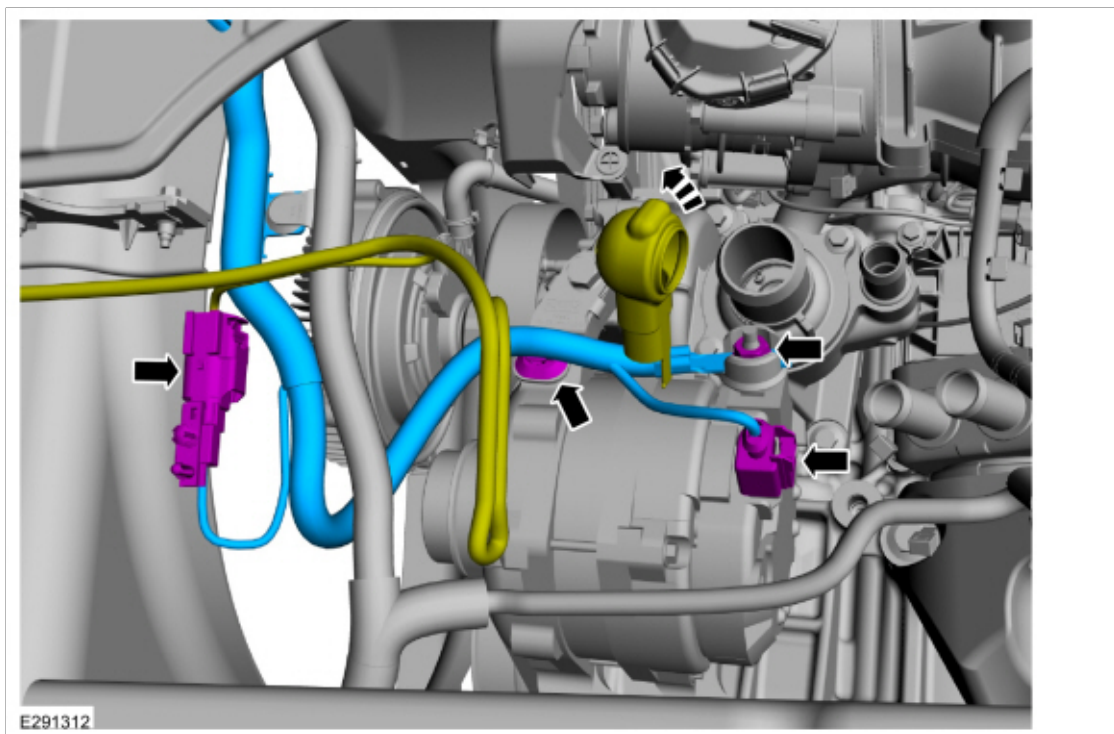


Positive Battery Cable to Starter Motor

8. *Torque:* 119 lb.in (13.5 Nm)

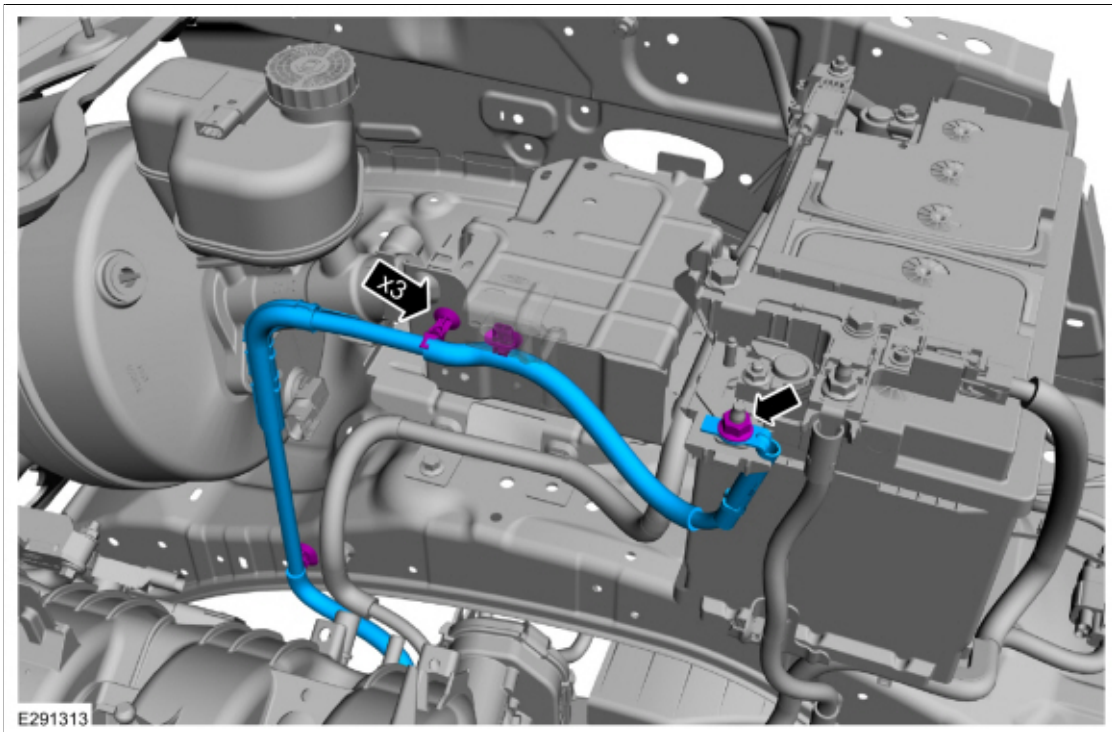

9.

1. *Torque:* 133 lb.in (15 Nm)
2. *Torque:* 177 lb.in (20 Nm)
3. *Torque:* 106 lb.in (12 Nm)

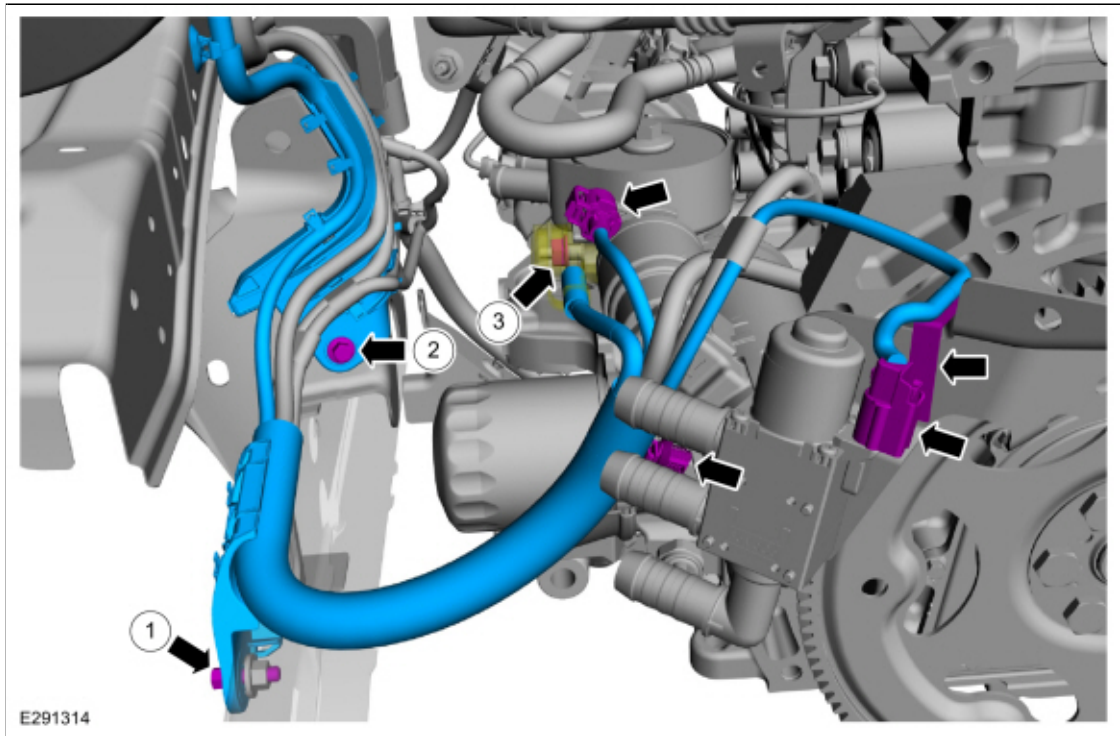

Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

