

415-00B Information and Entertainment System - General Information - Vehicles  
With: SYNC 3

2019 Ranger

Removal and Installation


Procedure revision date:  
12/3/2018

## Front Control/Display Interface Module (FCDIM)


### Removal

**NOTE:** Removal steps in this procedure may contain installation details.

1. Remove the APIM.  
Refer to: [SYNC Module \[APIM\]](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Removal and Installation).
2. Disconnect and remove the LVDS cable.

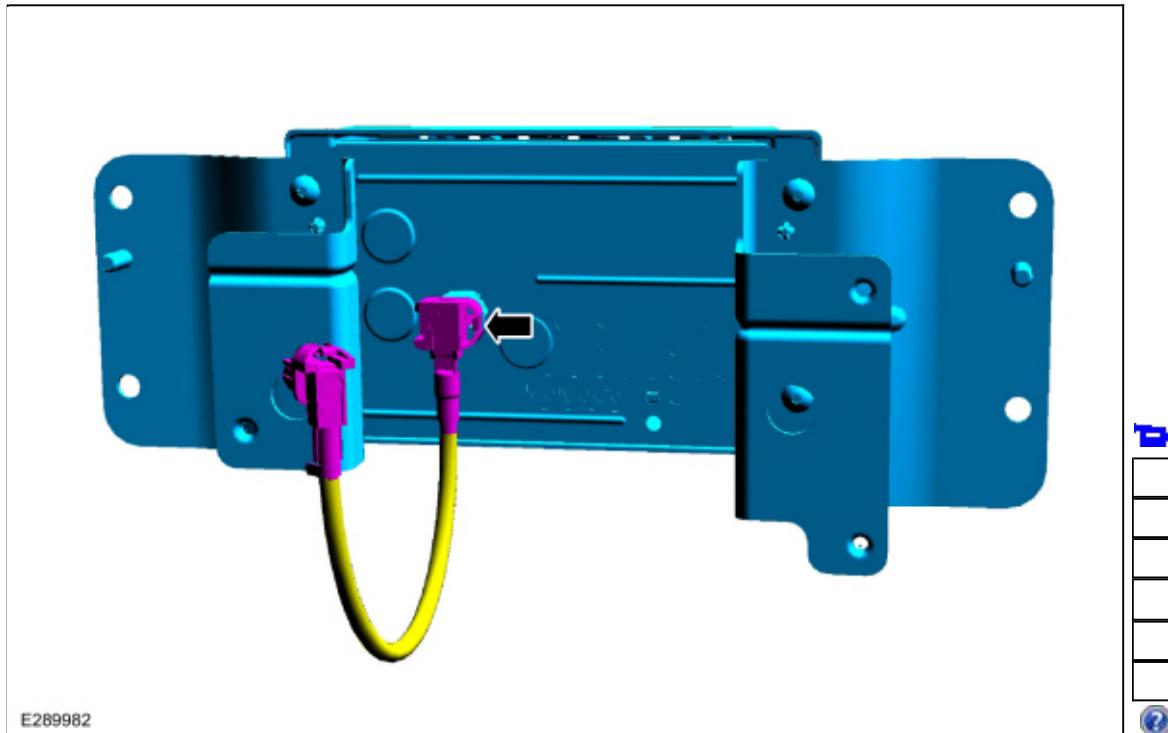

3. Remove the screws and FCDIM from the brackets.  
*Torque: 22 lb.in (2.5 Nm)*

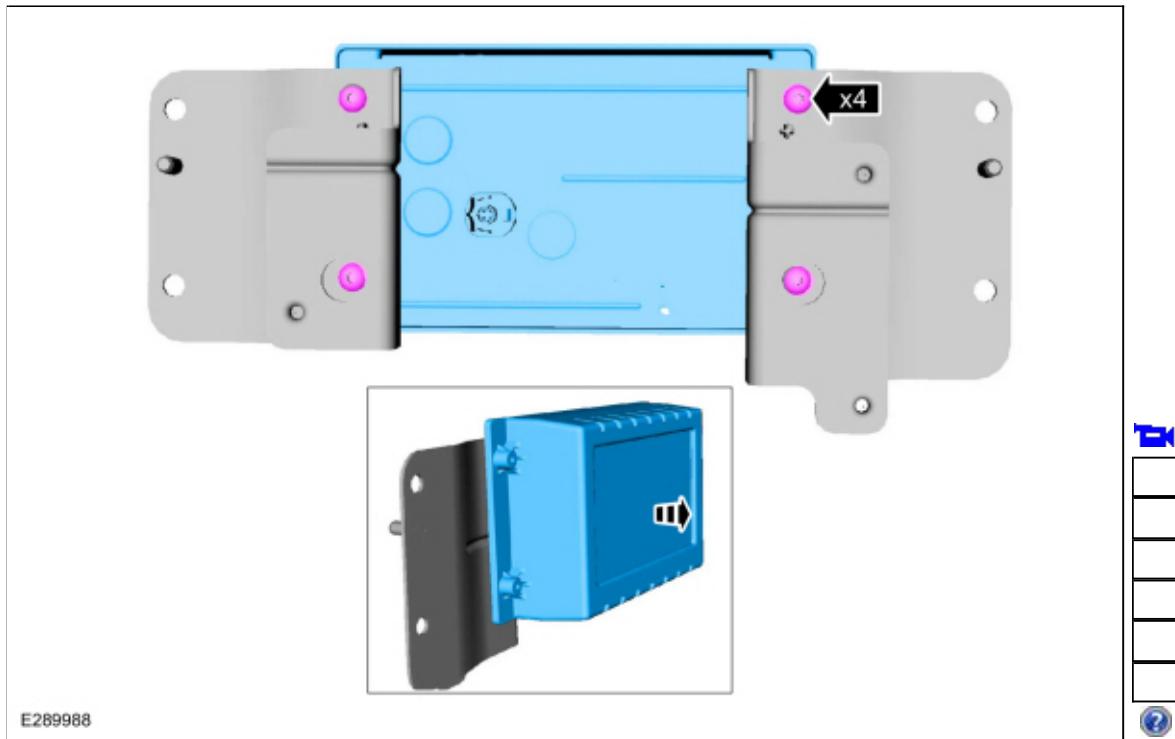

## Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

