


Front Display Interface Module (FDIM)

Removal


NOTE: Removal steps in this procedure may contain installation details.

1. **NOTE:** If installing a new module, it is necessary to upload the module configuration information to the scan tool prior to removing the module. This information must be downloaded into the new module after installation.
2. Refer to: [Front Controls Interface Module \(FCIM\)](#) (415-00B Information and Entertainment System - General Information - Vehicles With: SYNC 3, Removal and Installation).
3. **Torque:** 27 lb.in (3 Nm)

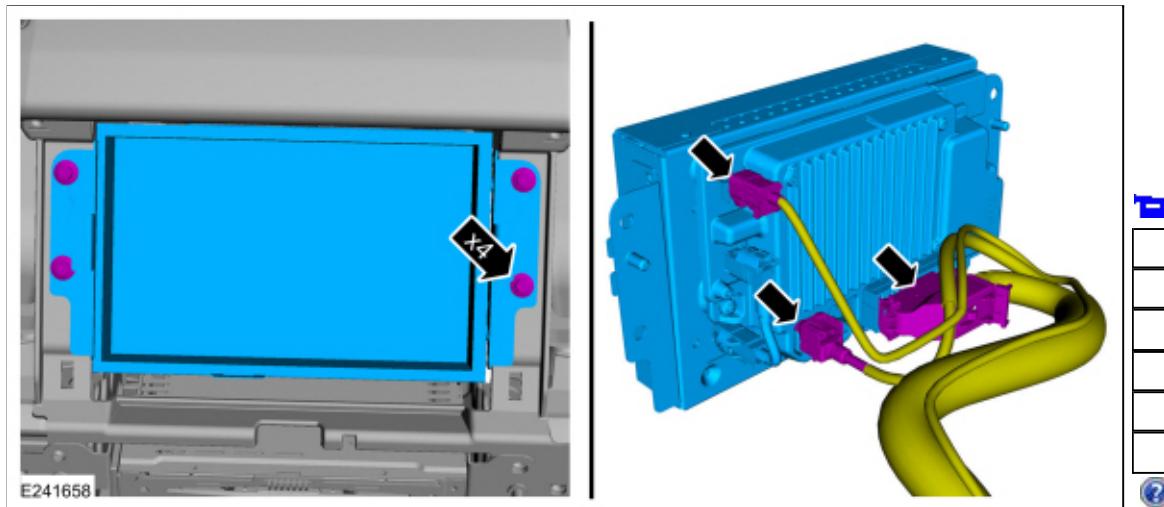

4.



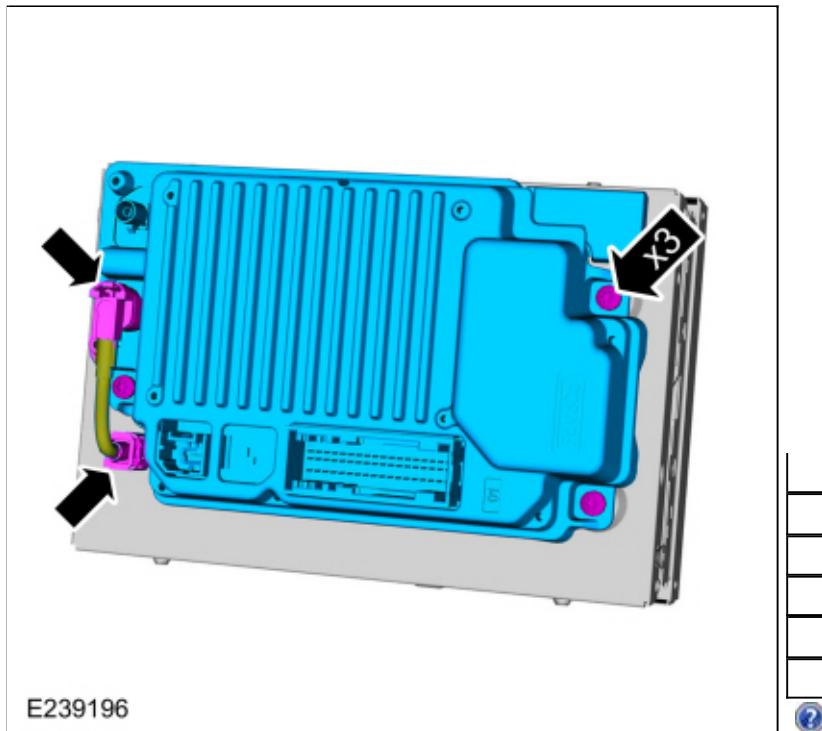

Installation

1. To install, reverse the removal procedure.
2. **NOTE:** *This step is only necessary if replacing the component.*

Using a diagnostic scan tool, complete the PMI process for the FCDIM following the on-screen instructions.

3. If a new APIM is being installed, program the APIM to the correct software level.
Refer to: SYNC Module [APIM] Programming (415-00 Information and Entertainment System - General Information - Vehicles With: AM/FM/CD/SYNC).

Copyright © 2019 Ford Motor Company

