



**Media Hub****Special Tool(s) / General Equipment****Interior Trim Remover****Removal****NOTE:** Removal steps in this procedure may contain installation details.

1. Refer to: [Health and Safety Precautions](#) (100-00 General Information, Description and Operation).
- 2.


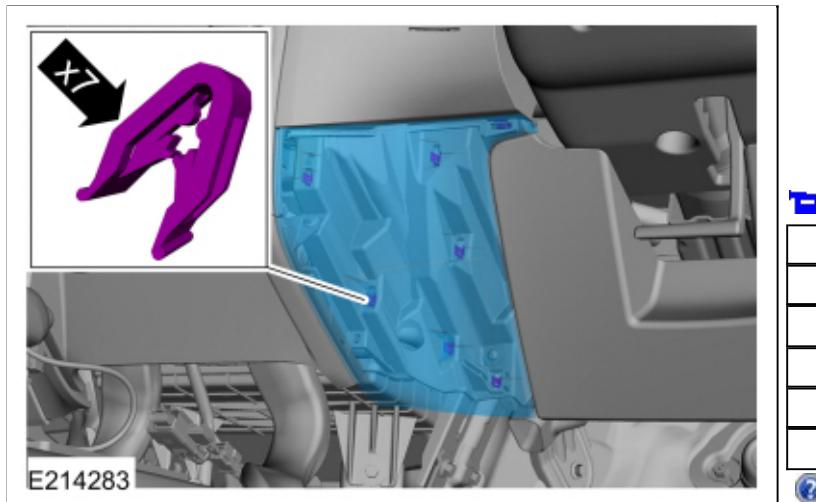


- 3.



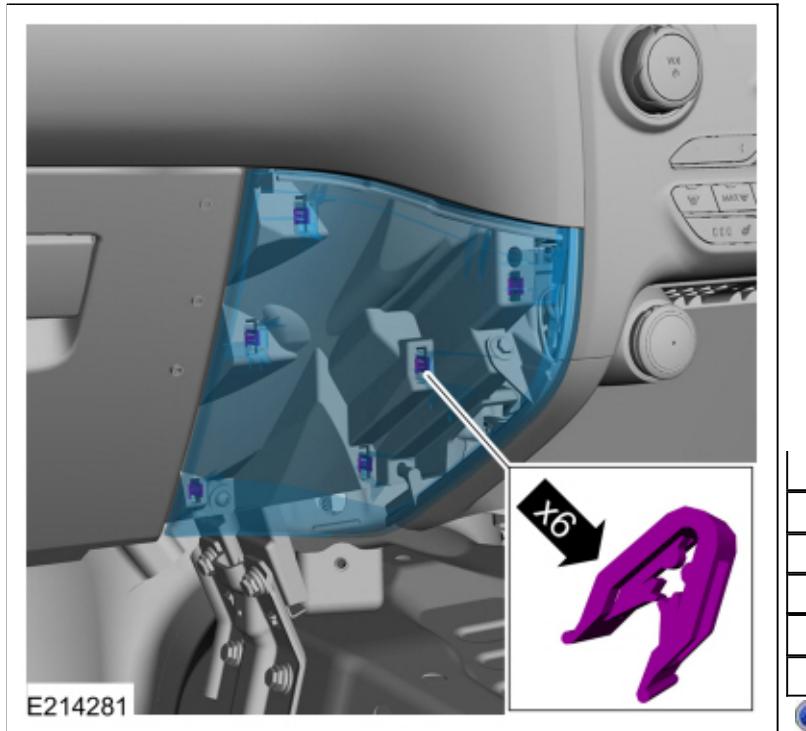

 
4.

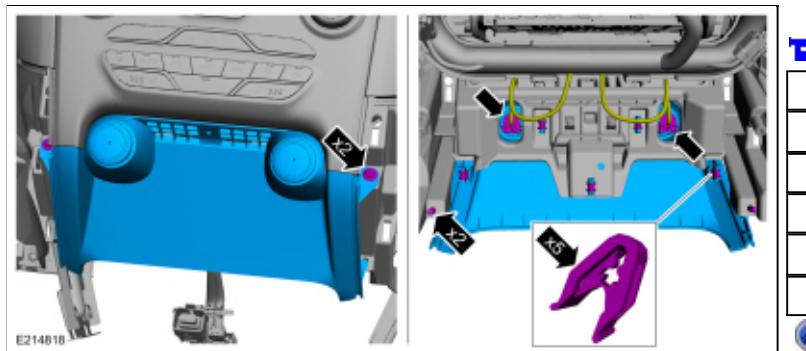


#### 6-Speed Manual Transmission - MT82

5. Refer to: Gearshift Lever Boot (308-06 Manual Transmission External Controls - 6-Speed Manual Transmission - MT82) .

 
6.



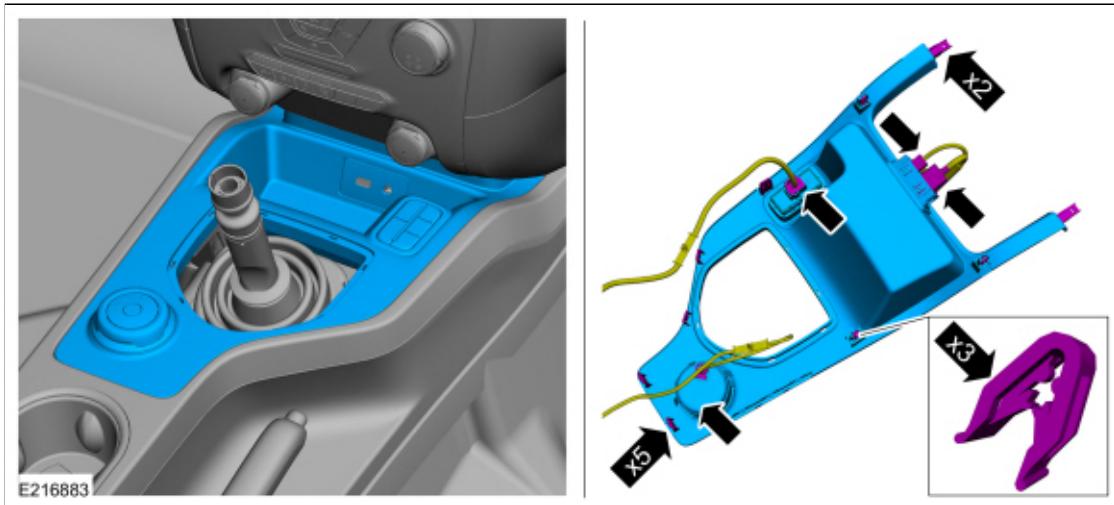


#### 6-Speed Automatic Transmission - 6R80

7.

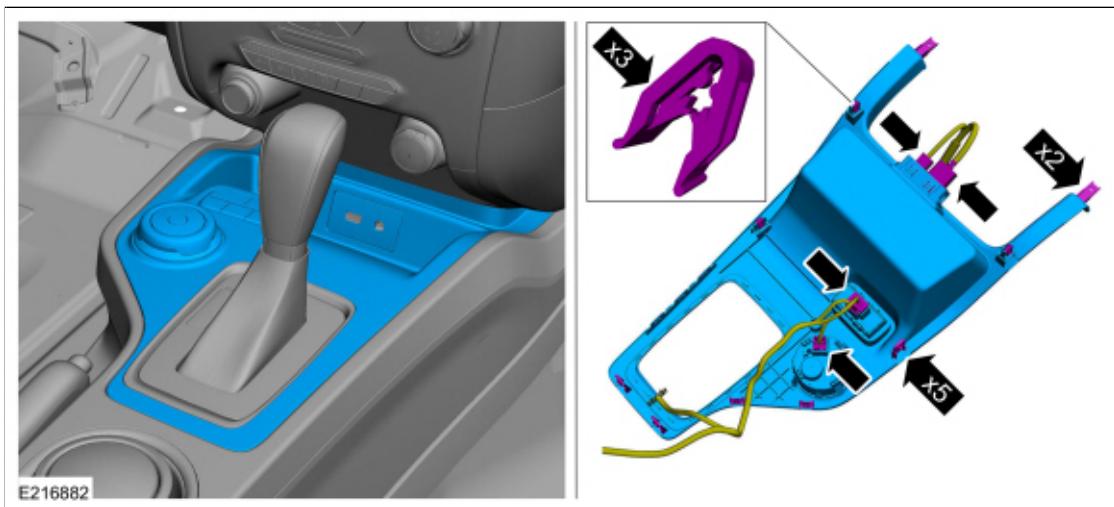

#### All vehicles

8. Use the General Equipment: Interior Trim Remover

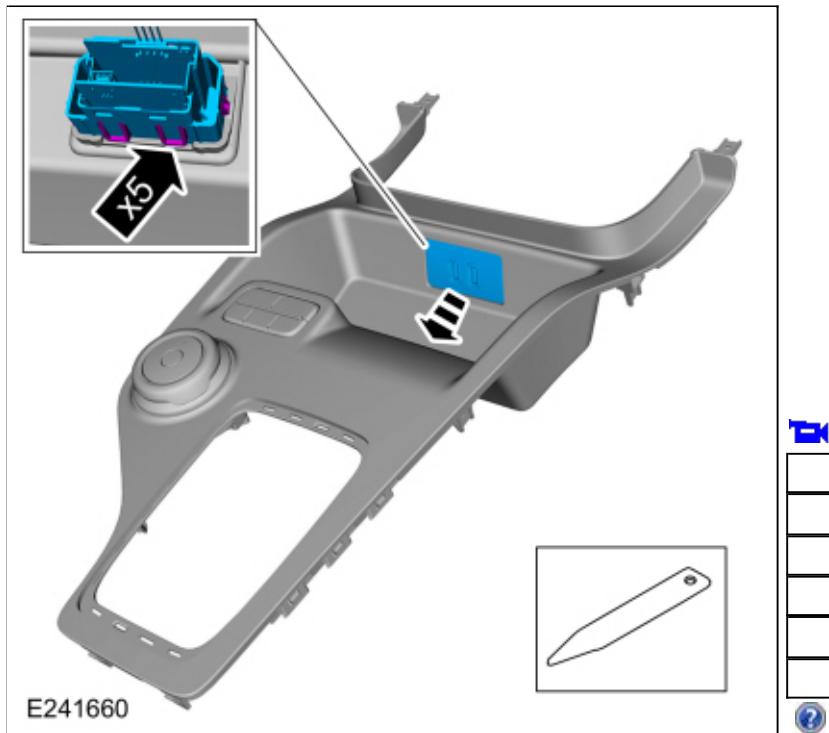

## Installation

1. To install, reverse the removal procedure.

Copyright © 2019 Ford Motor Company

